


**ASSEMBLY INSTRUCTIONS**  
**ITEM NO: IPHT7418DRPC**  
**DESCRIPTION: 74" CONSOLE**  
**-CARTER PINE**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

**STEP 1**

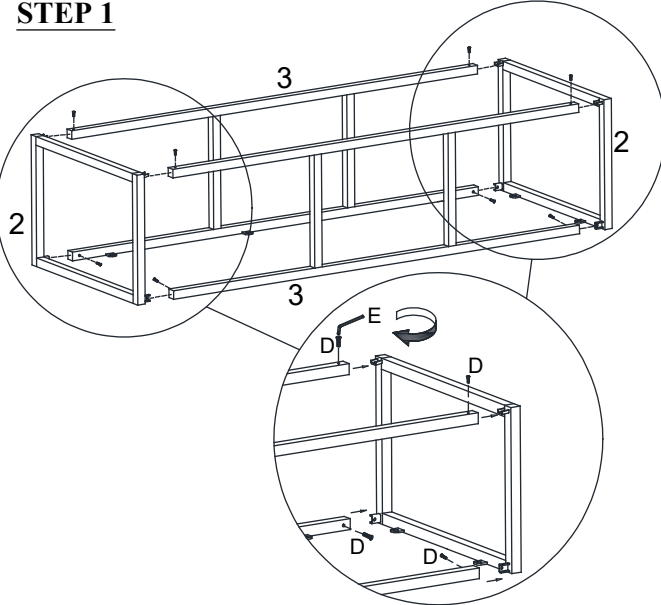

**TOOL REQUIRED (NOT PROVIDED):**  
**PHILLIPS SCREW DRIVER**



**PARTS LIST**


No.	Description	Sketch	Q'ty
1	Cabinet		1 PC
2	Leg Frame		2 PCS
3	Front & Back Frame		2 PCS

**HARDWARE LIST**



No.	Description	Sketch	Size	Q'ty
A	JCBC Bolt		Ø ¼" x 15mm	10 PCS
B	Spring Washer		Ø 9.5 x Ø12mm	10 PCS
C	Flat Washer		Ø 9.5 x Ø12mm	10 PCS
D	Counter- Sink Bolt		Ø ¼" x 15mm	8 PCS
E	Allen Key		M4	1 PC
F	Straight Allen Key		M4	1 PC
G	Furniture Tipping Restraint			2 SETS

Note: 1.Straight Allen Key ( F ) is for use with a power drill.  
 2.Don't tighten all bolts until the end of Step 2.

**STEP 2**

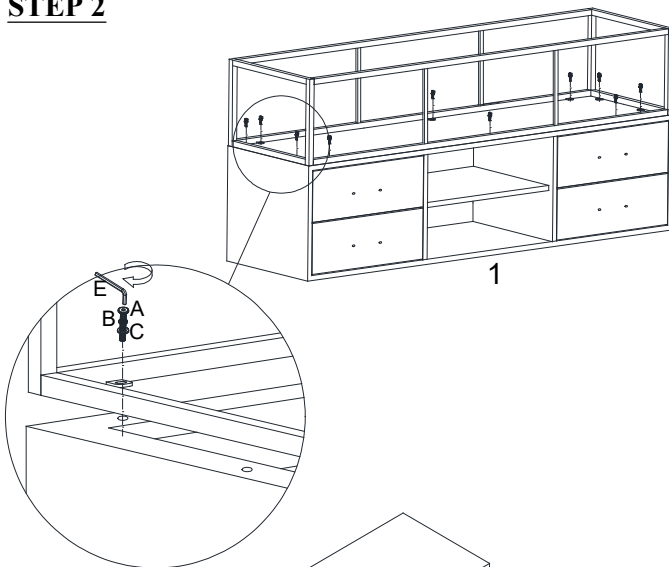

**STEP 3**

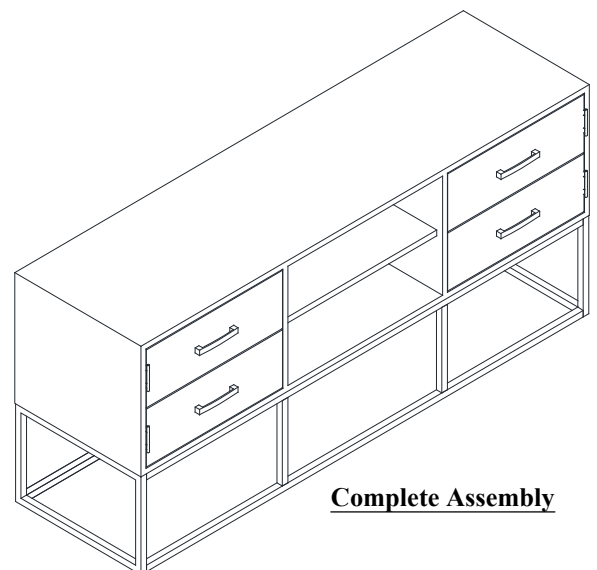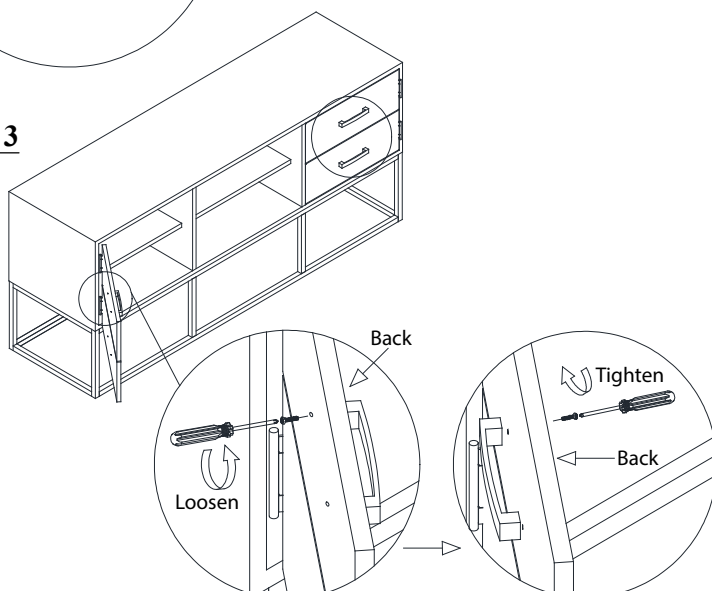

**Complete Assembly**