 


ASSEMBLY INSTRUCTIONS

ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

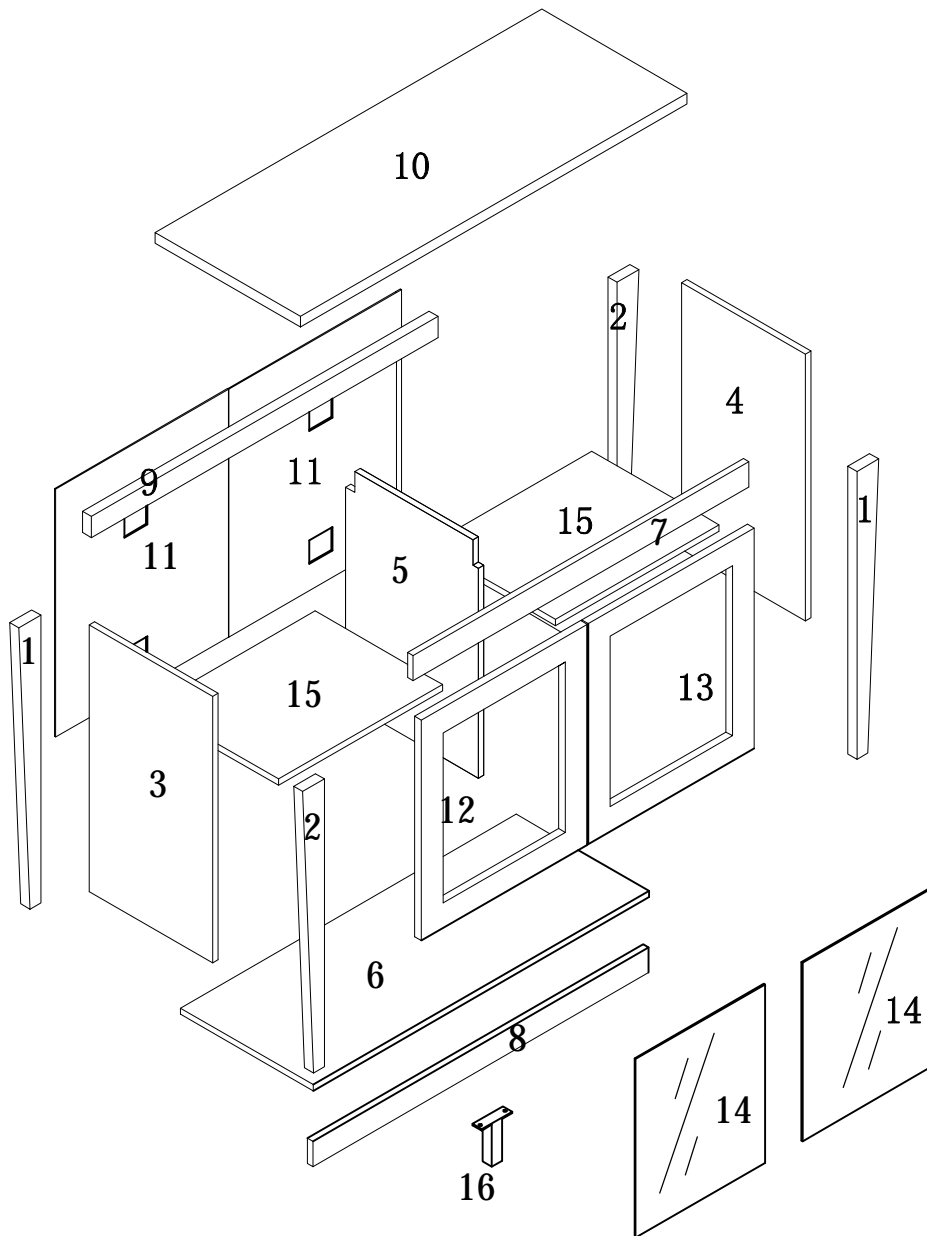






 
 
 










ASSEMBLY INSTRUCTIONS






  
 


 

 









ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER


PARTS LIST

NO	DESCRIPTION	PICTURE	QTY
1	RIGHT FRONT & LEFT BACK LEG		2 pcs
2	LEFT FRONT & RIGHT BACK LEG		2 pcs
3	LEFT SIDE PANEL		1 pc
4	RIGHT SIDE PANEL		1 pc
5	MIDDLE PARTITIONAL PANEL		1 pc
6	BOTTOM PANEL		1 pc
7	FRONT SLAT		1 pc
8	BOTTOM SLAT		1 pc
9	REAR SLAT		1 pc
10	TOP		1 pc
11	BACK PANEL		2 pcs
12	LEFTDOOR FRAME		1 pc
13	RIGHT DOOR FRAME		1 pc
14	GLASS DOOR		2 pcs
15	SHELF		2 pcs
16	IRON LEG		1 pc

    HARDWARE LIST

NO	DESCRIPTION	PICTURE	SIZE	QTY
A	SCREW		Ø3.5x12	8pcs
B	GLASS CLIP			8pcs
C	STICKER		Ø18	11pcs
D	NAIL		Z1016	28pcs
E	SHELF PIN		Ø5	8pcs
F	HANDLE BOLT WITH WASHER		Ø4x25	4sets
G	HANDLE		64#	2pcs
H	CAMLOCK SCREW		L29	22pcs
I	CAMLOCK		Ø15	22pcs
J	SCREW		Ø4x16	16pcs
K	DOWEL		Ø8x25	20pcs
L	SCREW		Ø4x40	5pcs
M	CONCEALED HINGE			4pcs
N	TACK GLIDE		Ø16	4pcs
O	STRAP		197×5×1	1pc
P	METAL BRACKETS		12×12×1	2pcs
Q	PANHEAD SCREW		Ø4×25	1pc
R	PANHEAD SCREW		Ø5×40	1pc
S	ANCHOR		Ø8×40	1pc
T	GLUE		Glue: For securing please apply to wood dowel first before inserting into panel	1pc
U	FLATHEAD BOLT		M6x12	2pcs

 TOOLS REQUIRED (NOT PROVIDED)



Phillips screwdriver

 


ASSEMBLY INSTRUCTIONS


ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER


STEP 1

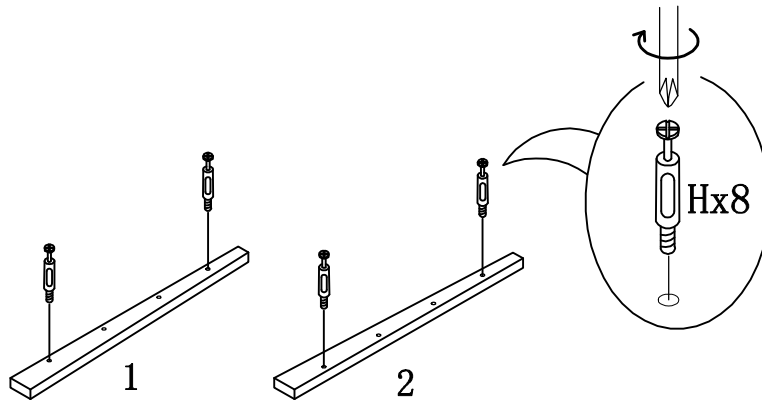

 STEP 2

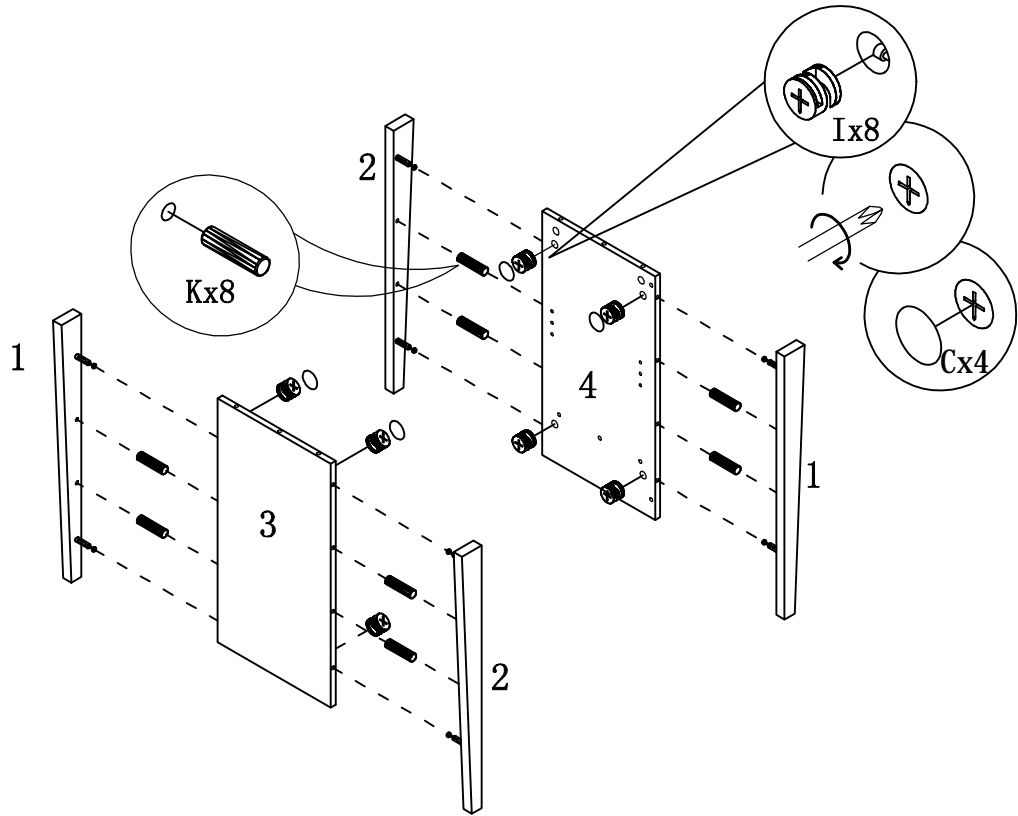

 STEP 3

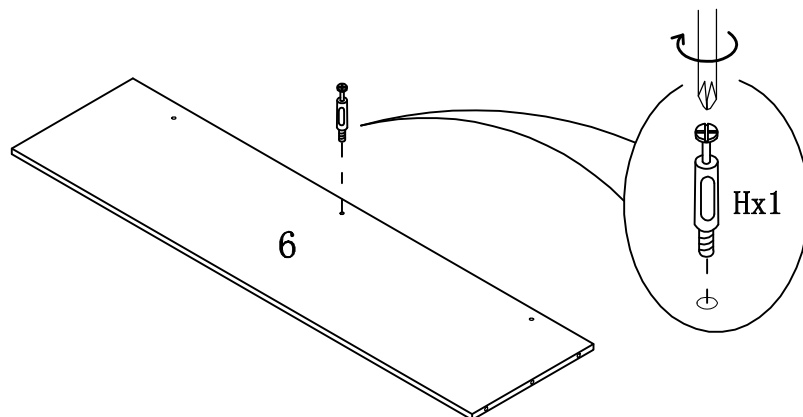




ASSEMBLY INSTRUCTIONS


ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER

 
STEP 4

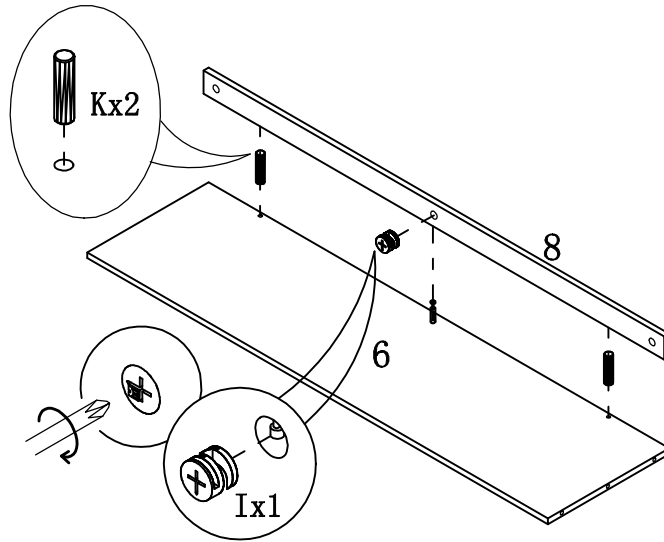

 STEP 5

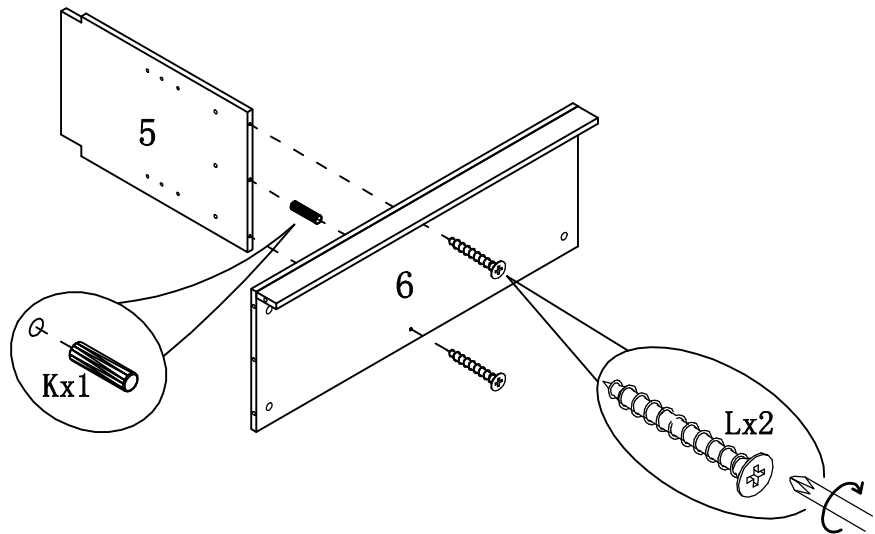

 STEP 6

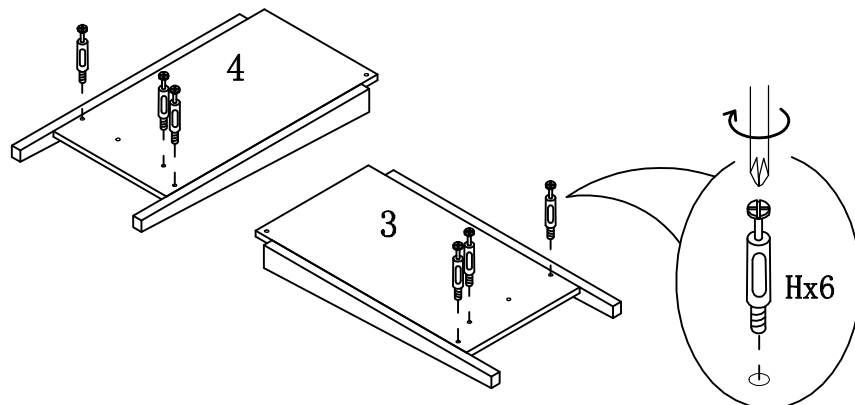


ASSEMBLY INSTRUCTIONS


ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER

 
STEP 7

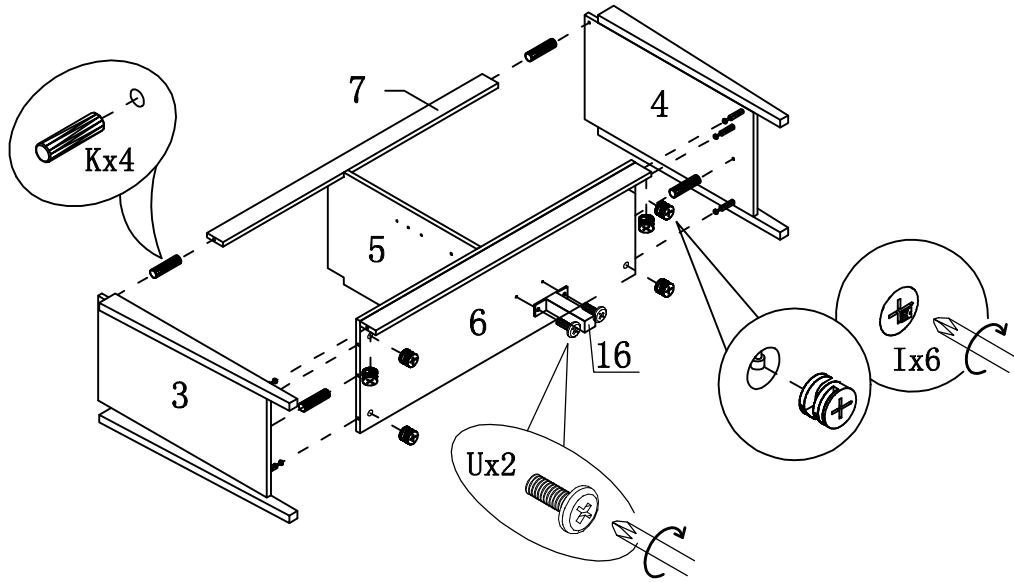

 STEP 8

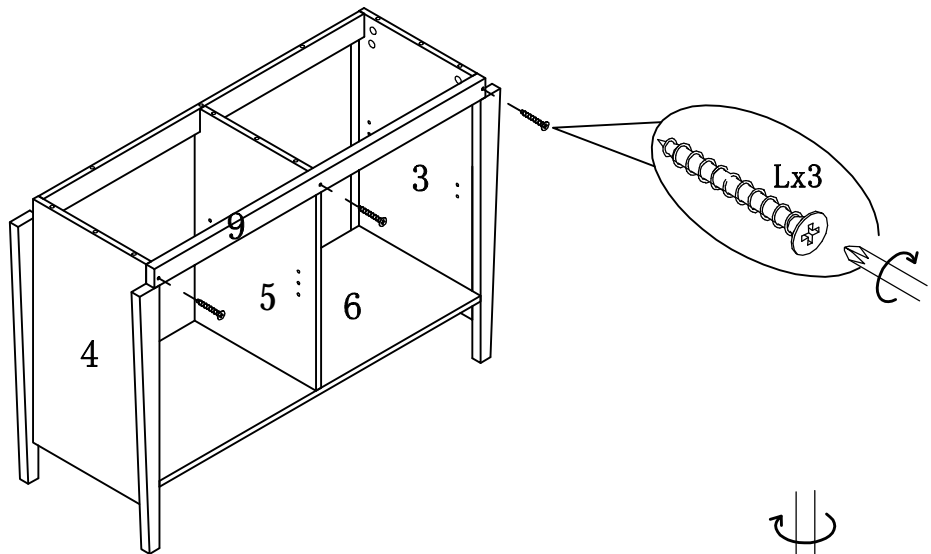

 STEP 9

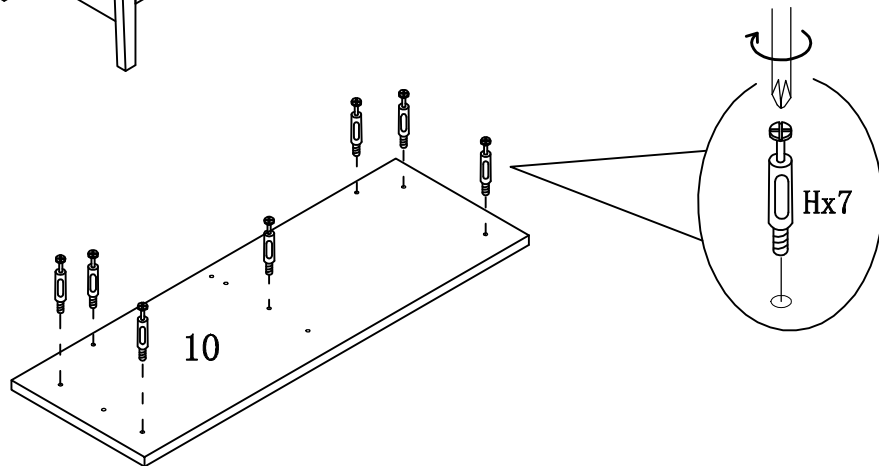




ASSEMBLY INSTRUCTIONS


ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER

 STEP 10

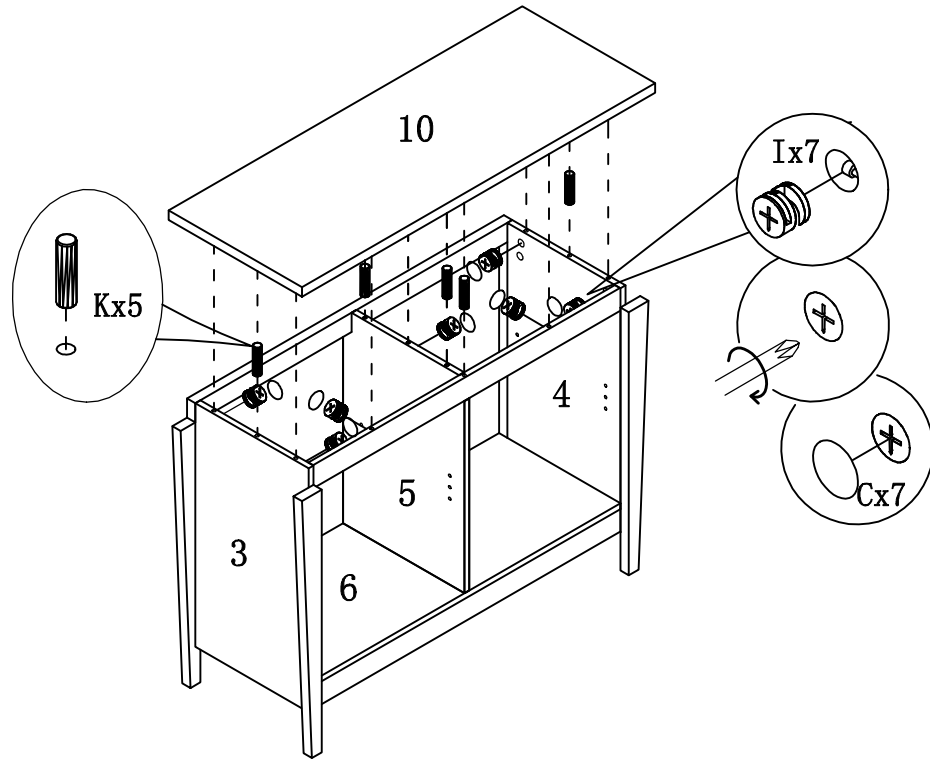


 STEP 11

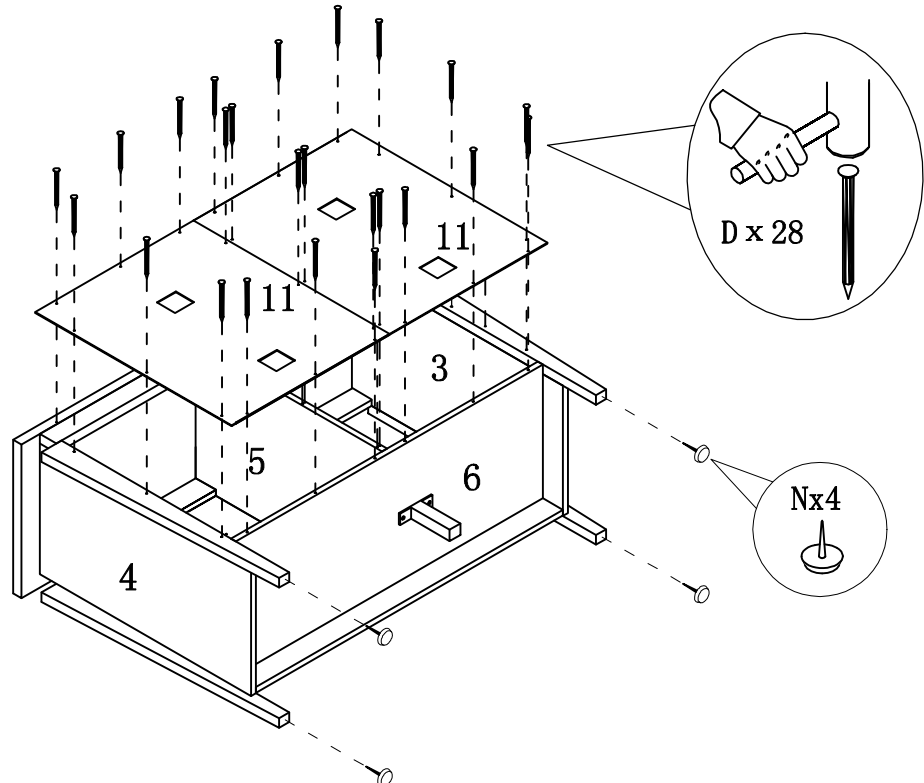




 
STEP 12

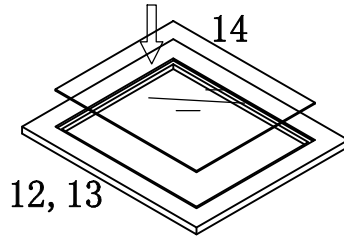

 STEP 13

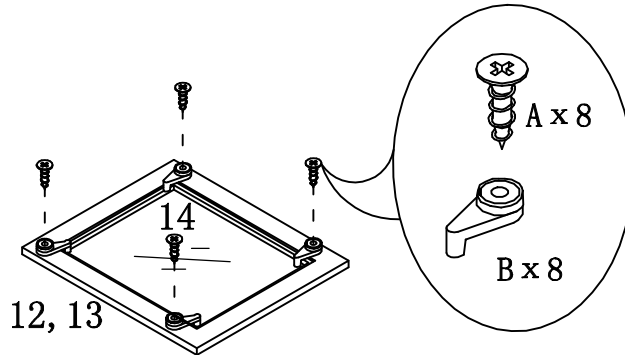

 STEP 14

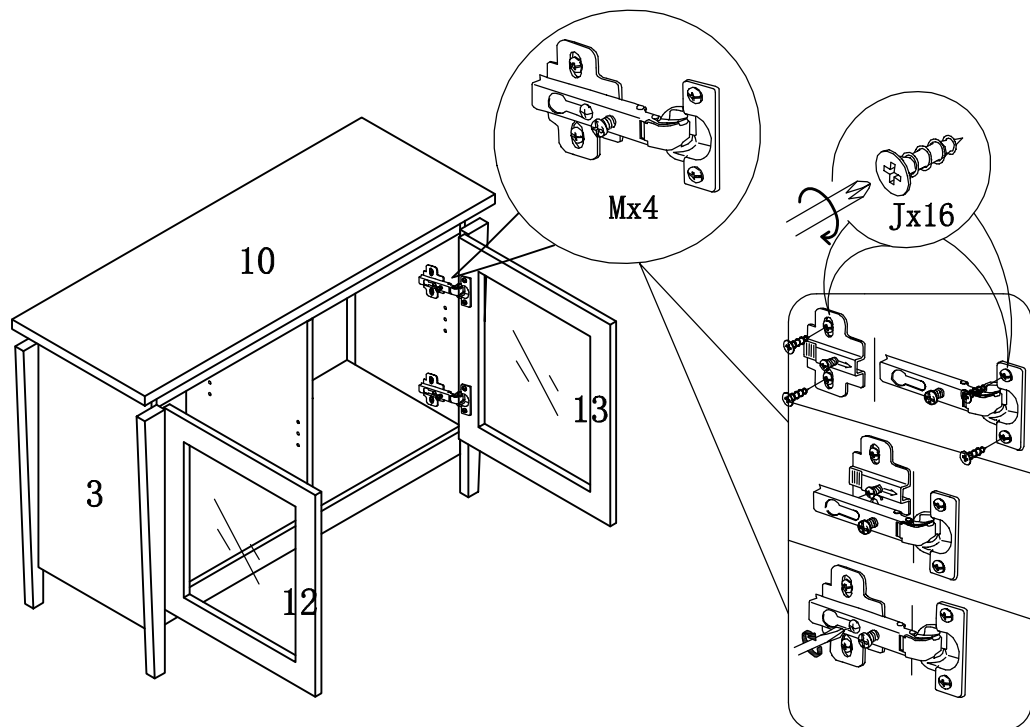




ASSEMBLY INSTRUCTIONS

ITEM NO: 29307-48

DESCRIPTION: 48" TV STAND-SABER

 STEP 15

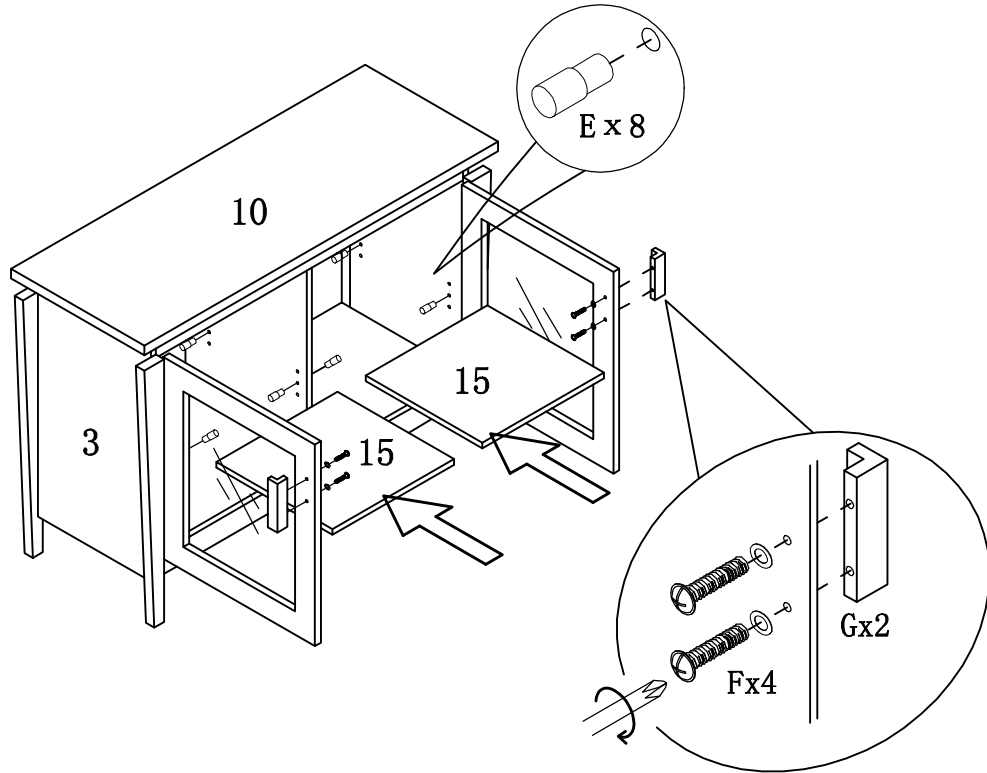

STEP 16

