 
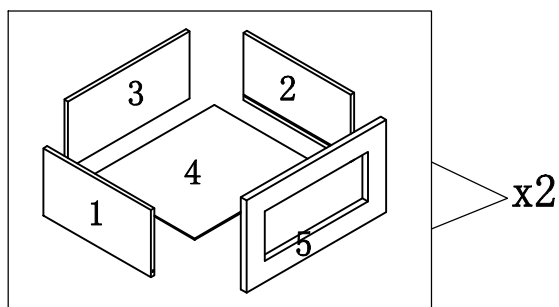 


ASSEMBLY INSTRUCTIONS

ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

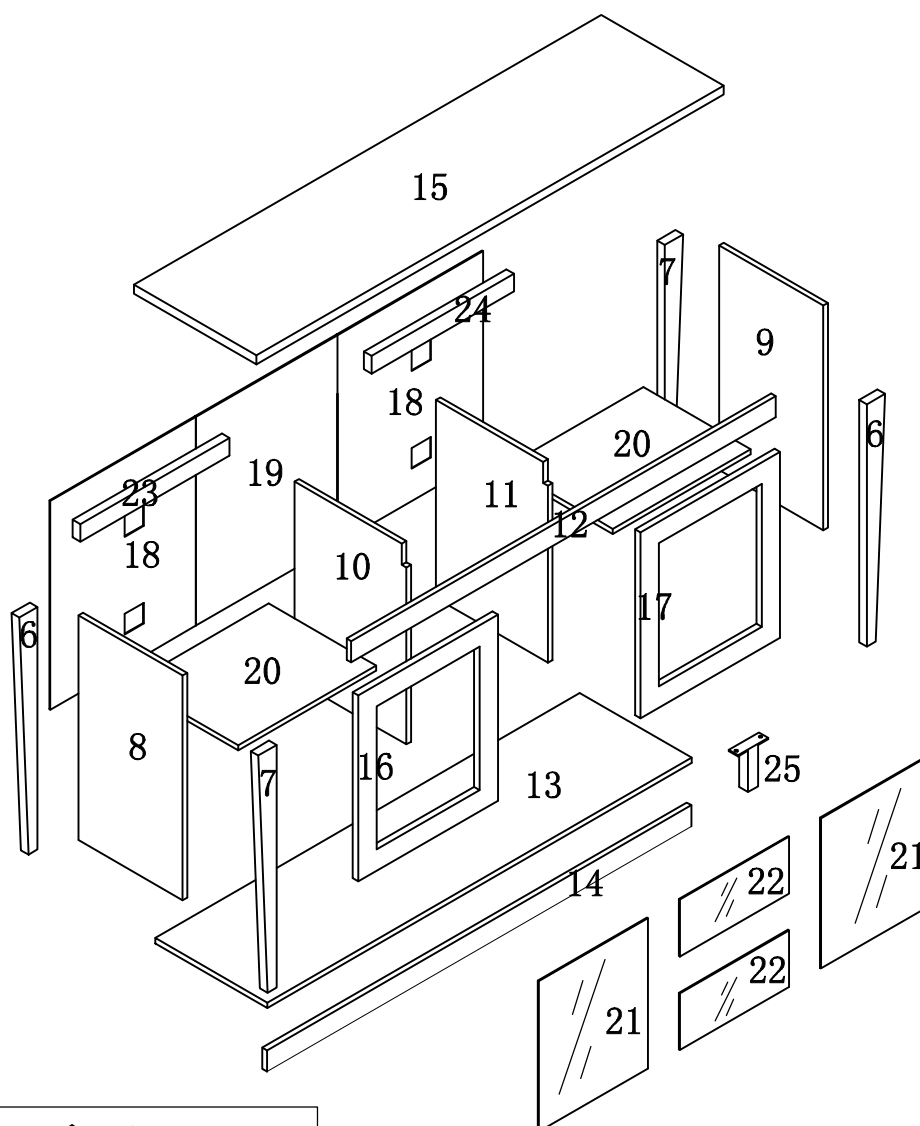



ASSEMBLY INSTRUCTIONS

ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

PARTS LIST






NO	DESCRIPTION	PICTURE	QTY
1	LEFT SIDE PANEL OF DRAWER		2 pcs
2	RIGHT SIDE PANEL OF DRAWER		2 pcs
3	REAR PANEL OF DRAWER		2 pcs
4	BOTTOM BOARD OF DRAWER		2 pcs
5	TOP PANEL OF DRAWER		2 pcs
6	RIGHT FRONT & LEFT BACK LEG		2 pcs
7	LEFT FRONT & RIGHT BACK LEG		2 pcs
8	LEFT SIDE PANEL		1 pc
9	RIGHT SIDE PANEL		1 pc
10	MIDDLE PARTITIONAL PANEL 1		1 pc
11	MIDDLE PARTITIONAL PANEL 2		1 pc
12	FRONT CROSS SLAT		1 pc
13	BOTTOM BASE		1 pc
14	BOTTOM SLAT		1 pc
15	TOP		1 pc
16	LEFT DOOR		1 pc
17	RIGHT DOOR		1 pc
18	BACK PANEL		2 pcs
19	BACK PANEL		1 pc
20	SHELF		2 pcs
21	GLASS DOOR		2 pcs
22	GLASS DRAWER		2 pcs
23	LEFT BACK CROSS SLAT		1 pc
24	RIGHT BACK CROSS SLAT		1 pc
25	IRON LEG		1 pc

ASSEMBLY INSTRUCTIONS


ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

     HARDWARE LIST

NO	DESCRIPTION	PICTURE	SIZE	QTY
A	SCREWS		ø3.5 x 12	16pcs
B	GLASS CLIP			16pcs
C	SCREWS		ø4 x 30	12pcs
D	CAMLOCK SCREWS		L20	8pcs
E	CAMLOCK		ø12	8pcs
F	HANDLE BOLT WITH WASHER		ø4x25	8 sets
G	HANDLE		64#	4pcs
H	CAMLOCK SCREWS		L29	22pcs
I	CAMLOCK		ø15	22pcs
J	PAPER STICKER		ø18	12pcs
K	DOWEL		ø8x25	24pcs
L	SCREWS		ø4x40	8pcs
M	NAIL		Z1016	36pcs
N	CONCEALED HINGES			4pcs
O	SCREWS		ø4 x 16	16pcs
P	SHELF PIN		ø5	8pcs
Q	DOWEL		ø6x30	4pcs
R	TACK GLIDE		ø16	4pcs
S	STRAP		197×5×1	1pc
T	METAL BRACKETS		12×12×1	2pcs
U	PANHEAD SCREW		Ø4×25	1pc
V	PANHEAD SCREW		Ø5×40	1pc
W	ANCHOR		Ø8×40	1pc
X	FLATHEAD SCREW		M6×12	2pcs
Y	GLUE		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

 TOOLS REQUIRED (NOT PROVIDED)






Phillips screwdriver

ASSEMBLY INSTRUCTIONS




ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

  
 
STEP 1

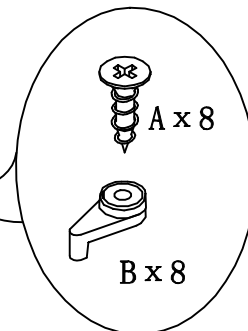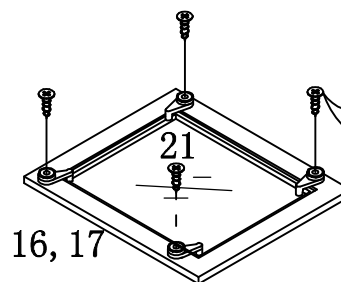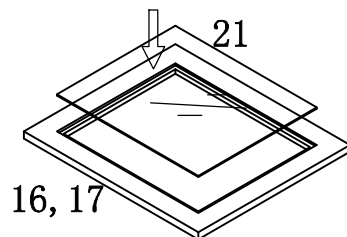

   STEP 2

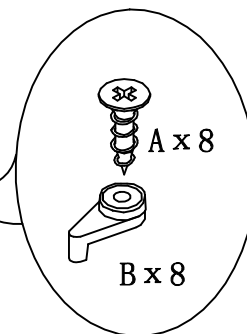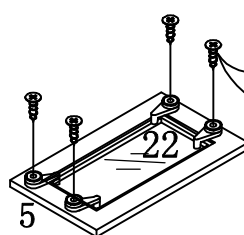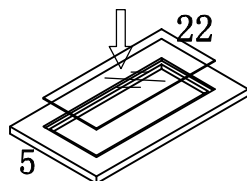

  STEP 3

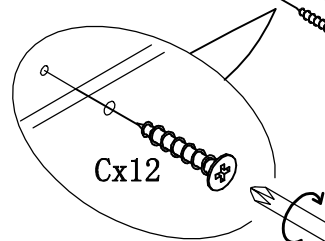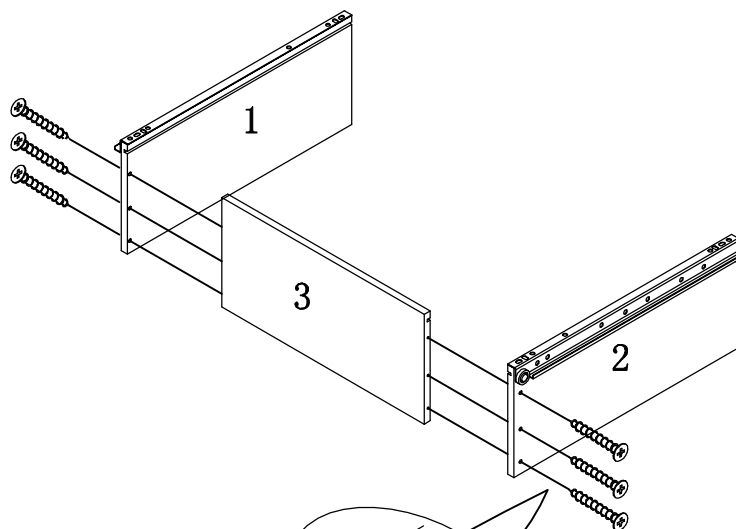




ASSEMBLY INSTRUCTIONS


ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

 
STEP 4

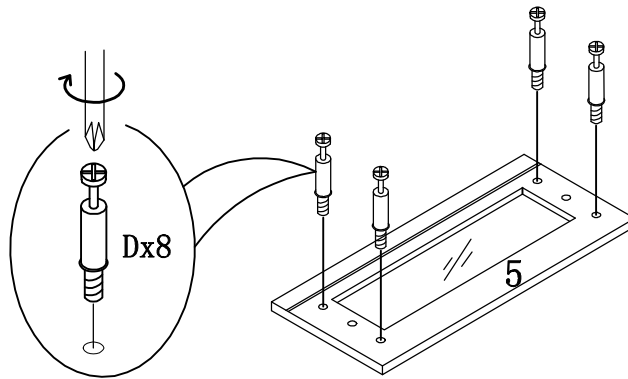

 STEP 5

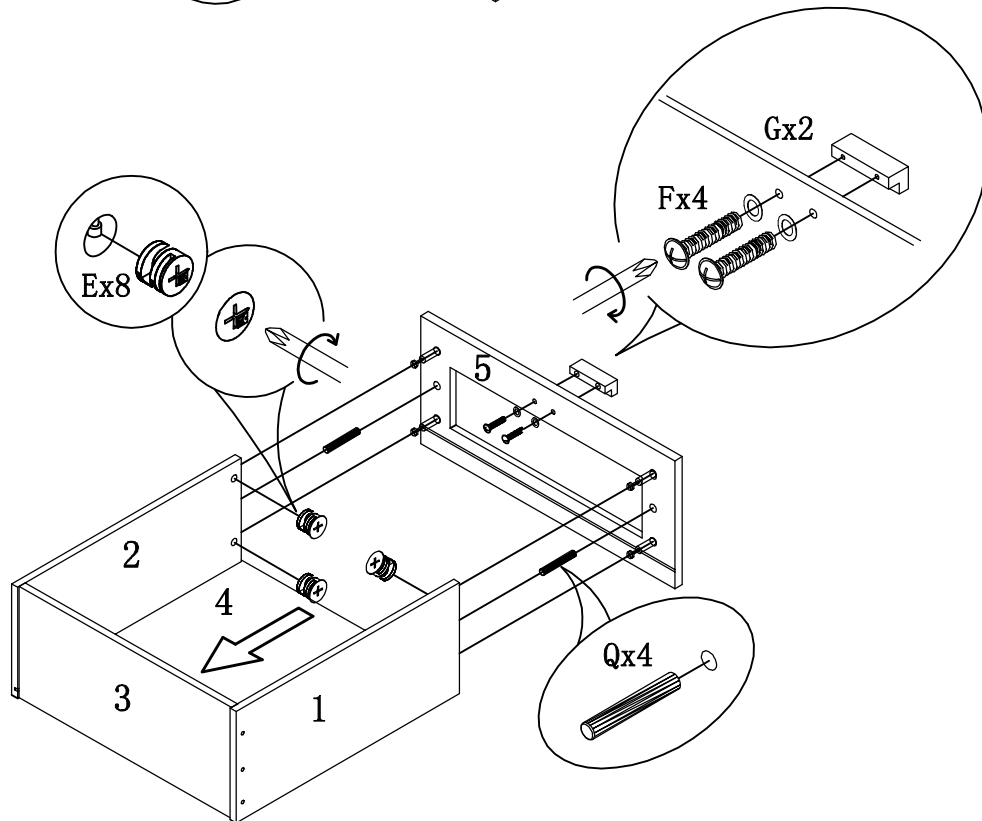

 STEP 6

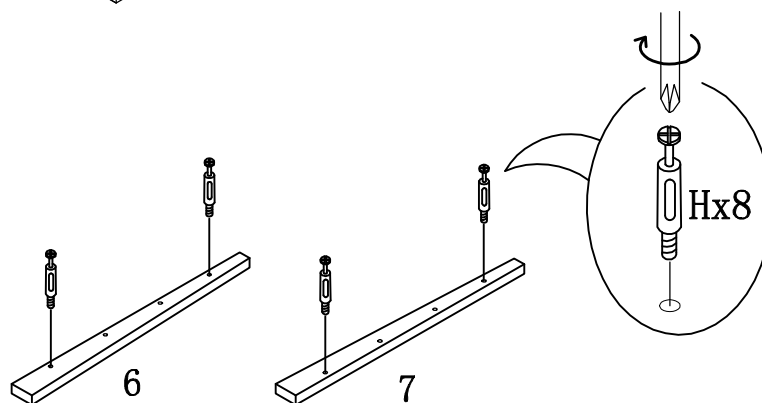


ASSEMBLY INSTRUCTIONS


ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

 
STEP 7

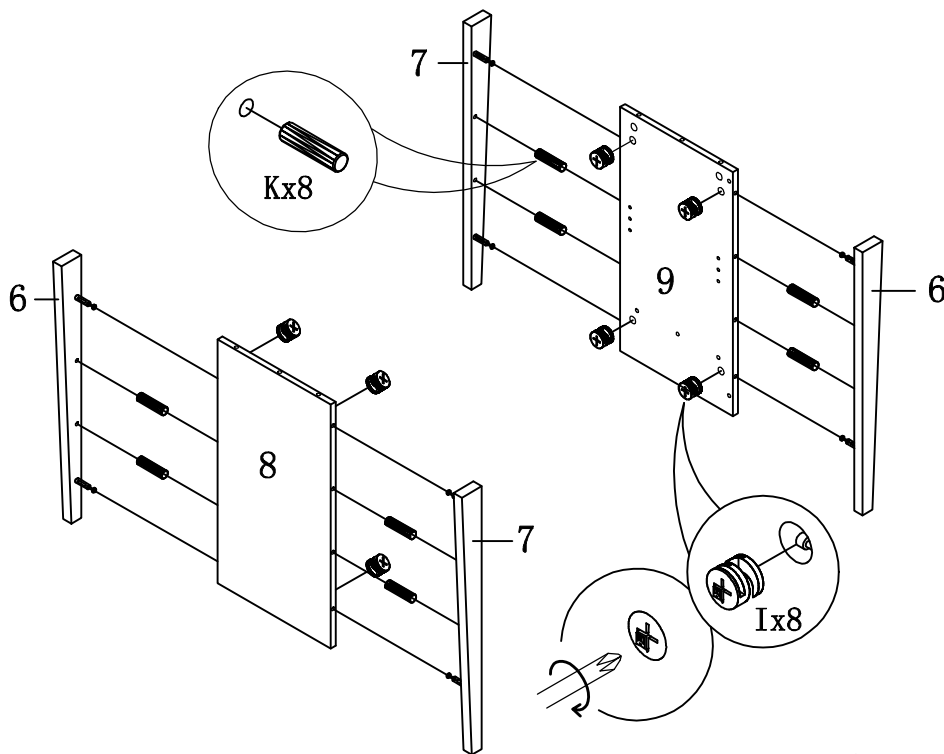

 STEP 8

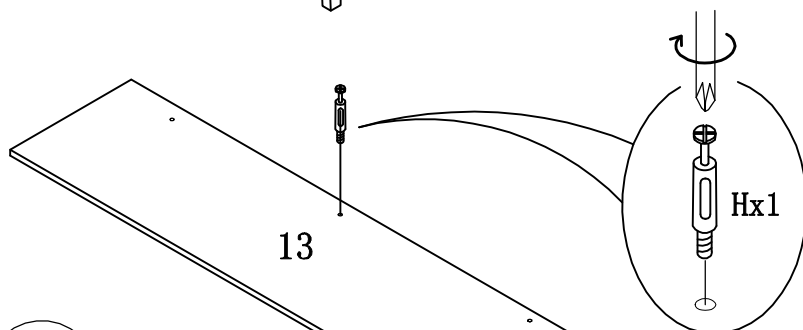

 STEP 9

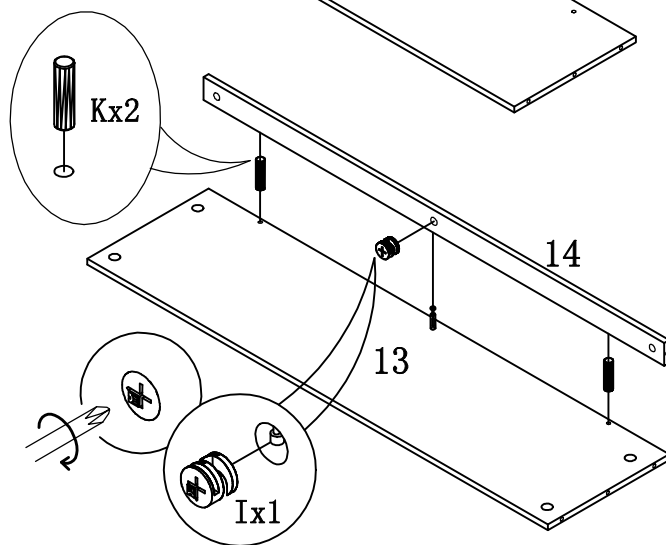


ASSEMBLY INSTRUCTIONS


ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

 
STEP 10

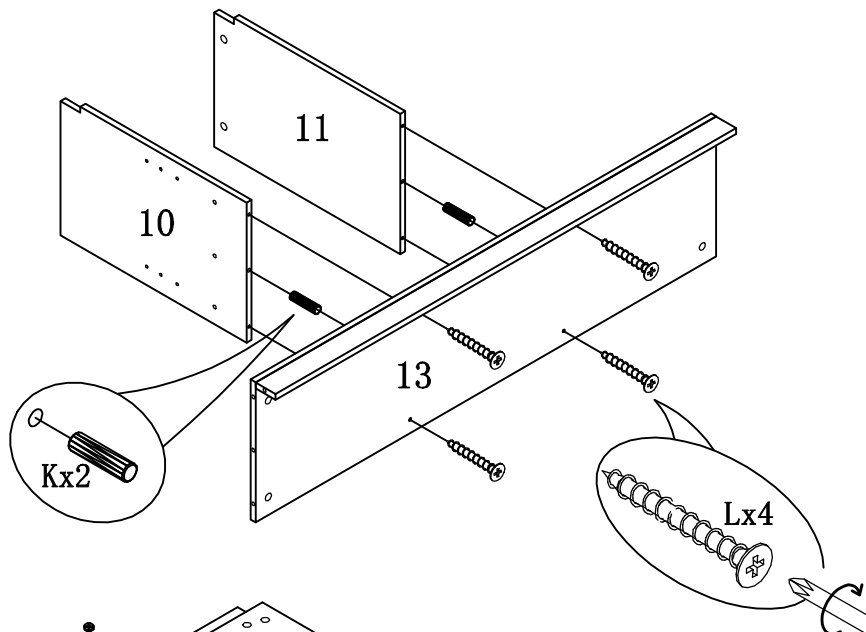

 STEP 11

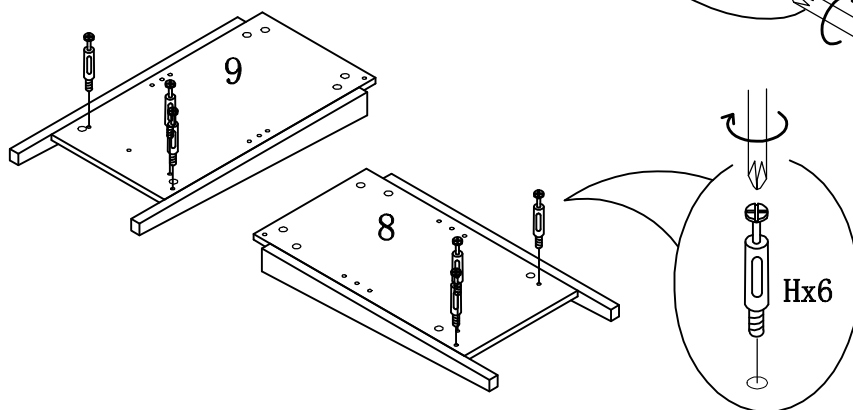

 STEP 12

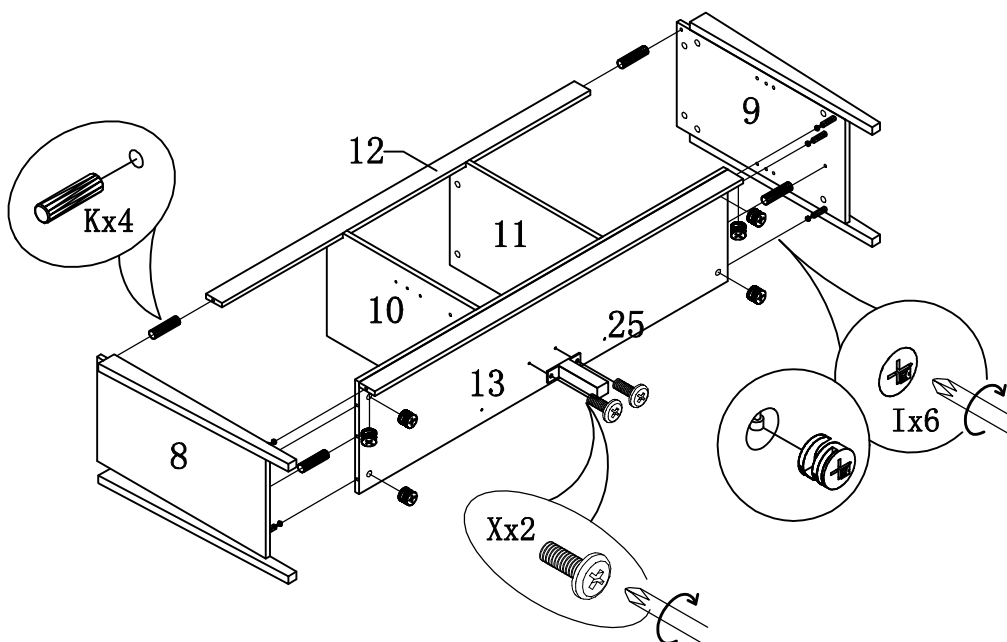


ASSEMBLY INSTRUCTIONS


ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

 
STEP 13

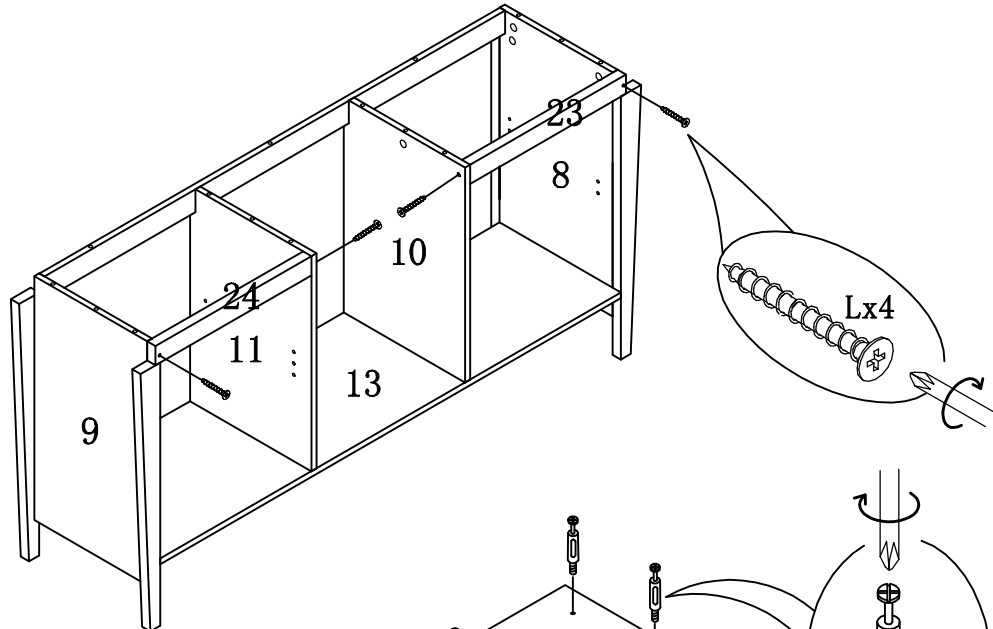

 STEP 14

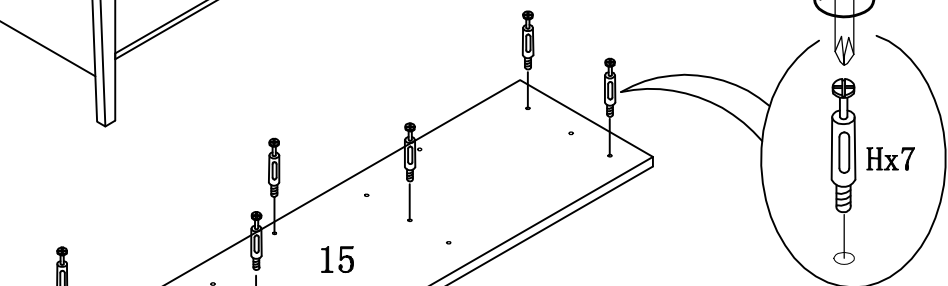

 STEP 15

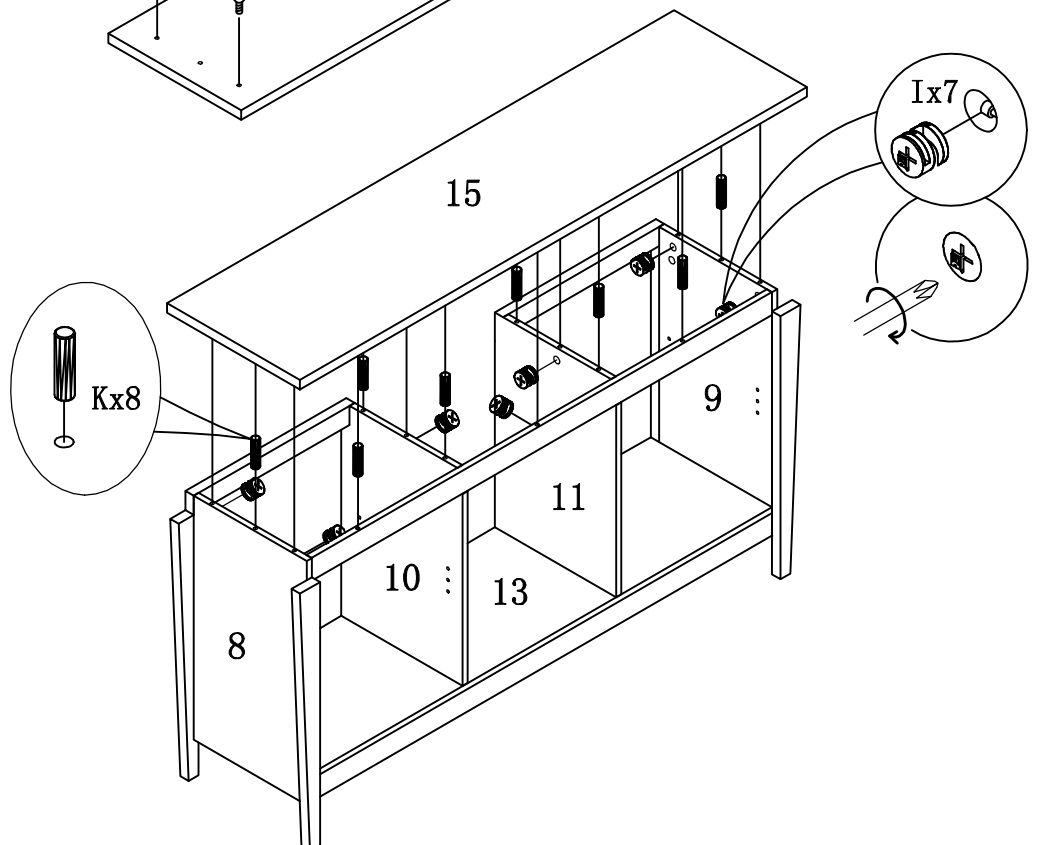


ASSEMBLY INSTRUCTIONS


ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

 STEP 16

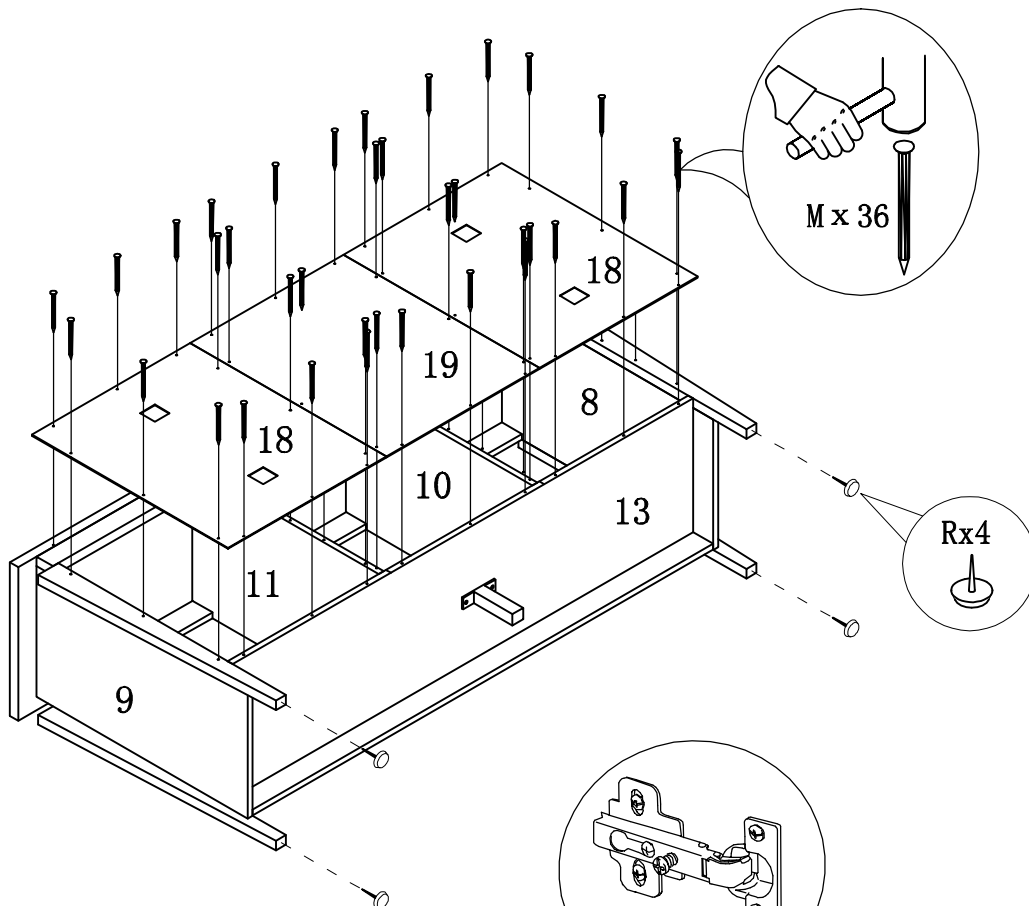

 STEP 17

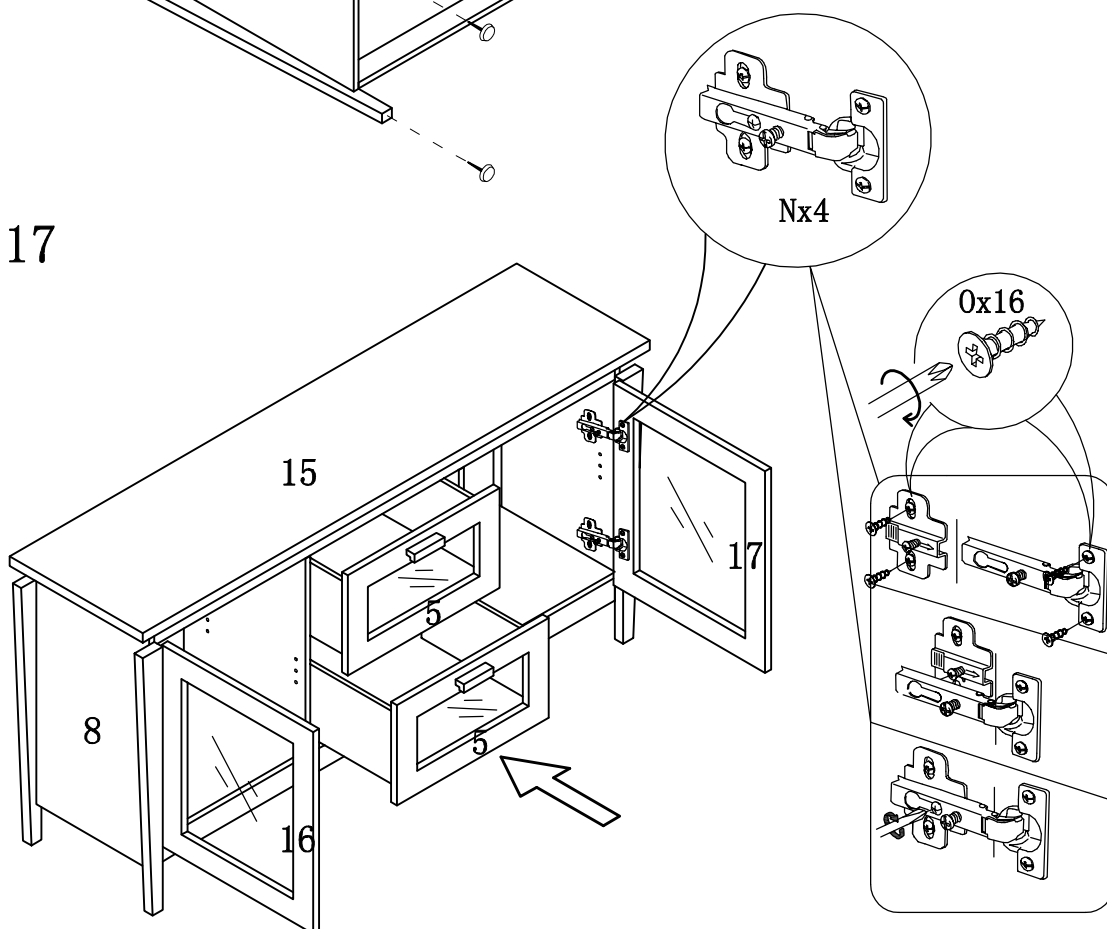


ASSEMBLY INSTRUCTIONS

ITEM NO: 29307

DESCRIPTION: 60" TV STAND-SABER

 STEP 18

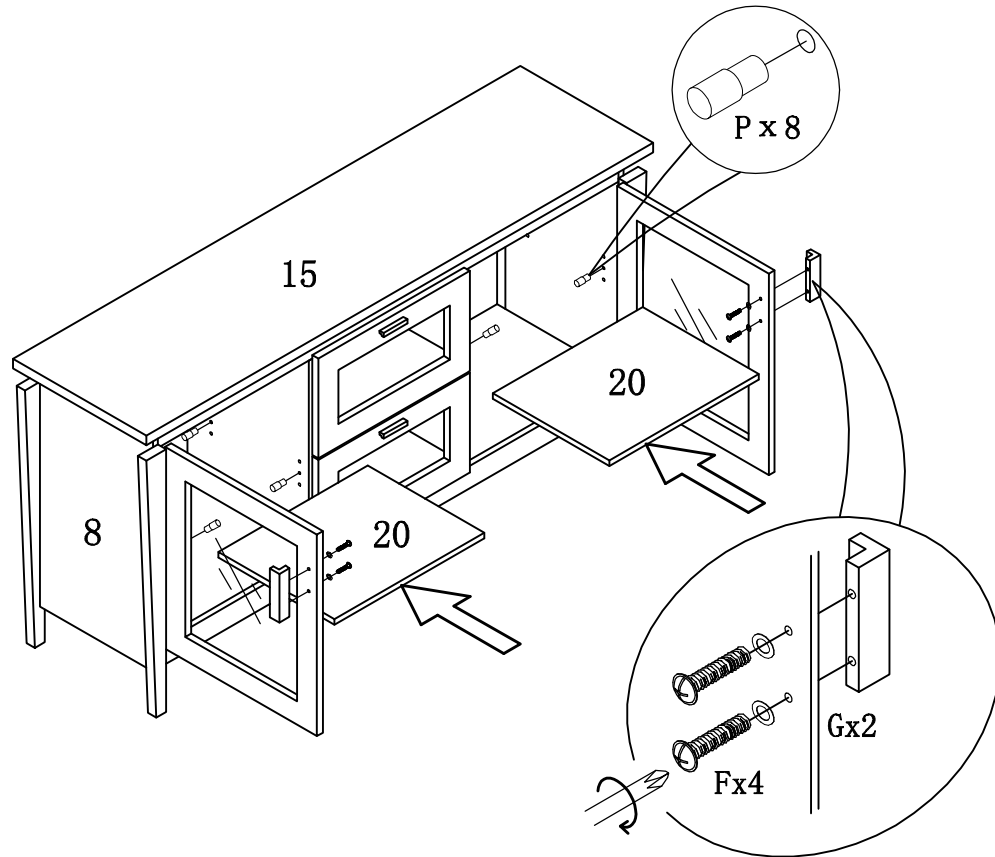

STEP 19

