

ASSEMBLY INSTRUCTIONS

 








 

 


ITEM NO :1408 NEWPORT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1 The Motion products are shipped KD and require the backs to be attached first.

 
TOOLS REQUIRED : NO TOOLS REQUIRED

PART LIST

NO	Description	Sketch	Quantity
A	LAF/RAF Body		1
B	LAF /RAF Back		1
C	Middle back		1
D	Middle body		1
E	Console back		1
F	Console body		1
G	Home Thtr console back		1
H	Home Thtr console body		1
I	RECLINER back		1
J	RECLINER body		1
K	Chaise back		1
L	Chaise body		1
M			
N			

 
**Step 2\*Position the back(B/C/E/G/I/K) of your recliner with the KD receiver positioned over the mechanism as pictured below .**

**\*Check to assure both sides of the mechanism are positioned inside of the KD receiver on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard.**

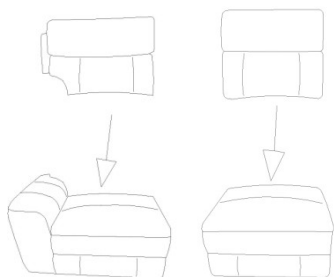

**Step 3: M is the power line for Mechanism, N is the power line for headrest, before plugging the power supply, please connect M and N.**

**After assembly is complete your product should look as seen below.**

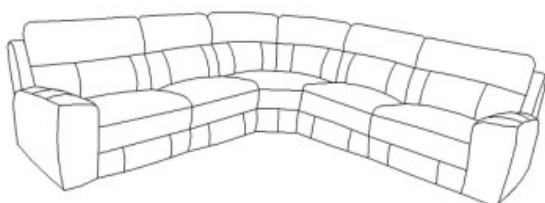 


**MADE IN VIETNAM**

# Operating Instructions for Styles Newport

( 1408 )

Caution: Read the Important instructions below before operating your power mechanized equipment

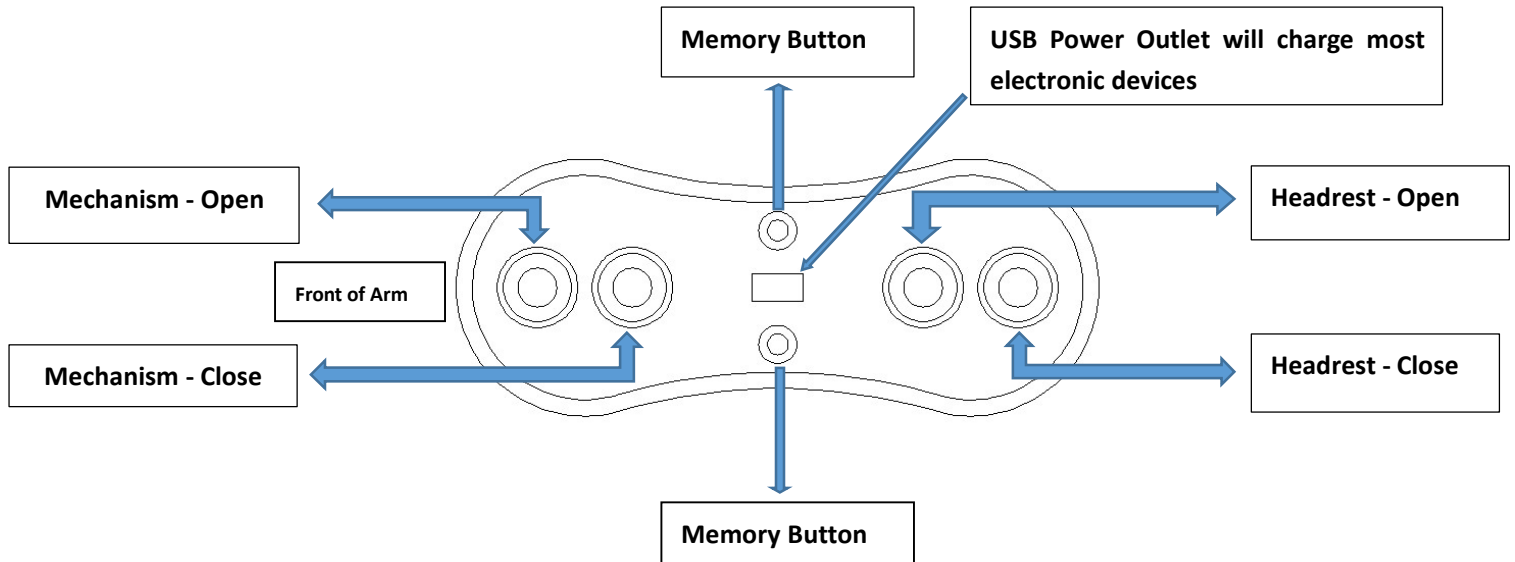

Care should always be taken to assure there is nothing in the path of the mechanism before and during operation

## Open and Close Buttons

The open and close buttons will operate the function noted above by simply touching the button. To stop the mechanism in your desired location simply remove your finger from the button

## Memory Buttons

The memory buttons can be used to set your favorite reclining position or can be set as home / close completely. This function is done by positioning the power recliner in your favorite position, press on one of the memory buttons for approximately 5 seconds or until you see a flashing light. To set a memory button for return to home, make sure the power recliner and power headrest are completely closed, press on one of the memory buttons for approximately 5 seconds or until you see a flashing light

Memory buttons once they are touched and the mechanism(s) begin to move to their pre-set position can be stopped at any time during the cycle simply by touching the memory button again