



ASSEMBLY INSTRUCTIONS

 
 


ITEM NO:







64041 74-IN TV CONSOLE - SAYBROOK UMBER

64141 74-IN TV CONSOLE - SAYBROOK GRAY

64241 74-IN TV CONSOLE - SAYBROOK SANDSTONE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED)			
Philip Screw Driver			
			
PARTS LIST:			
No.	Description	Sketch	Quantity
A	74-In Tv Console		1 pc
B	Legs		4 pcs
C	Support Leg		2 pcs

HARDWARE LIST:				
No.	Description	Sketch	Size	Quantity
D	Allen Head Bolt		M5/16"-18 x 2"	8 pcs
E	Spring Washer		5/16"	8 pcs
F	Flat Washer		5/16"	8 pcs
G	Allen Wrench		5mm	1 pc
H	Straight Allen Wrench		5mm	1 pc
I	Furniture Tipping Restraint			2 Set

To prevent possible scratches and damage, this furniture should be assembled by two people on a soft surface such as a blanket or carpet.

Note: If the straight Wrench (H) is used in a power drill, use care to not overtighten Bolts and possibly damage parts.

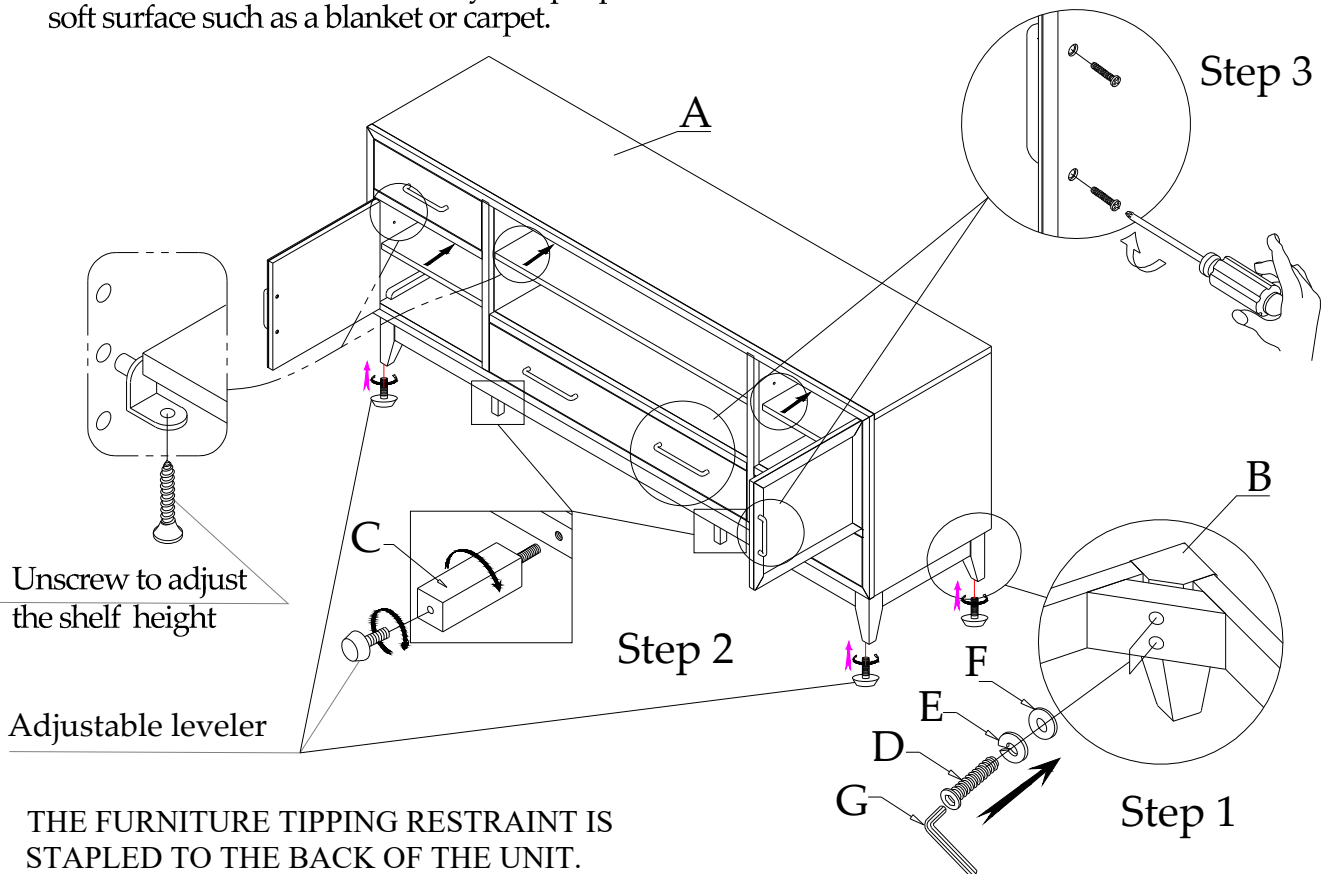

Step 1: Place the TV Console on its back. Assemble the legs (B) to the TV Console by using the 2" Allen Head Bolts (D), Spring Washers (E) and Flat Washers (F). Tighten using the Allen Wrench (G).

Step 2: Assemble the Support Leg (C) to the bottom of the TV Console

Step 3: Carefully set the Table upright and open the drawers and using your screwdriver, remove the screws attaching the Handles and reattach to the outside of the drawer fronts.