

# RELOCATING OR REMOVING A POWER HUB

## Relocating a Power Hub




1. Sectionals allow you to move your furnishings without the use of tools. If you want to relocate where the Power Hub is in your configuration, like from the left Side to the right, see next step.



2. First unplug the Power Hub from the wall, remove the Clamp, remove the Clips, and reinstall the Side in your preferred location. If you want to remove the Power Hub completely, follow the next steps.


### 1 Removing a Power Hub

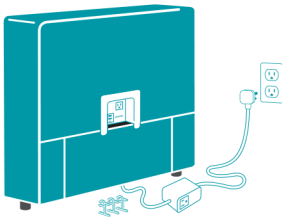

**PRO TIP** Make sure the cord is free from any obstacles. This will make future steps easier.

First unplug the Power Hub from the wall. Remove any clips attaching the cord to your Sectionals.


### 2 Detach the Power Hub

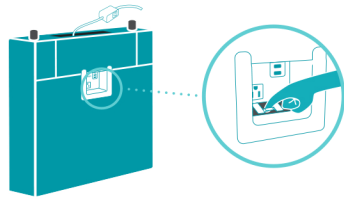

**PRO TIP** It may help to pull the face of the Power Hub away from upholstery at the same time.

Using one or two fingers, pull the latch inside of the Power Hub cavity and slide the Power Hub out of the Side.


### 3 Uncouple Power Hub from Sectionals

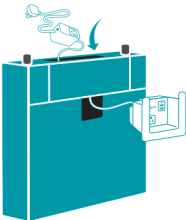

**PRO TIP** Gathering the cord and pushing it through hole on the bottom of the Side may help.

Pull the remaining cord, Convenience Outlet, and plug out through the Clamp hole.

### 4 Designed For Life

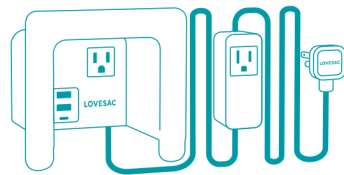

Whether you're changing the look of your Sectionals with new covers or moving to a new place, the Sectionals Power Hub always installs easily and without tools, and provides power for your devices where you need it most.