

 



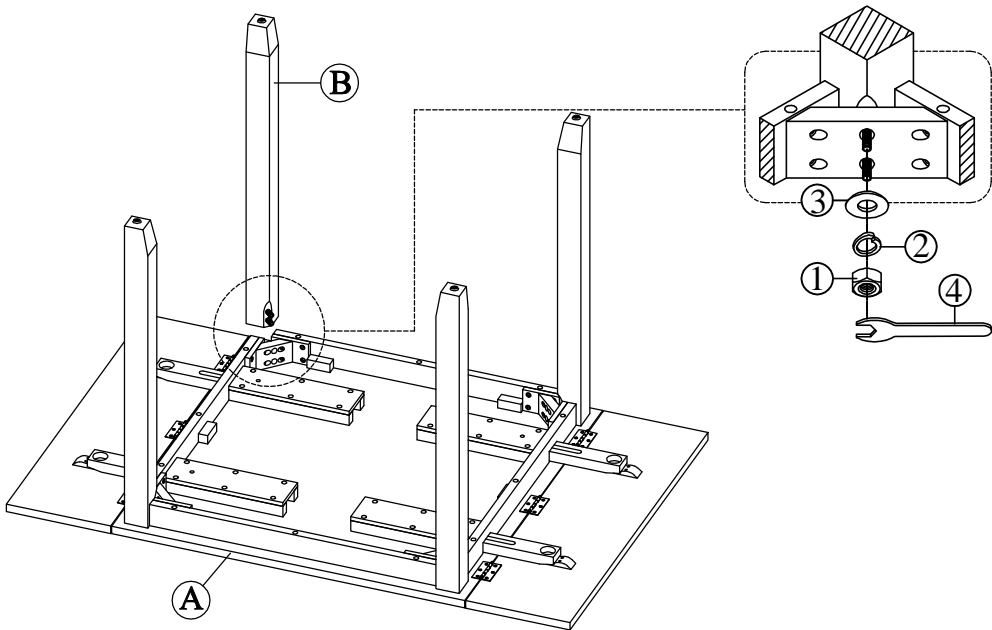
Assembly Instructions
DINING TABLE
DMT7003DLDS

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
 - 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
 - 3. Please do not over tighten screws or bolts.
 - 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR DINING TABLE			
No.	PART DESC	CODE.	Q'TY
A	DINING TABLE - TOP		1
B	DINING TABLE - LEG	PDMT7003DLDSLEG1	4

HARDWARE LIST PACKED INSIDE BOX			
No.	HARDWARE DESC	CODE.	Q'TY
1	 HEX NUT (5/16")	PDMT7003DLDSHW1	8
2	 SPRING WASHER (5/16")		8
3	 FLAT WASHER (5/16")		8
4	 WRENCH (5/16")		1

STEP:1





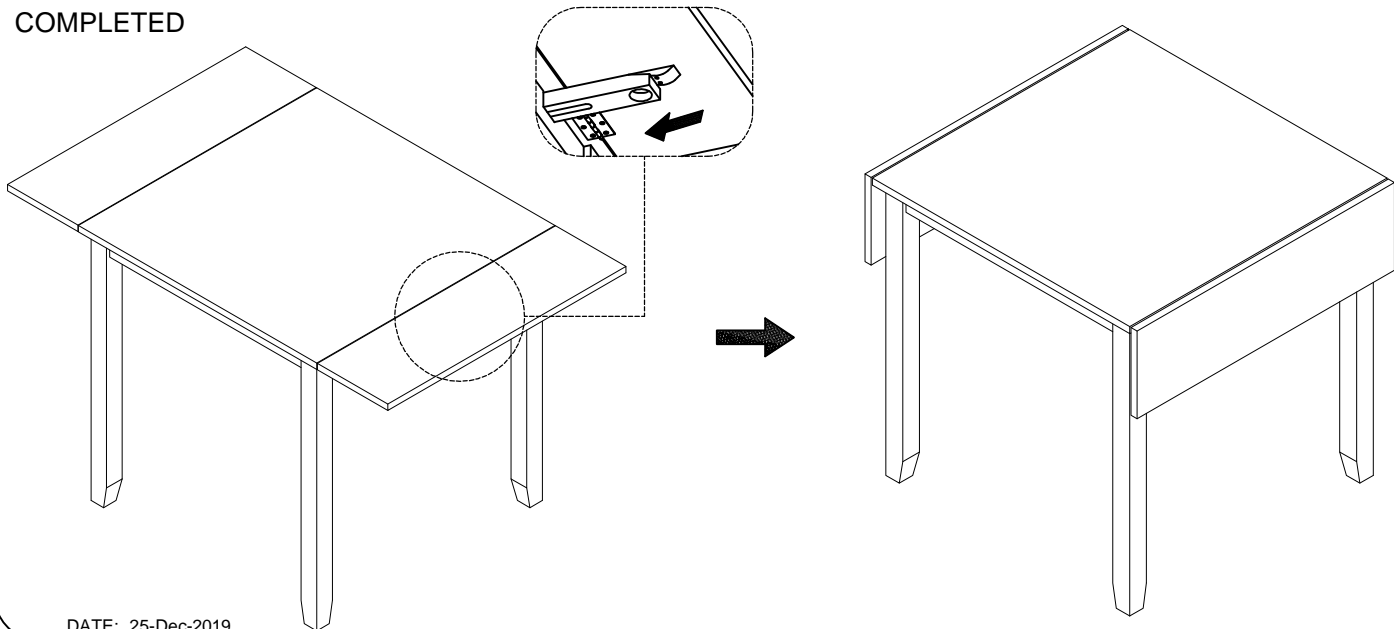


 


COMPLETED




Assembly Instructions
DINING SIDE CHAIR
DMT7003DLDS

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
 3. Please do not over tighten screws or bolts.
 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR SIDE CHAIR			
No.	PART DESC	CODE.	Q'TY
A	DINING SIDE CHAIRS - BACK FRAME	PDMT7003DLDSBFR	1
B	DINING SIDE CHAIRS - SEAT FRAME	PDMT7003DLDSSEA	1
C	DINING SIDE CHAIRS - SEAT CUSHION		1
D	DINING SIDE CHAIRS - L&R FRONT LEG	PDMT7003DLDSLEG2	2
E	DINING SIDE CHAIRS - SIDE STRETCHER L&R	PDMT7003DLDSSTR	2

HARDWARE LIST PACKED INSIDE BOX			
No.	HARDWARE DESC	CODE.	Q'TY
1	 ALLEN BOLT (1/4" x 40mm)	PDMT7003DLDSHW2	2
2	 ALLEN BOLT (1/4" x 75mm)		4
3	 HEX NUT (5/16")		4
4	 SPRING WASHER (5/16")		10
5	 FLAT WASHER (5/16")		10
6	 SCREWS/ VIS (M4x38mm)		10
7	 ALLEN KEY (M4)		1
8	 WRENCH (5/16")		1


STEP:1

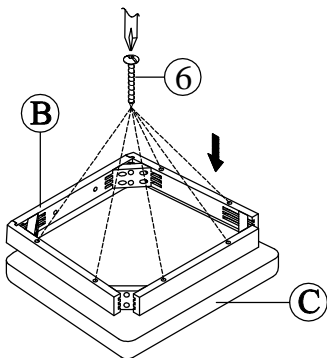

STEP:2

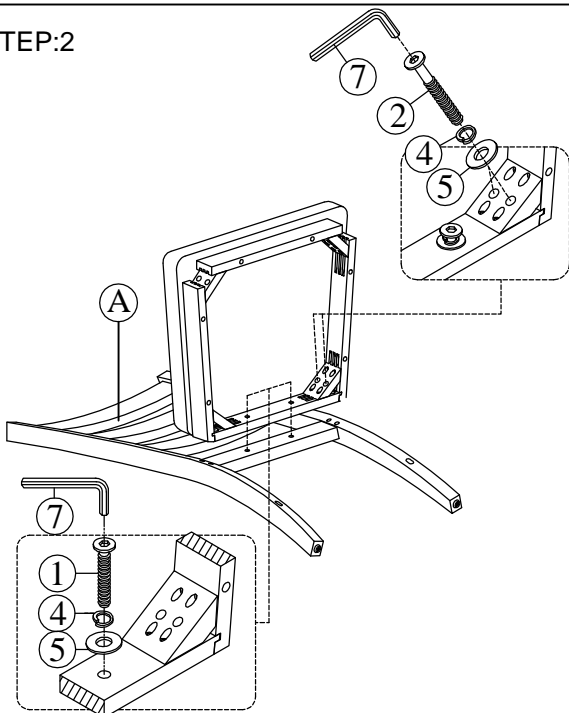

STEP:3

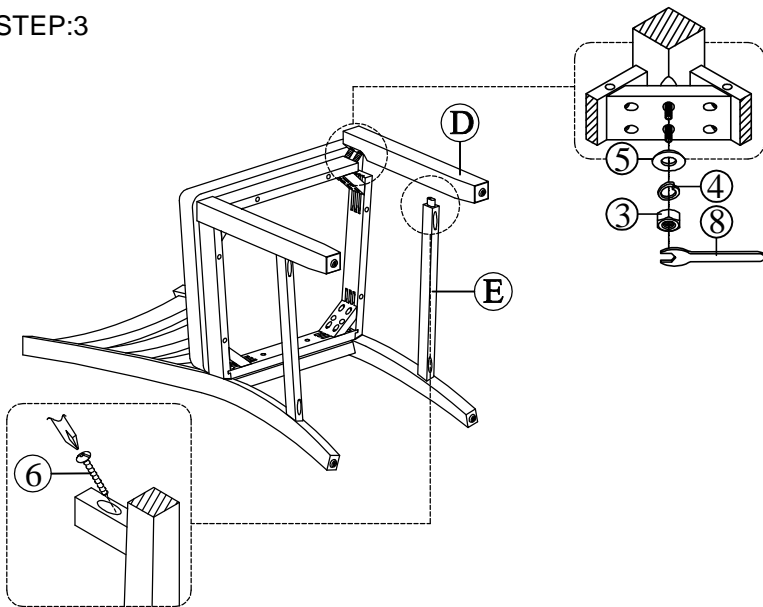

COMPLETED

