

Assembly instructions for MEDIA CHEST CN600TV

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screw or bolts.
4. Please put all parts on non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Part List				Hardware List (Packed Inside TV Chest)			
No.	Descriptions	Code	Qty	NO.	Description	Code	Qty.
A	Media Chest	CN600TV	1Pc	1	JCBC Screw M6 x 38mm	PCN600LGHW	8Pcs
B	Front Legs (Packed Inside TV Chest)	PCN600CLF	2Pcs	2	Spring Washer 1/4"		8Pcs
C	Back Left Leg (Packed Inside TV Chest)	PCN600CLBR	1Pc	3	Flat Washer 1/4" x 19mm(Outer)		8Pcs
D	Back Right Leg (Packed Inside TV Chest)	PCN600CLBL	1Pc	4	Allen Key		1Pc
5	Tipping Restraint					PCN600ATKT	1 Set

