

# Assembly Instruction for

## HUTCH & DESK

### JS700HT/JS300HT & JS700DK/JS300DK

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persoms during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

HARDWARE LIST			
NO.	HARDWARE DESC.	CODE	Q'ty
A	 BOLT Ø5/16"*2"L	PJS700DHW	8pcs
B	 SPRING WASHER Ø5/16"		8pcs
C	 FLAT WASHER Ø5/16"*19mm		8pcs
D	 ALLEN KEY 5mm		1pc
E	 Screw Ø8*15mm		2pcs

