

Assembly Instruction for


TV CHEST

JS700TV / JS300TV

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persoms during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

HARDWARE LIST			
NO.	HARDWARE DESC.	CODE	Q'ty
A	 BOLT Ø1/4"*1"	PJS700LHW	8pcs
B	 SPRING WASHER Ø1/4"*10mm		8pcs
C	 FLAT WASHER Ø1/4"*16mm		8pcs
D	 ALLEN KEY 4mm		1pc

HARDWARE LIST PACKED INSIDE BOX				
NO.		HARDWARE DESC.	CODE	Q'ty
1		TIPPING RESTRAINT	PJS700ATKT	1set

