 








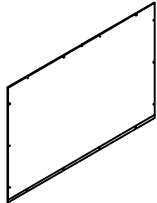
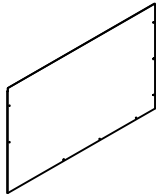
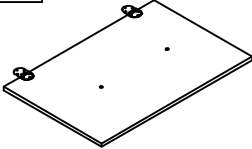
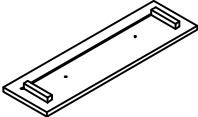
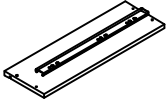
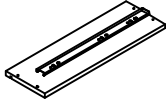
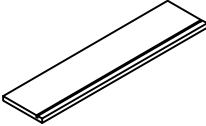
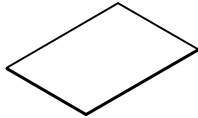
CROSLEY

FURNITURE

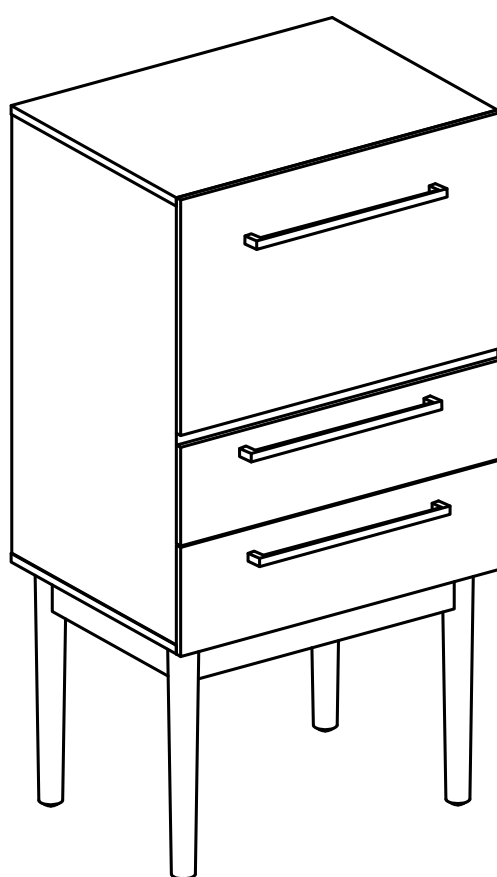





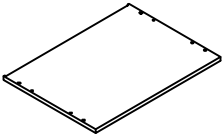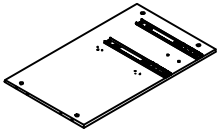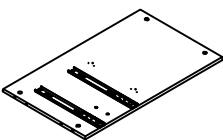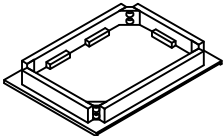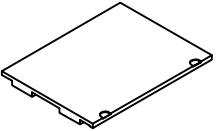











Spirits Cabinet CF4006

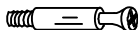

PART LIST

<div data-bbox="98 138 150 197">A</div> 	<div data-bbox="379 138 430 197">B</div> 	<div data-bbox="660 138 711 197">C</div> 	<div data-bbox="941 138 992 197">D</div> 	<div data-bbox="1222 138 1273 197">E</div> 
<div data-bbox="150 443 303 479">Top Panel</div> <div data-bbox="188 519 264 555">1 PC</div>	<div data-bbox="392 443 616 479">Left Side Panel</div> <div data-bbox="462 519 539 555">1 PC</div>	<div data-bbox="673 443 916 479">Right Side Panel</div> <div data-bbox="756 519 833 555">1 PC</div>	<div data-bbox="970 443 1181 479">Bottom Frame</div> <div data-bbox="1037 519 1114 555">1 PC</div>	<div data-bbox="1273 443 1439 479">Fixed Shelf</div> <div data-bbox="1318 519 1394 555">1 PC</div>
<div data-bbox="98 555 150 613">F</div> 	<div data-bbox="379 555 430 613">G</div> 	<div data-bbox="660 555 711 613">H</div> 	<div data-bbox="941 555 992 613">I</div> 	<div data-bbox="1222 555 1273 613">J</div> 
<div data-bbox="201 860 264 896">Leg</div> <div data-bbox="181 931 284 967">4 PCS</div>	<div data-bbox="405 860 635 896">Top Back Panel</div> <div data-bbox="478 931 558 967">1 PC</div>	<div data-bbox="660 860 932 896">Bottom Back Panel</div> <div data-bbox="759 931 836 967">1 PC</div>	<div data-bbox="979 860 1149 896">Door Panel</div> <div data-bbox="1021 931 1101 967">1 PC</div>	<div data-bbox="1248 860 1477 896">Front of Drawer</div> <div data-bbox="1311 931 1414 967">2 PCS</div>
<div data-bbox="98 972 150 1030">K</div> 	<div data-bbox="379 972 430 1030">L</div> 	<div data-bbox="660 972 711 1030">M</div> 	<div data-bbox="941 972 992 1030">N</div> 	
<div data-bbox="127 1267 351 1375">Left Side Panel of Drawer 2 PCS</div>	<div data-bbox="402 1267 641 1375">Right Side Panel of Drawer 2 PCS</div>	<div data-bbox="702 1267 871 1375">Back Panel of Drawer 2 PCS</div>	<div data-bbox="970 1267 1171 1375">Bottom Panel of Drawer 2 PCS</div>	

HARDWARE LIST
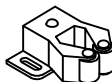
#1		#2		#3		#4		#5	
M6x45						D7xØ3.5x12		D7xØ4x25	
Allen Bolt		Flat Washer		Spring Washer		Screw		Screw	
8 PCS		10 PCS (Extra 2)		10 PCS (Extra 2)		16 PCS (Extra 2)		26 PCS (Extra 2)	
#6		#7		#8		#9		#10	
Ø6x30				Ø9mmx5/32"x1"		Ø7x2.5x12mm		Ø15x12mm	
Wood Dowel		Handle		Round Head Bolt		Screw		Cam Lock	
4 PCS		3 PCS		6 PCS		26 PCS (Extra 2)		10 PCS (Extra 2)	
#11		#12		#13		#14		#15	
Ø7*35mm		Ø8x30		M4				D6xØ3x12	
Cam Bolt		Wood Dowel		Allen Wrench		Safety Strap Kit		Screw	
10 PCS (Extra 2)		10 PCS (Extra 2)		1 PC		1 PC		10 PCS (Extra 2)	
#16		#17		#18					
Door Insert		Spring Hinge		Door Catch					
2 PCS		2 PCS		2 PCS					

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Step 1. Insert cam bolts (part #11) into pre-drilled holes of top panel (part A) by using phillips head screwdriver. Attach door catch (part #18) to left side panel (part B) and right side panel (part C) by using screws (part #15) and phillips head screwdriver. Attach door insert (part #16) to door panel (part I) by using screws (part #15) and phillips head screwdriver.


NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

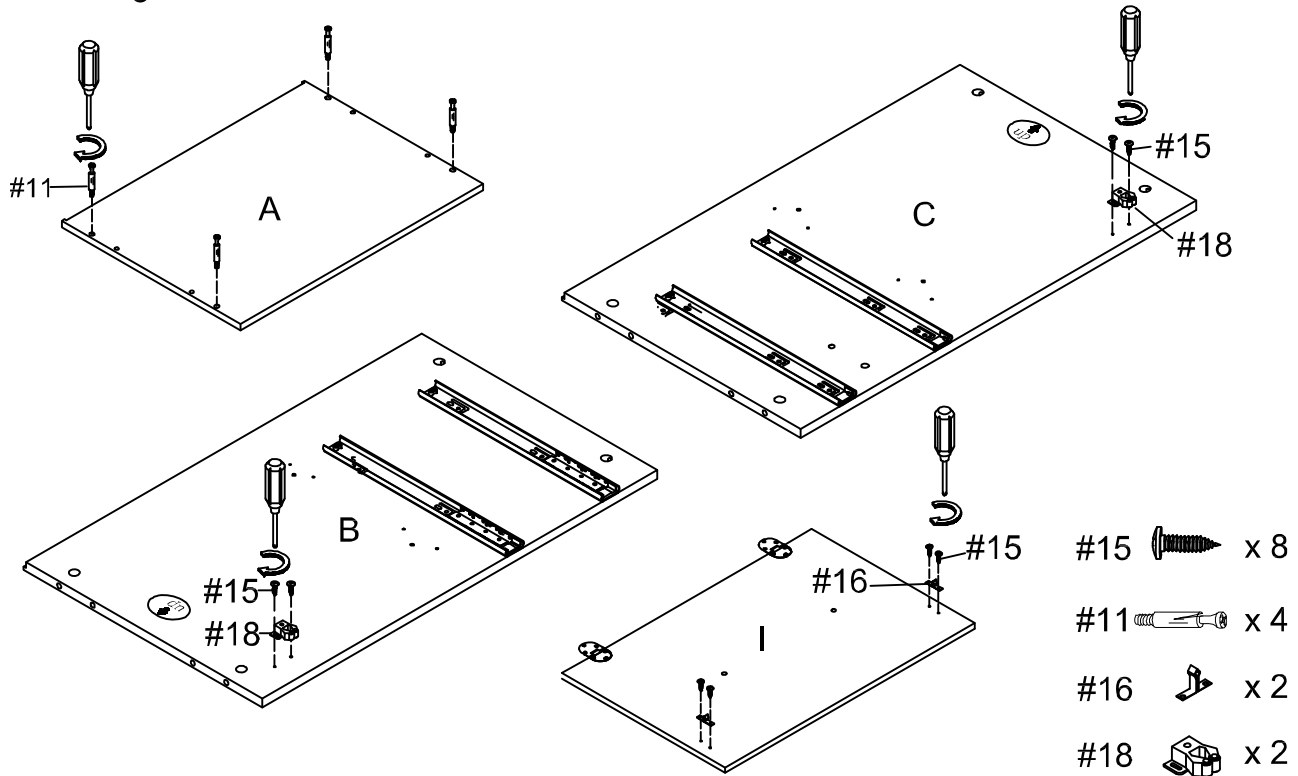

 
Step 2. Attach handles (part #7) to door panel (part I) and front of drawer (part J) by using round head bolts (part #8) and phillips head screwdriver.

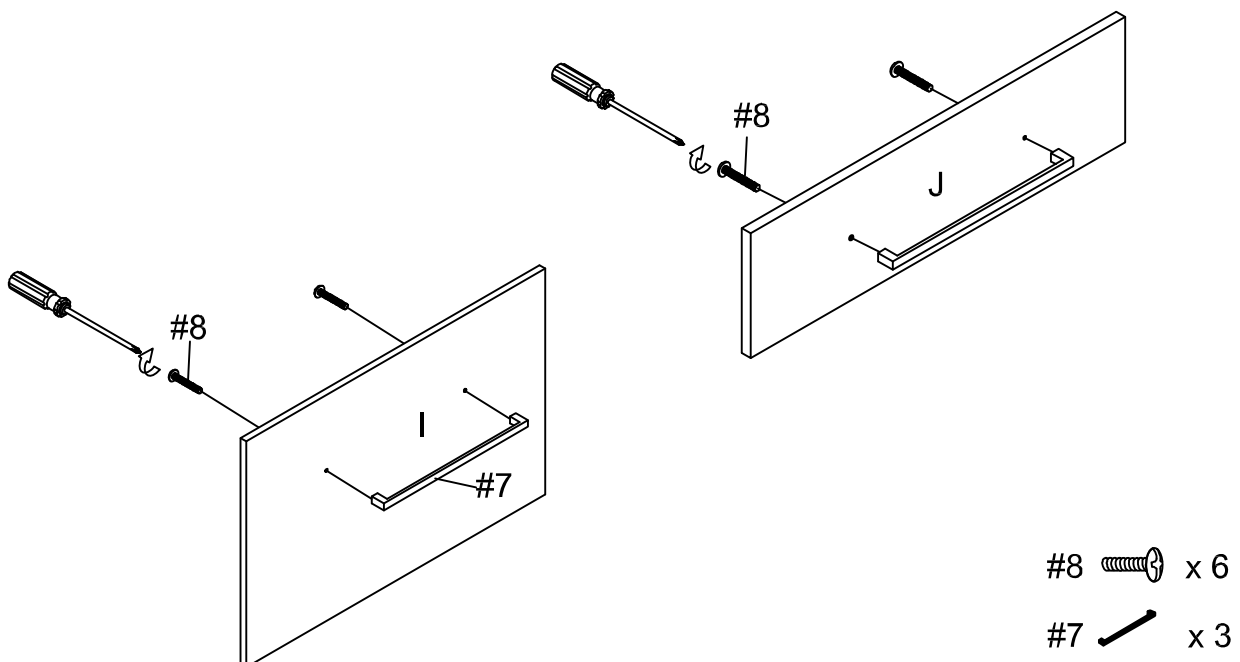

 Step 3. Attach left side panel of drawer (part K) and right side panel of drawer (part L) to front of drawer (part J) by using screws (part #5) and phillips head screwdriver. Slide bottom panel of drawer (part N) into the grooves of left side panel of drawer (part K) and right side panel of drawer (part L). Attach back panel of drawer (part M) to left side panel of drawer (part K) and right side panel of drawer (part L) by using screws (part #5) and phillips head screwdriver.

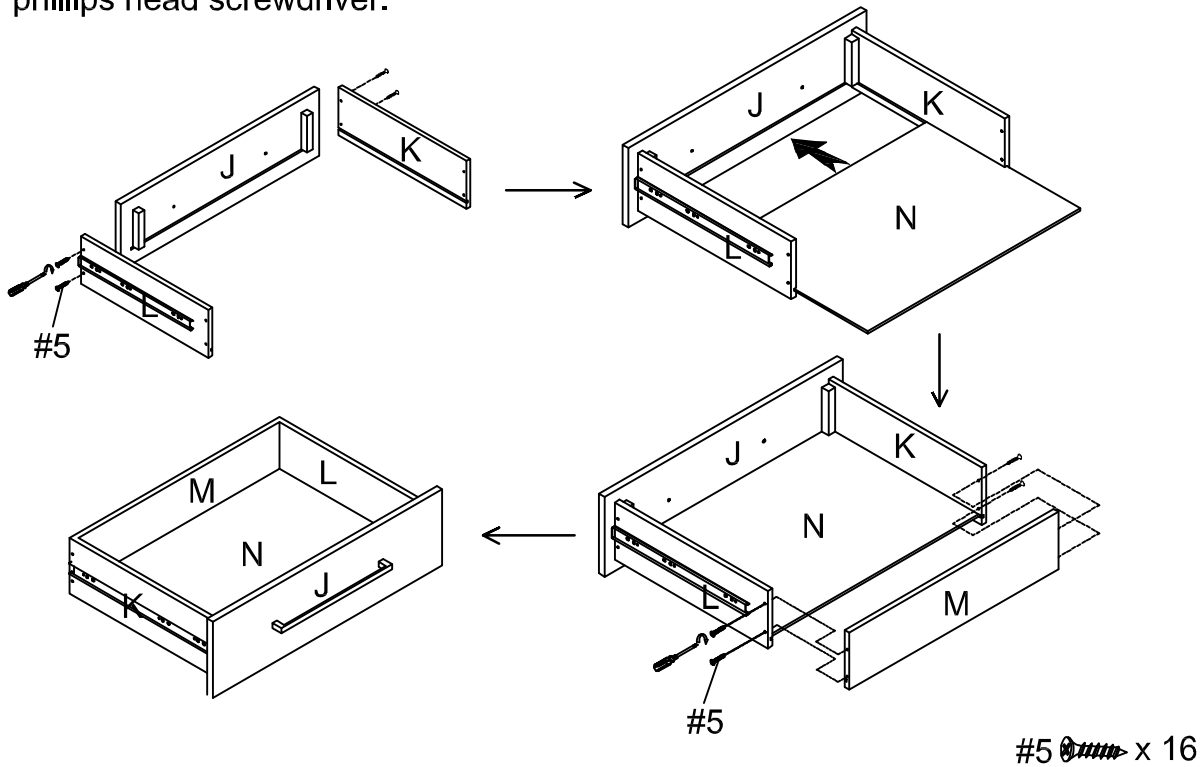


 
Step 4. Attach legs (part F) to bottom frame (part D) by using allen bolts (part #1), flat washers (part #2), spring washers (part #3) and allen wrench (part #13).

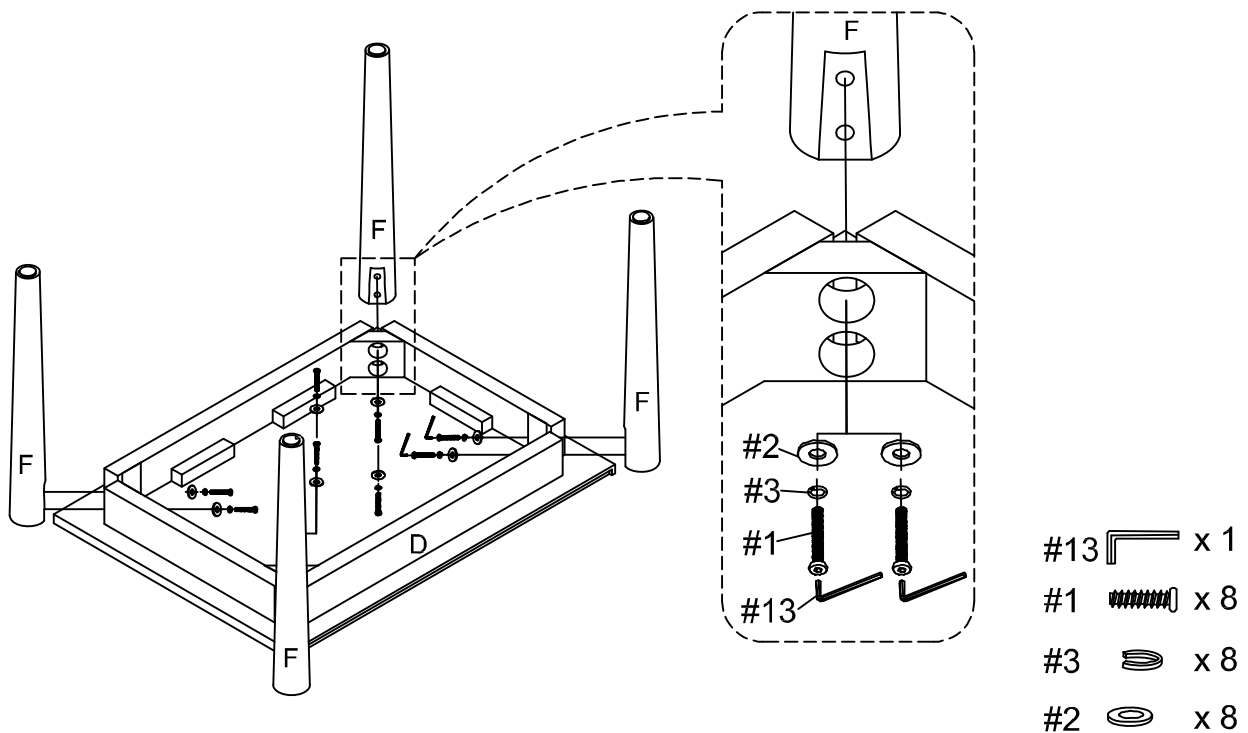

Step 5. Insert wood dowels (part #12) and cam bolts (part #11) into bottom frame (part D) by using phillips head screwdriver as shown.

 
NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

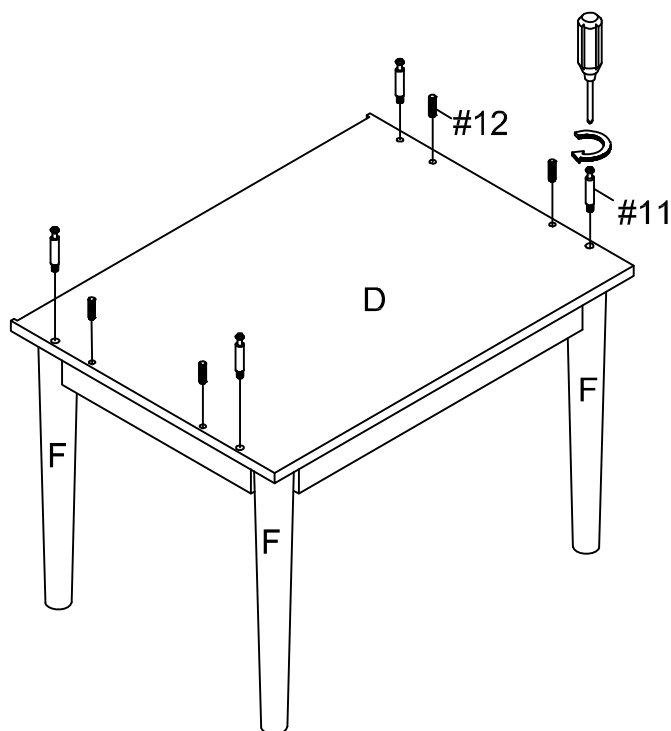

#11  x4

#12  x4

 
Step 6. Attach fixed shelf (part E) to left side panel (part B) by using wood dowels (part #6), screws (part #5) and phillips head screwdriver as shown.

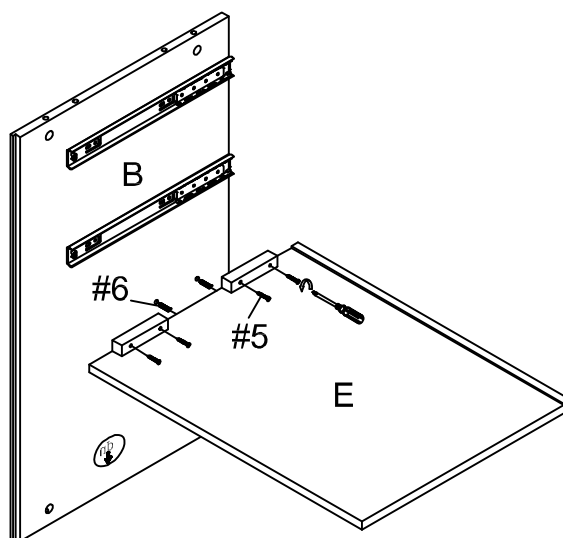



#5  x4


 
#6  x2

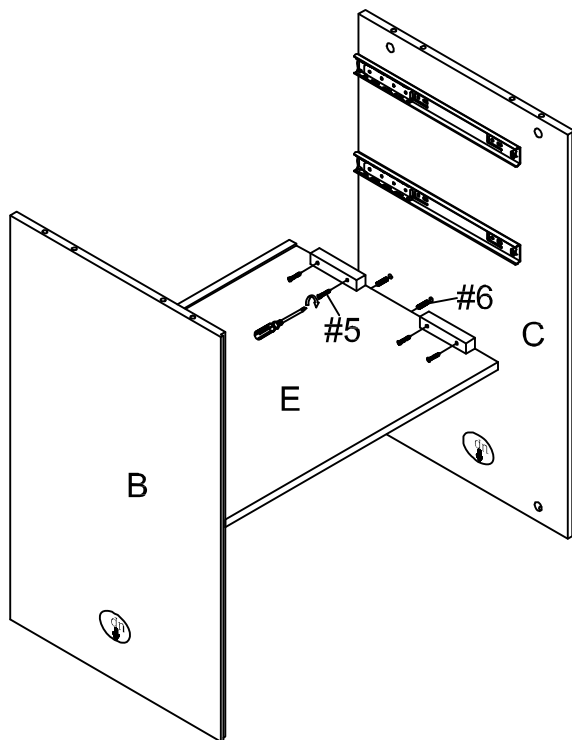Step 7. Attach fixed shelf (part E) to right side panel (part C) by using wood dowels (part #6), screws (part #5) and phillips head screwdriver as shown.



#5  x4
#6  x2

 
 
Step 8. Attach left side panel (part B) and right side panel (part C) to bottom frame (part D) by using wood dowels, cam locks (part #10) and phillips head screwdriver.
NOTE: Cam locks must rotate full 180°. See pictured insert.

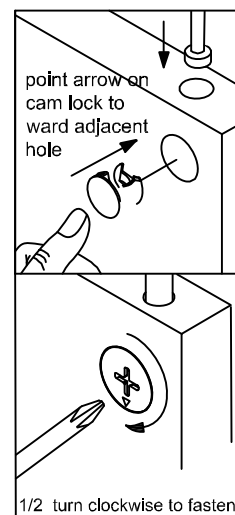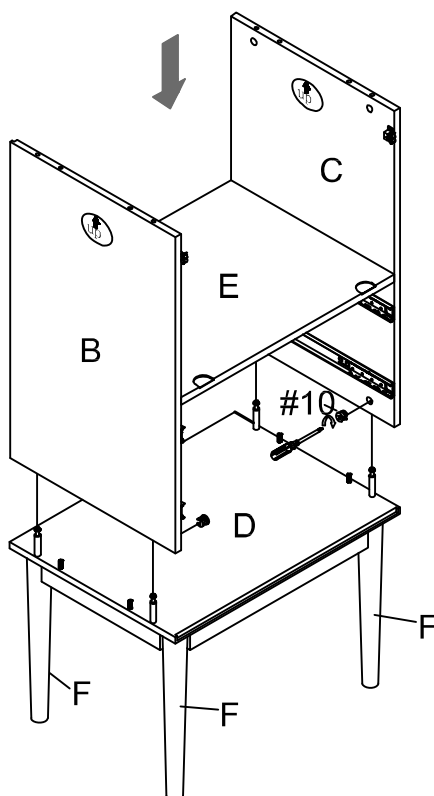

#10  x4

Step 9. Attach top panel (part A) to left side panel (part B) and right side panel (part C) by using cam locks (part #10), wood dowels (part #12) and phillips head screwdriver.

  
NOTE: Cam locks must rotate full 180°. See pictured insert.

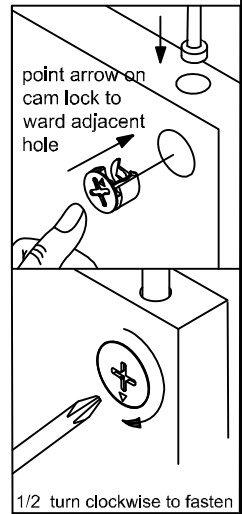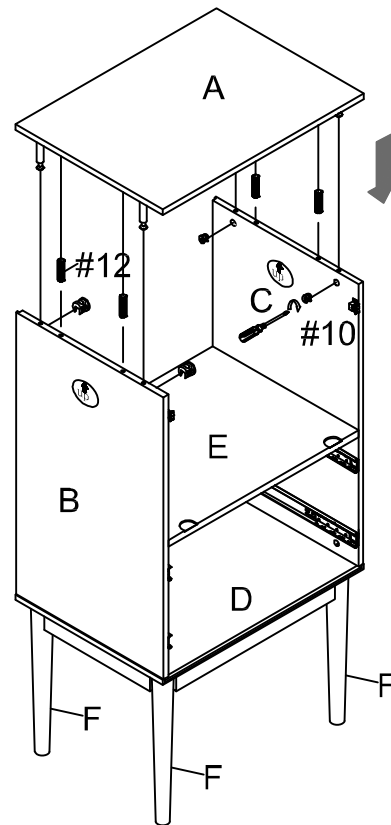

#10  x 4


#12  x 4

 Step 10. Attach top back panel (part G) and bottom back panel (part H) into place by using screws (part #9) and phillips head screwdriver.

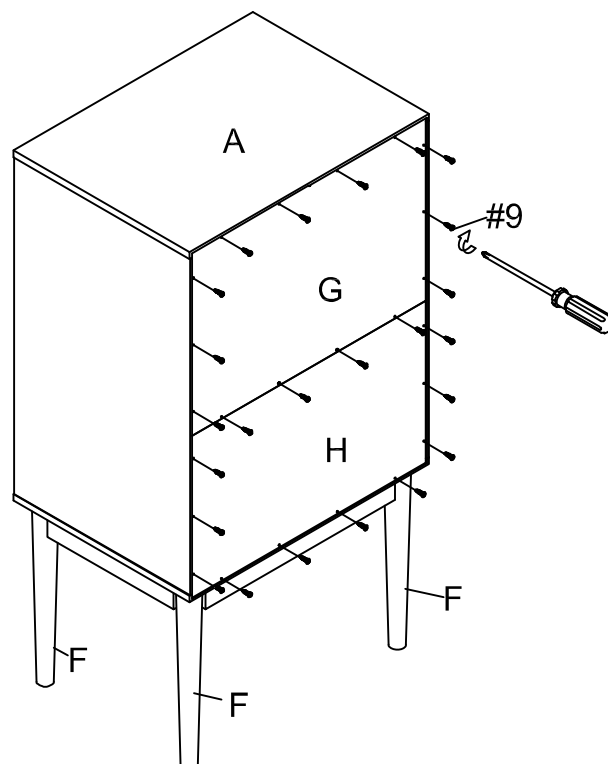


#9  x 24

  Step 11. Attach door panel (part I) to fixed shelf (part E) by using hinges (pre-assembled), screws (part #4) and phillips head screwdriver.

 
 
 
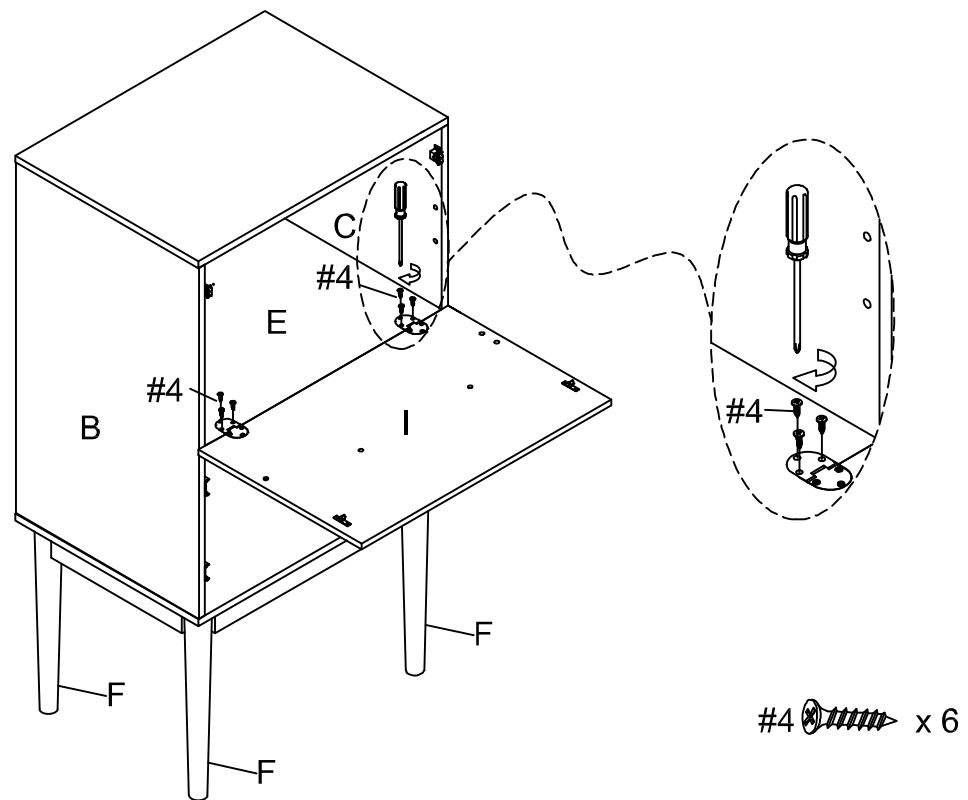 



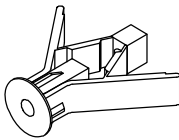

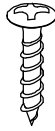

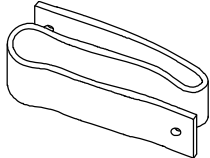
Step 12. Attach spring hinge (part #17) to left side panel (part B) and right side panel (part C) by using screws (part #4) and phillips head screwdriver.

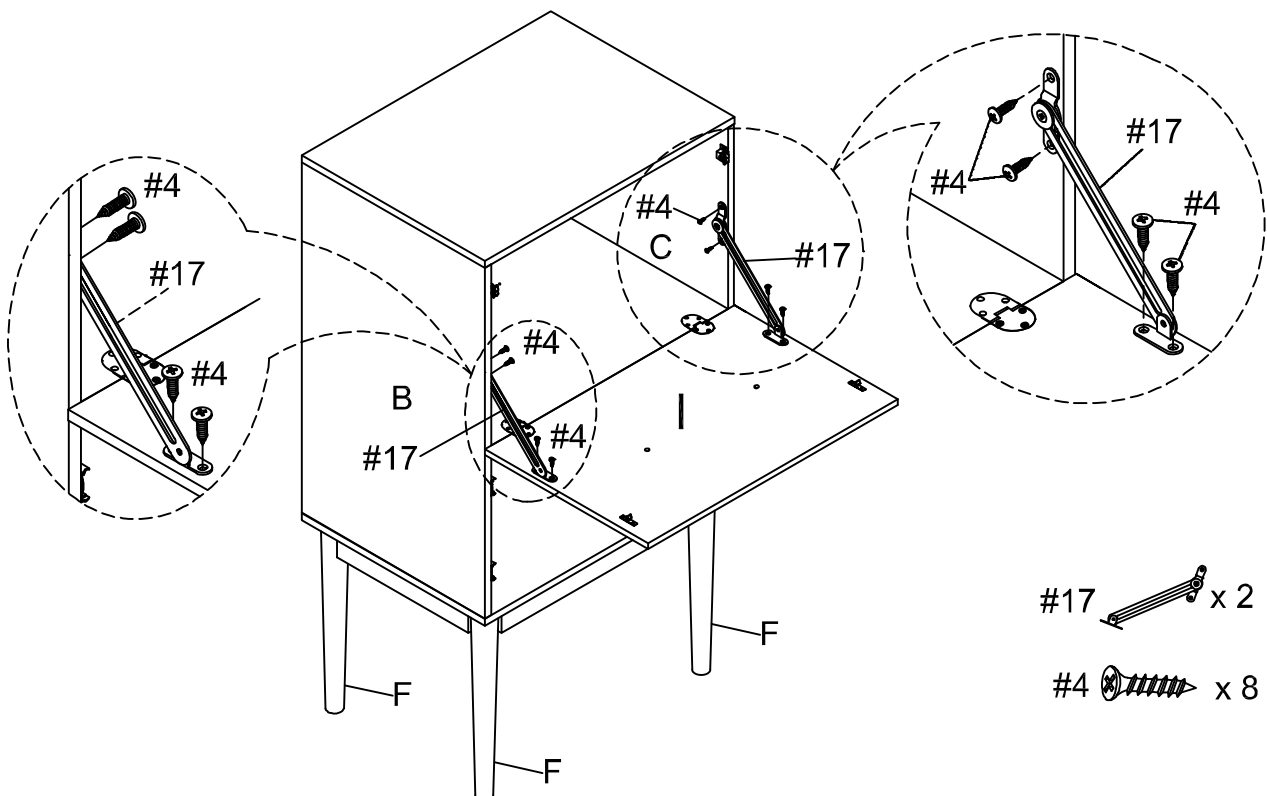

Step 13. Slide completed drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.

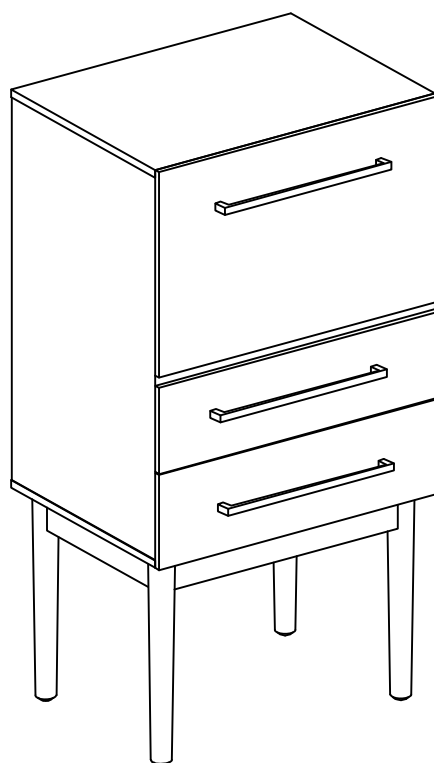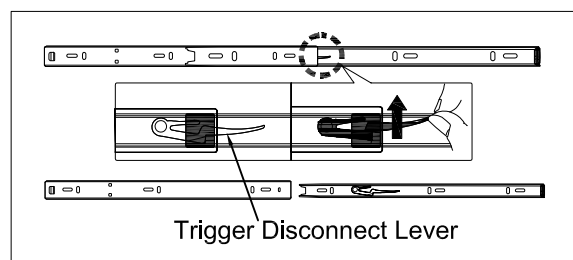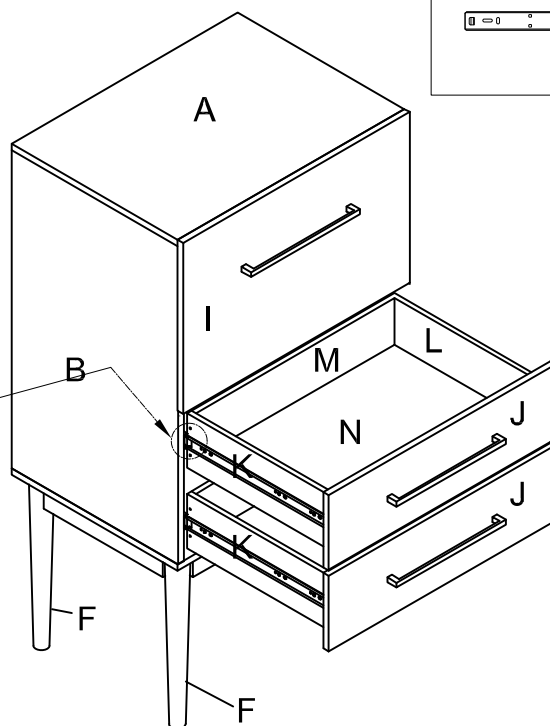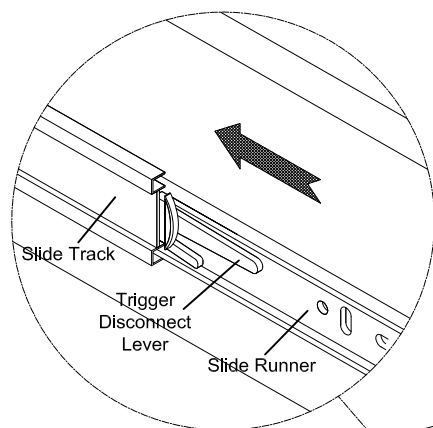

#14	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 PC	Wall Anchor A x1 PC	Washer B x 2 PCS	Short Screw C x 1 PC	Long Screw D x 1 PC	Safety Wall Strap E x 1 PC

 
 
SAFETY STRAP WALL ASSEMBLY INSTRUCTION

1) Insert short screw (part #C) through washer (part #B) and safety wall strap (part #E) and screw it into the top center of top back panel (part G).

2) Drill a 11/32" hole where you want to secure your unit. The hole should be at the same height as the hole in the top center of top back panel (part G). Tap wall anchor (part #A) into the hole.

3) Insert long screw (part #D) through a washer (part #B) and wall safety strap (part #E) into wall anchor the top center of top back panel (part G).

Note: This item is not intended for clothing storage use.

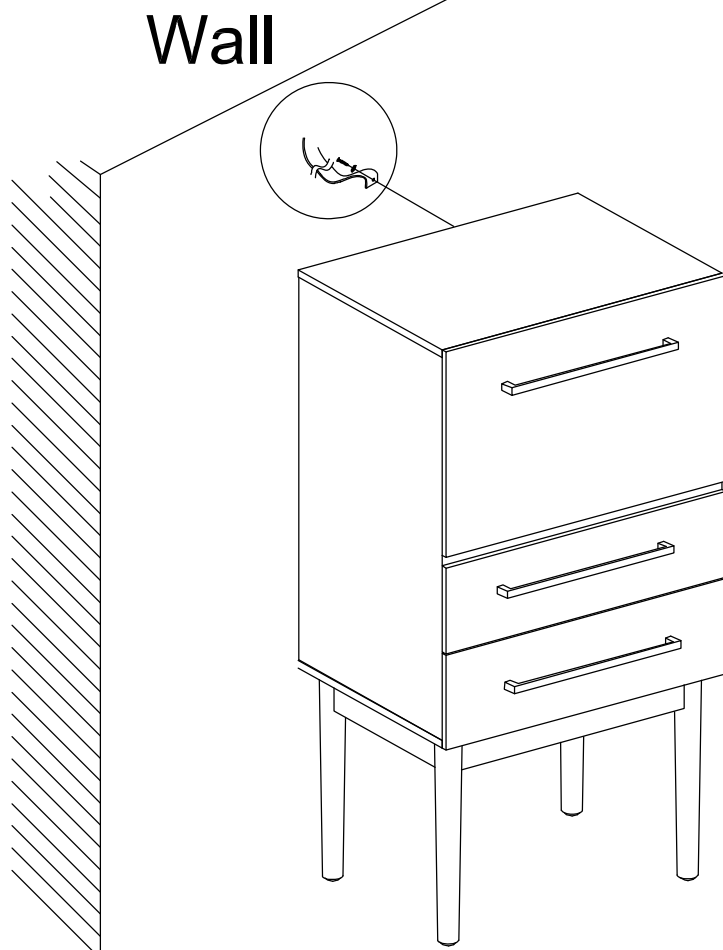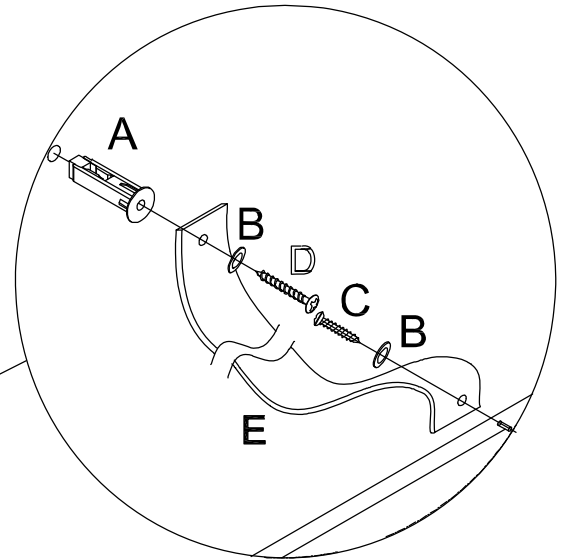

▲ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label. Do not remove!