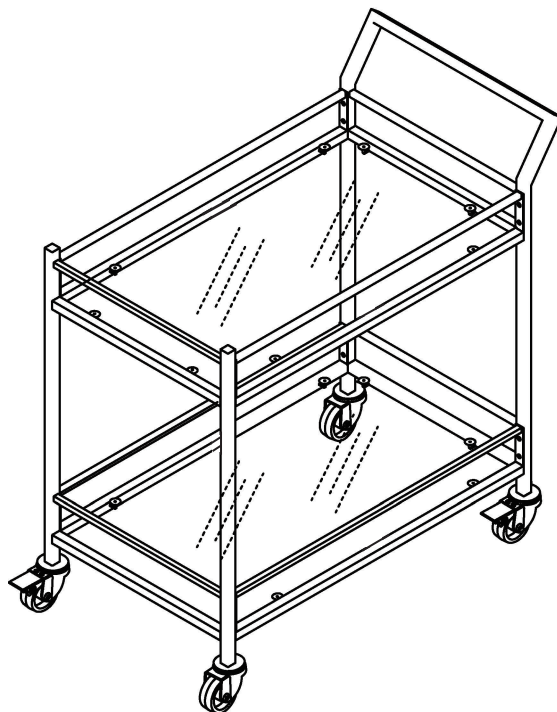


# **CROSLEY**


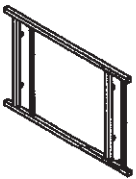

 
 

---

FURNITURE


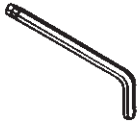


## Bar Cart CF4007




## PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
<b>Front Panel</b> 1 PC	<b>Back Panel</b> 1 PC	<b>Side Panel</b> 4 PCS	<b>Glass Shelf</b> 2 PCS	<b>Locking Caster</b> 2 PCS
<b>F</b> 				
<b>Caster</b> 2 PCS				

## HARDWARE LIST

<b>#1</b> 	<b>#2</b> 	<b>#3</b> 	<b>#4</b> 
<b>1/2"xD10</b> <b>Bolt</b> 16 PCS (Extra1)	<b>Allen Wrench</b> 1 PC	<b>Wrench</b> 1 PC	<b>Suction Cup</b> Extra 2 PCS


Step 1. Lay back panel (part B) upside down on a soft surface, such as carpet, as show below. Attach side panels (part C) to back panel (part B) using bolts (part #1) and allen wrench (part #2). Attach front panel (part A) to side panels (part C) using bolts (part #1) and allen wrench (part #2).

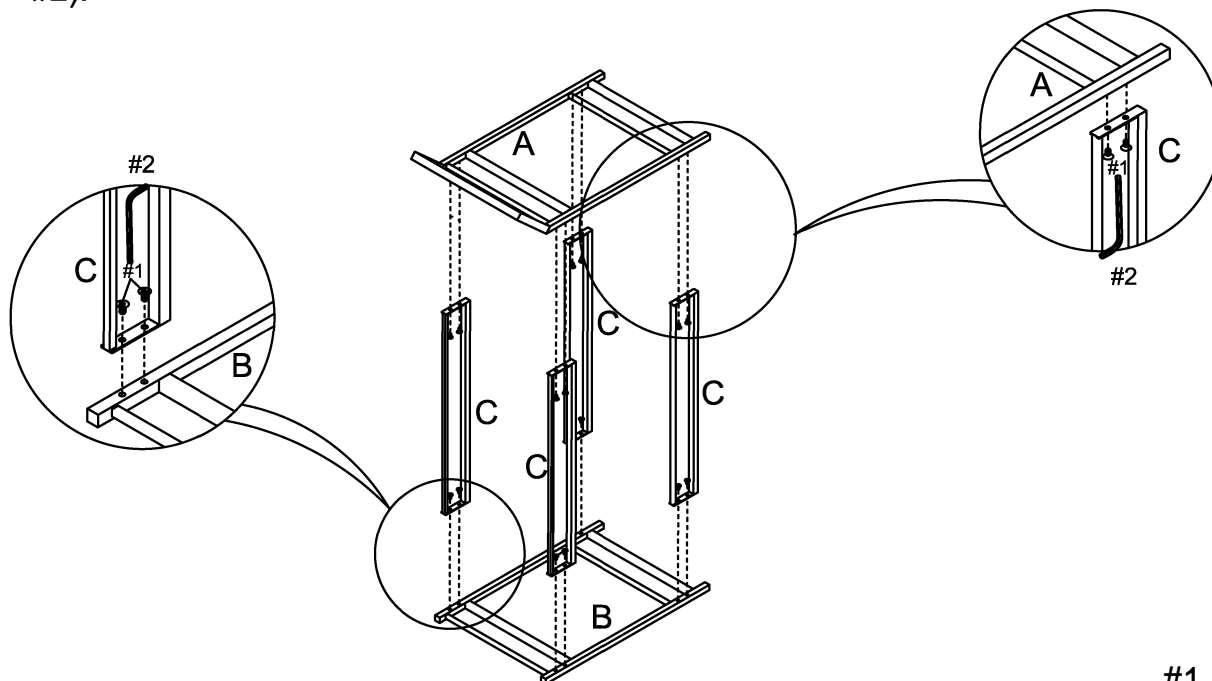

#1  x 16

#2  x 1

Step 2. Attach locking casters (part E) and casters (part F) to front panel (part A) and back panel (part B) using wrench (part #3).

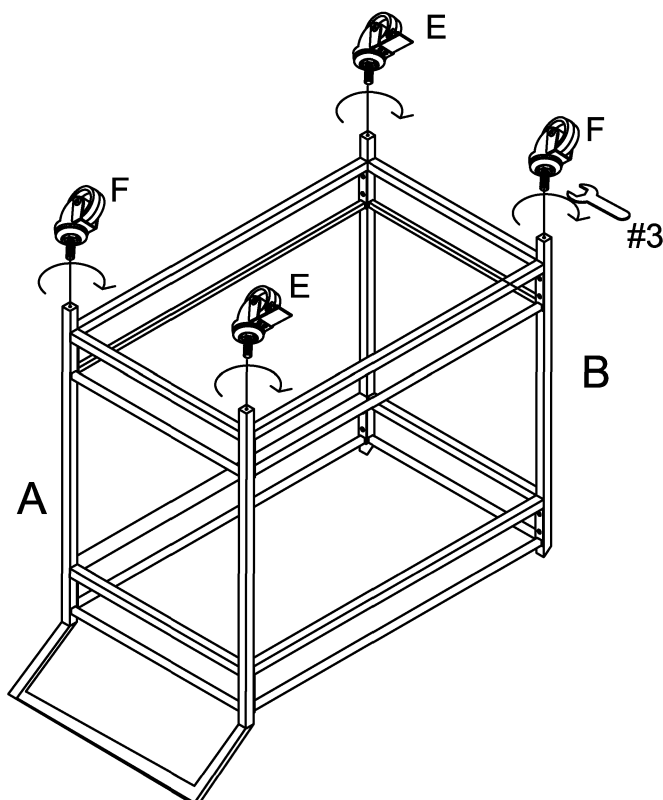

#3  x 1

Step 3. Carefully turn unit upright. Put glass shelves (part D) into place.

