



Buffet CF4206

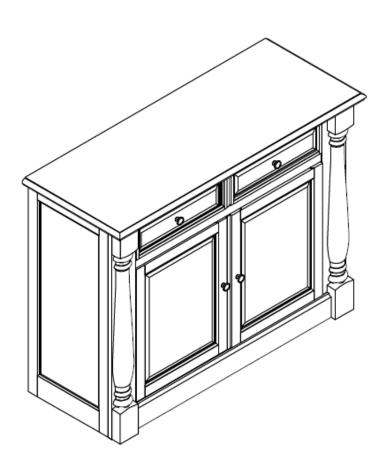

PART LIST

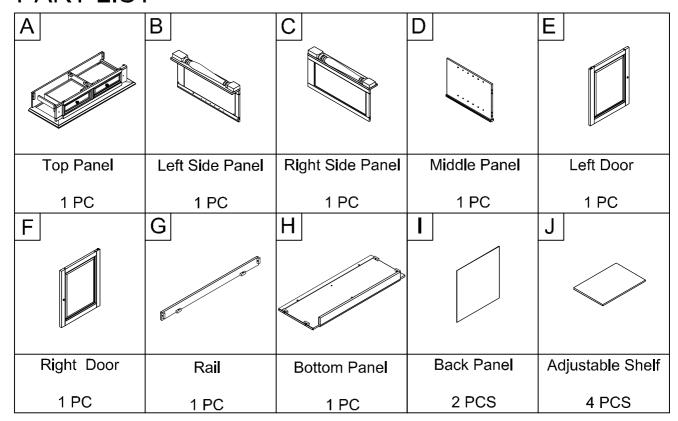

HARDWARE LIST

1	2	3	4	5		
1-1/4"x Ø1/4"xD12				5/8"x 1-1/4"L		
Short Bolt	Spring Washer	Flat Washer	Allen Wrench	Wood Dowel		
15 PCS (Extra 1)	20 PCS (Extra 1)	20 PCS (Extra 1)	1 PC	5 PCS (Extra 1)		
6	7	8	9	10		
5	Onnu-	©				
	1/8"x 5/8"L		1"x Ø5/32"xD9			
Shelf Holder	Screw	Knob	Round Head Bolt	Door Magnet		
17 PCS (Extra 1)	9 PCS (Extra 1)	2 PCS	3 PCS (Extra 1)	4 PCS		
11	12	ADDITIONAL TOOLS (Not Provided)				

Note:It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


2"x Ø1/4"xD12 Long Bolt

5 PCS (Extra 1)


Safety Strap Kit

1 SET


Step 1. Carefully lay top panel (part A) on a soft surface such as carpet as shown. Attach door magnets (part #10) to top panel (part A) using screws (part #7) and Phillips head screwdriver.

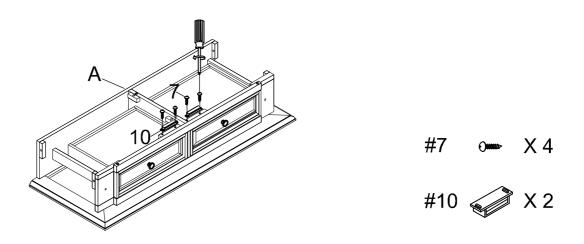

Step 2. Attach door magnets (part #10) to bottom panel (part H) using screws (part #7) and Phillips head screwdriver.

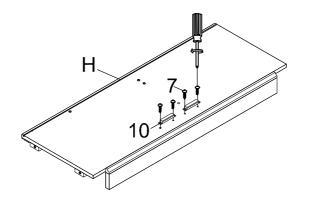


Step 3. Attach rail (part G) to bottom panel (part H) using short bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

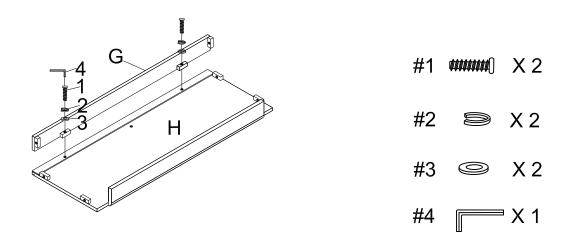


Step 4. Open drawers on top panel (part A) as shown. Attach left side panel (part B) and right side panel (part C) to top panel (part A) using short bolts (part #1), long bolts (part #12), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).


Note: To release trigger disconnect levers push one side up and the other down.

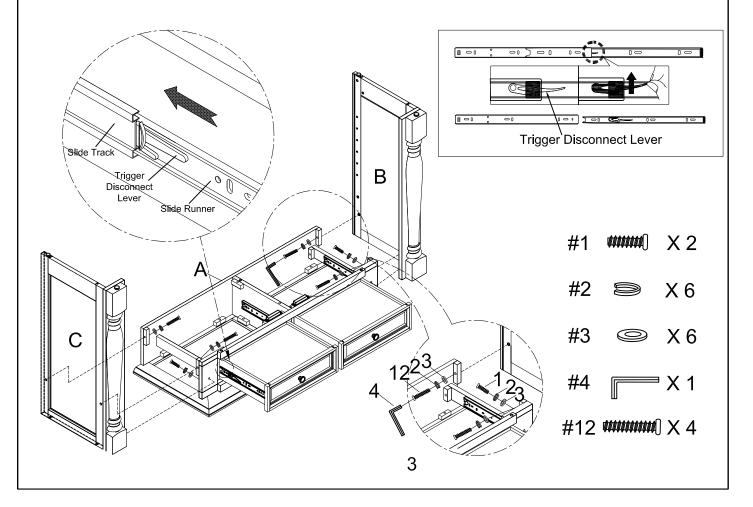


Step 5. Attach middle panel (part D) to top panel (part A) using short bolts (part #1), spring washers (part #2), flat washers (part #3), wood dowels (part #5) and allen wrench (part #4).

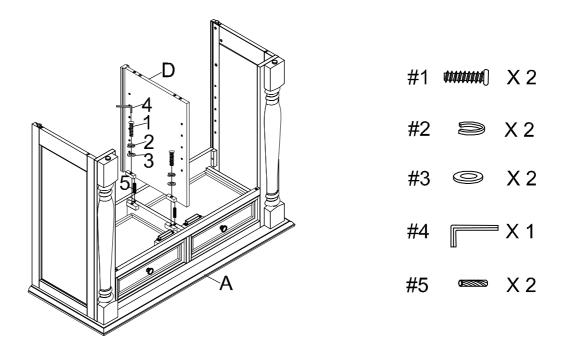


Step 6. Slide back panels (part I) into grooves of left side panel (part B), right side panel (part C), and middle panel (part D) as shown below.

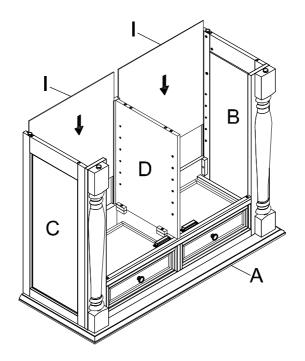


Step 7. Attach bottom panel (part H) and rail (part G) to left side panel (part B), right side panel (part C) and middle panel (part D) using short bolt (part #1), spring washers (part #2), flat washers (part #3), wood dowels (part #5) and allen wrench (part #4).

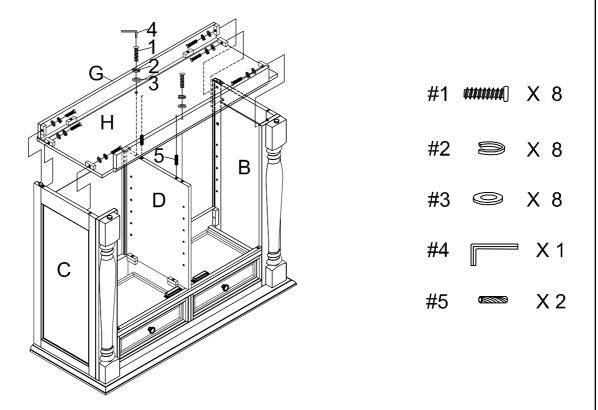

Step 8. Carefully turn the unit upright. Place shelf holders (part #6) into desired position and then slide adjustable shelves (part J) into place.

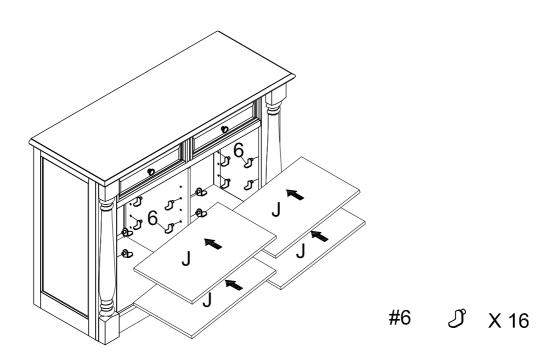

Step 9. Attach knobs (part #8) to left and right doors (parts E & F) using round head bolts (part #9) and Phillips head screwdriver. Install left and right doors (parts E & F) by placing the bottom pin hinges (pre-installed in doors) in the pre-drilled holes of bottom panel (part H), and then depressing the top spring-loaded pin hinges so they can be placed in the pre-drilled holes of top panel (part A). Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

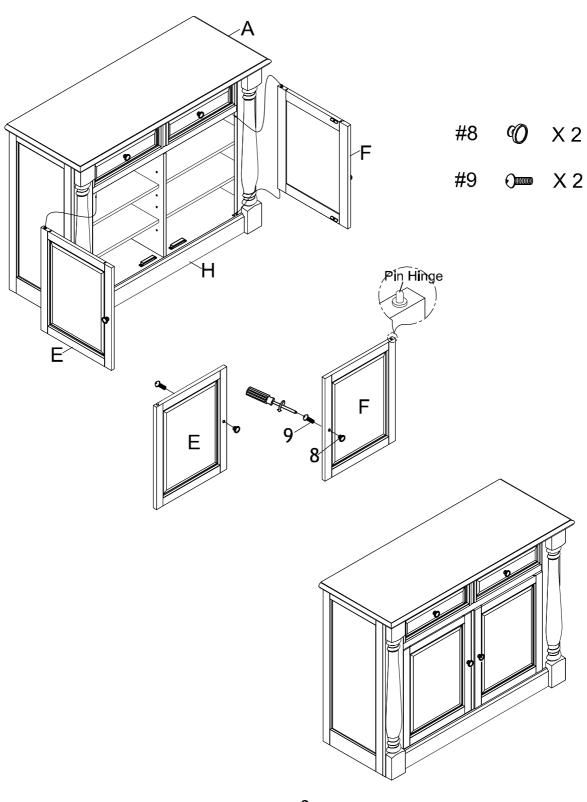

Step 10.


11	Α	В	С	D	E
E		P.	6	@mmm.	\bigcirc
			5/8"x Ø3xD8	1-1/2"x	
Safety Strap Kit	Wa ll Anchor	Bracket	Short Screw	Long Screw	Safety Wa ll Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

- 1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
- 2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
- 3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

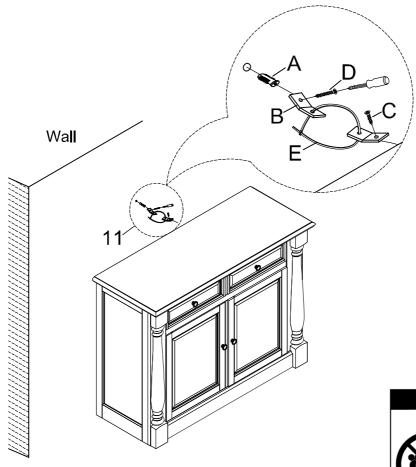

AWARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install tipover restraint provided. For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- serious injury.

 NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!