



Features & Benefits

Automatically Included with every HVT order

Biodegradable

Preps and conditions HVT

Easy to apply with mop, swing machine or auto scrubber.

Leaves no residue

HVT Initial Deep Scrub Cleaner

Technical Data Sheet (TDS)

Mohawk Group HVT (Homogeneous Vinyl Tile) Initial Deep Scrub Cleaner is the first step in the overall Mohawk Group HVT Flooring Initial Maintenance System. HVT Initial Deep Scrub Cleaner meets or exceeds green industry standards for floor care products based on its reduced levels of volatile organic compounds and biodegradability. Used in conjunction with the Mohawk Industries Initial Deep Scrub Pad (maroon in color) it deep cleans, preps, and conditions any new Mohawk Industries HVT tile floor by thoroughly removing deep down manufacturing residue and ground in installation debris. Deep scrub cleaning, using Mohawk Industries HVT Initial Deep Scrub Cleaner is required before cleaning the surface of the floor.

SPECIFICATIONS

Color Water White
Fragrance..... Mild
pH conc 11.0
pH in dilution 10.0
Residue..... None
Biodegradable ... Yes
Coverage 4,000 sq ft per gallon

PRECAUTIONS

KEEP OUT OF REACH OF CHILDREN.
See container and MSDS for further safety instructions.

DIRECTIONS FOR USE

For newly installed Mohawk Group HVT, sweep or dust mop the floor to remove any large debris. Never use oil base treated dust mops. (See Mohawk Group HVT Installation instructions for how to clean previously installed HVT). Dilute HVT Initial Deep Scrub Cleaner (1 part cleaner : 10 parts water) or 13 oz./gal with cool clean water and apply liberally to the floor. Using the Initial Deep Scrub Pad (maroon in color), agitate floor thoroughly with a low-speed rotary machine or automatic scrubber. Approximately 5 passes are required to properly deep scrub the floor. Make sure floor remains very wet. Pick up the solution with a wet vacuum, automatic scrubber, or a mop and bucket. Rinse with clear water only. Allow floor to dry completely before starting the surface cleaning process using HVT Initial Surface Cleaner in conjunction with HVT Initial Surface Cleaning Pads per Mohawk Group's written instructions.

NOTE: It is very important to follow the specific directions for cleaning Mohawk Group HVT. Treating it otherwise, can negatively impact visual appearance.

IMPORTANT: Never buff in excess of 375 RPM.

FOR DETAILED SITE SPECIFIC INSTRUCTIONS, contact Mohawk Technical Services at 888-387-9881 Option #3 for job specific recommendations.