



Features & Benefits

Automatically Included with every HVT order

Biodegradable

Micro-cleans and conditions HVT

Chemically seals tile

May be repeated for higher gloss level

HVT Initial Surface Cleaner

Technical Data Sheet (TDS)

Mohawk Group HVT (Homogeneous Vinyl Tile) Initial Surface Cleaner is the second step in the overall HVT Flooring Initial Maintenance System. HVT Initial Surface Cleaner, used in conjunction with the Mohawk Group Initial Surface Cleaning Pad (natural in color, with black strands) – micro-cleans the surface of the tile resulting in a great visual appearance and optimal performance. It should be used only after the HVT Initial Deep Scrub process is completed.

SPECIFICATIONS

PRECAUTIONS

KEEP OUT OF REACH OF CHILDREN. See container and MSDS for further safety instructions.

DIRECTIONS FOR USE

After first completing the HVT Initial Deep Scrub process, place the Initial Surface Cleaning Pad (natural in color, with black strands) onto low speed floor machine. Mist HVT Initial Surface Cleaner, using the mist setting on a trigger sprayer, over the area to be cleaned. With the low speed machine, use the initial pass to evenly distribute the cleaner over the intended area to be surface cleaned (about a 10'x10' area at a time) - then begin buffing action. Buff the area using an even back and forth motion. Approximately 5 passes per row should properly clean the surface but take extra passes to assure complete surface uniformity. Continue the process until the surface of the entire area has been cleaned and is visually acceptable. If desired, repeating Initial Surface Cleaning process a second time will maximize cleaning and appearance.

NOTE: It is very important to follow the specific directions for cleaning Mohawk Group HVT. Treating it otherwise, can negatively impact visual appearance.

IMPORTANT: Never buff in excess of 375 RPM.

FOR DETAILED SITE SPECIFIC INSTRUCTIONS, contact Mohawk Technical Services at 888-387-9881 Option #3 for job specific recommendations.