


ASSEMBLY INSTRUCTIONS ITEM NO: IA16-303 EXECUTIVE DESK-ASHLAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

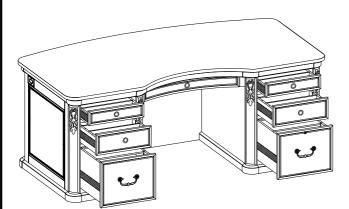


TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

PARTS LIST:			
No.	Description	Sketch	Quantity
A	BUN FOOT		8 PCS

Detail 2

Remove the wood screws on the side panel of drawer box to remove the rod loops and file rods if necessary.



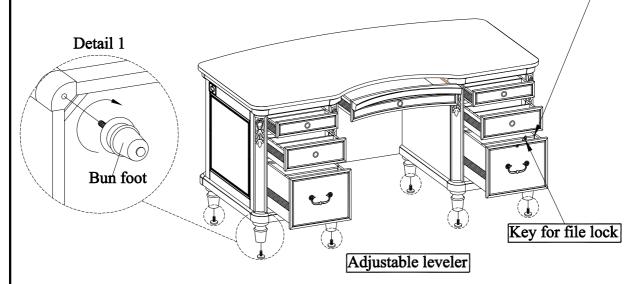

ASSEMBLY STEP:

- 1. Put the desk upside down on a clean, soft surface and assemble bun feet to the bottom frame. See detail 1.
- 2. Turn the desk so that it is in the upright position.

MADE IN <u>VIETNAM</u>

DATE: 2014-05-08 PAGE 1/1