



# Sideboard CF4215

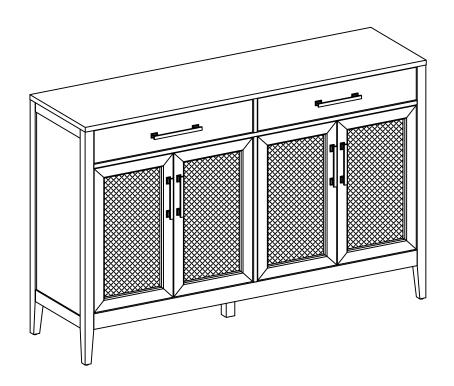

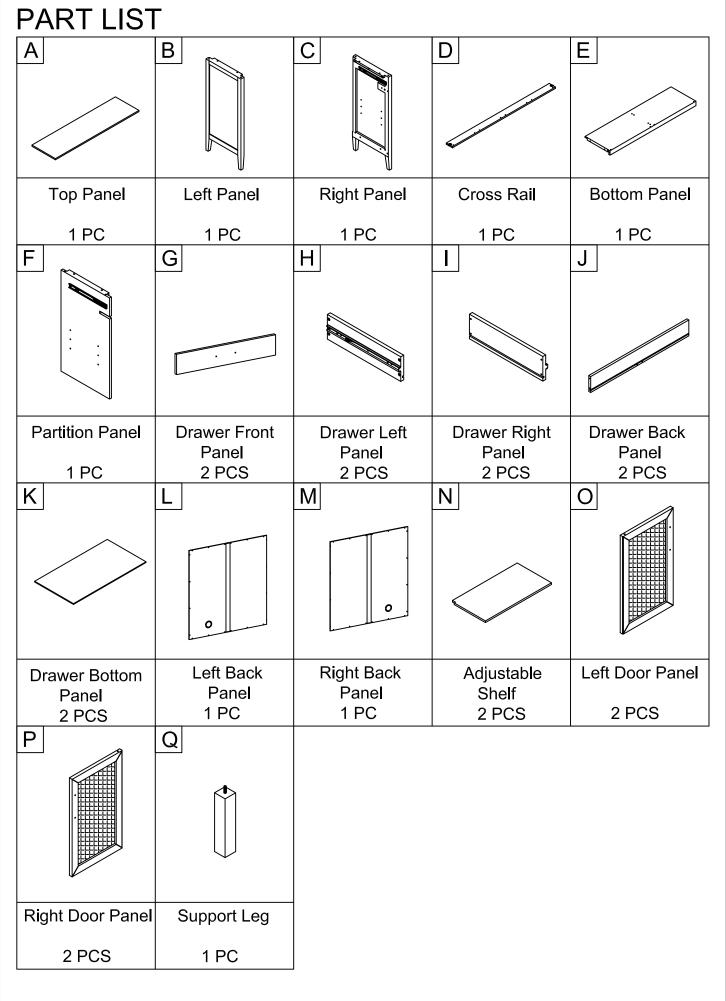

#### HARDWARE LIST #3 #5 #1 #2 #4 Ø1/4"\*11mm Ø1/4"\*25mm Ø1/4"\*13mm 4mm\*90 Ø8\*30mm Spring Washer Flat Washer Allen Wrench **Wood Dowel Short Bolt** 1 PC 10 PCS (Extra 1) 12 PCS (Extra 1) 12 PCS (Extra 1) 18 PCS (Extra 1) #9 #10 #6 #7 #8 Ø1/4"\*51mm 6\*3\*15mm Round Head Long Bolt **Barrel Nut** Drawer Handle Magnet Screw 2 PCS 2 PCS(Extra 1) 2 PCS 4 PCS (Extra 1) 2 PCS (Extra 1) #11 #13 #14 #15 #12 5/32"\*25mm 8\*3\*15mm 8\*4\*25 Door Handle Long Screw Round Shelf Holder **Short Screw** Head Bolt 4 PCS 12 PCS (Extra 1) 16 PCS (Extra 1) 8 PCS (Extra 1) 36 PCS (Extra 1) #16

## ADDITIONAL TOOLS (Not Provided)

Safety Strap Kit


1 SET

Note: It is not recommended to use power tools during assembly.



Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Please do not use tools to assemble this unit unless specifically indicated.

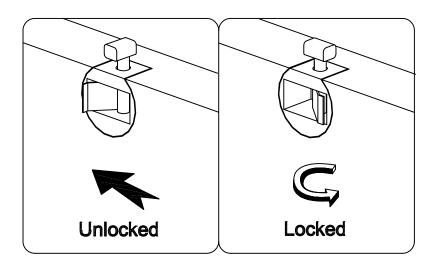


Reference the images above any time the instructions state "lock the hardware"

Note: Be sure to check all hardware is locked when completed.


Step 1. Attach magnets (part #6) to cross rail (part D) using round head screws (part #7) and phillips head screwdriver.
 Attach drawer handles (part #10) to drawer front panels (part G) using round head bolts (part #12) and phillips head screwdriver.

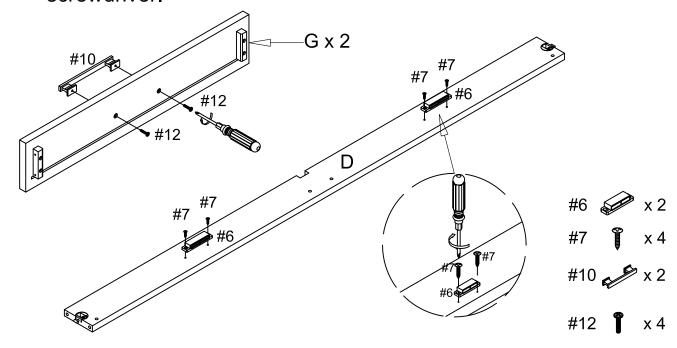


Step 2. Attach door handles (part #11) to door panels (parts O & P) using round head bolts (part #12) and phillips head screwdriver.

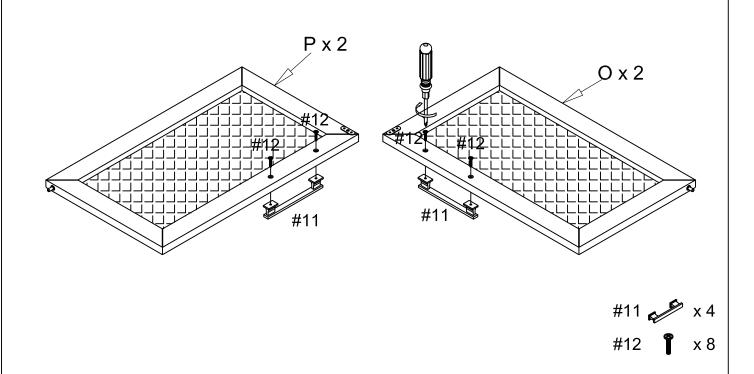

Step 3. Attach drawer panels (parts H & I) to drawer front panels (part G) using long screws (part #13) and phillips head screwdriver. Slide drawer bottom panels (part K) into the grooves of assembled units (parts G, H & I). Attach drawer back panels (part J) to assembled units (parts H, I & K) using long screws (part #13) and phillips head screwdriver.

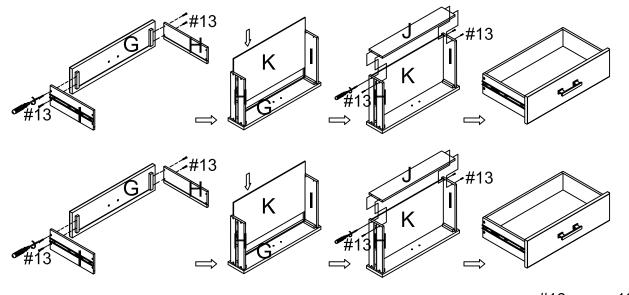


Step 4. Attach partition panel (part F) to the bottom panel (part E) using wood dowels (part #5), long bolts (part #8), barrel nuts (part #9), spring washers (part #2), flat washers (part #3) and allen

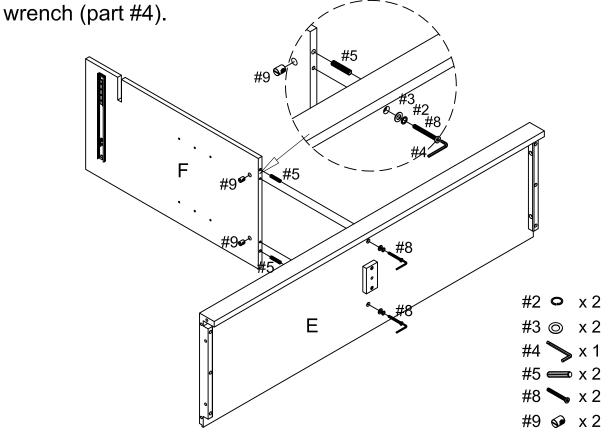


Step 5. Insert cross rail (part D) to partition panel (part F).


Attach panels (parts B & C) to bottom panel (part E) and cross rail (part D) using wood dowels (part #5), short bolts (part #1), spring washers (part #2), flat washers (part #3), allen wrench (part #4) and locked the hardware.

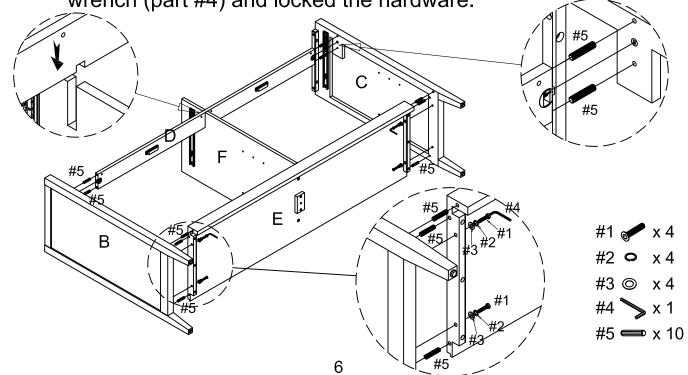


Step 6. Attach support leg (part Q) to bottom panel (part E).

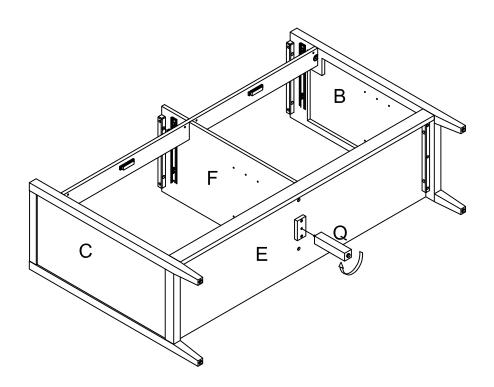

Step 7. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B, C & F) using wood dowels (part #5), short bolts (part #1), spring washers (part #2), flat washers (part #3) and

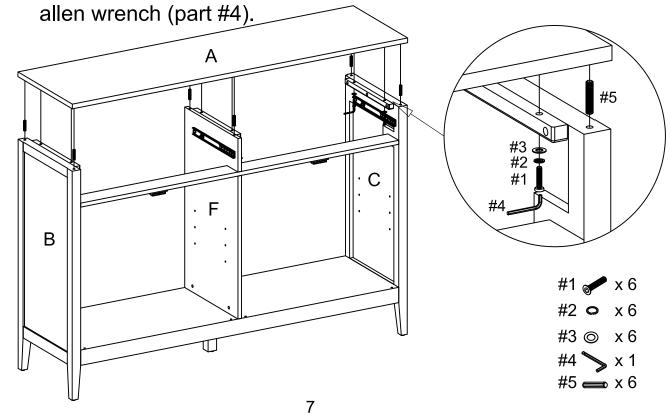


Step 8. Attach back panels (parts L & M) to assembled unit (parts A, B, C, E & F) using short screws (part #15) and phillips head

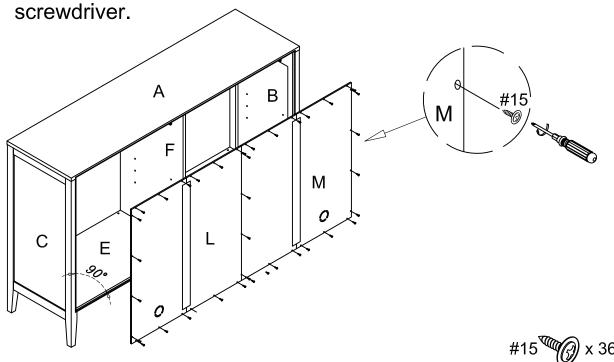

Step 9. Place shelf holders (part #14) into desired position, slide adjustable shelves (part N) and assembled drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.

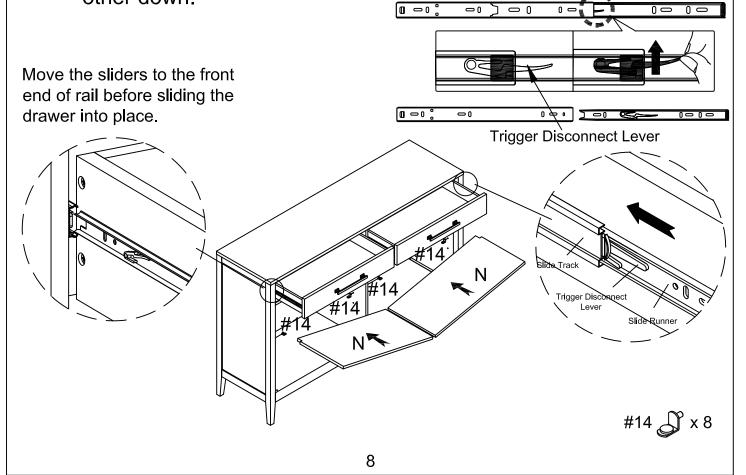


Step 10. Attach door panels (parts O & P) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of cross rail (part D).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. if relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #16) must be installed to prevent tipping damage and / or injury.

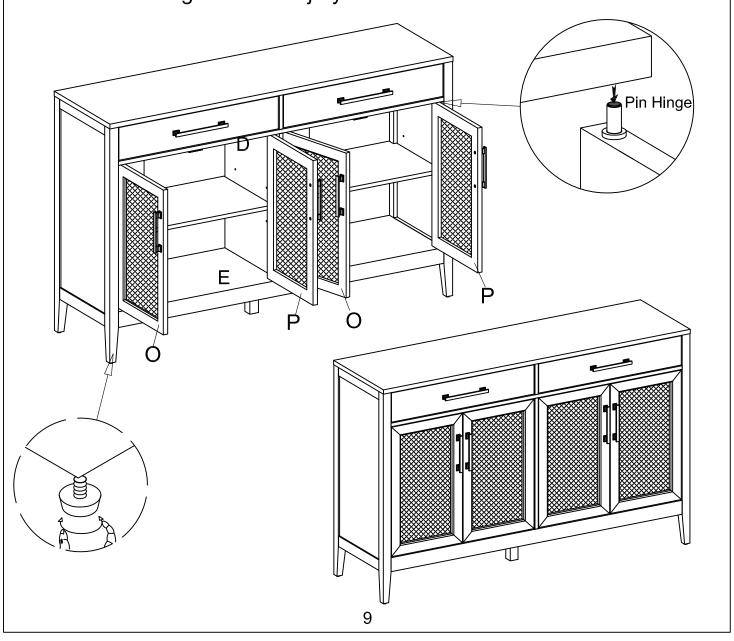


#16	Α	В	С	D	E
		0		William Co.	
			8*3*15mm	8*4*35mm	
Safety Strap Kit	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wa <b>ll</b> Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

### SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

- 1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
- 2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
- 3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

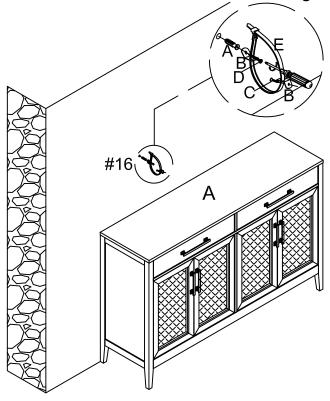

# Children have died from furniture tipover. To reduce the risk of furniture tipover: ALWAYS install tipover restraint provided. For use with letevisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. NEVER allow children to stand, climb or hang on drawers, doors, or shelves. NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers. This is a permanent label. Do not remove!