ASSEMBLY INSTRUCTIONS

Item No: 33180

Description: KG HB-REGENTS PARK

Item No: 33181

Description: KG FB W/SLTS-REGENTS PARK

Item No: 33172


Description: Q/K RAILS-REGENTS PARK

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

# TOOLS REQUIRED (NOT PROVIDED)

#### PHILLIPS SCREWDRIVER



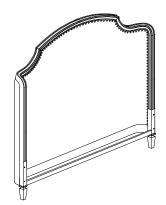


33180 Headboard

PART	PARTS LIST:						
No.	Description	Sketch Quantity					
A	Headboard		1				
В	Legs		2				




## 33181 Footboard

No.	Description	Sketch	Quantity
С	Footboard		1
D	Legs		2
Е	Slats		4
F	Support Legs	0000000	8

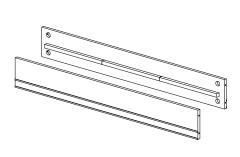

33172 Bed Rails



HARDWARE LIST:						
No.	Description	Sketch	Size	Quantity		
H1	Long Bolt		Ø8 x 90mm	8		
Н2	Arc Washer & Nuts		Ø8 x 18mm	8		
НЗ	Wood Screw	1	Ø4 x 25mm	8		
H4	Open Wrench		12mm	1		

Page 1 of 4

ASSEMBLY INSTRUCTIONS

Item No: 33180


Description: KG HB-REGENTS PARK

Item No: 33181

Description: KG FB W/SLTS-REGENTS PARK

Item No: 33172

Description: Q/K RAILS-REGENTS PARK

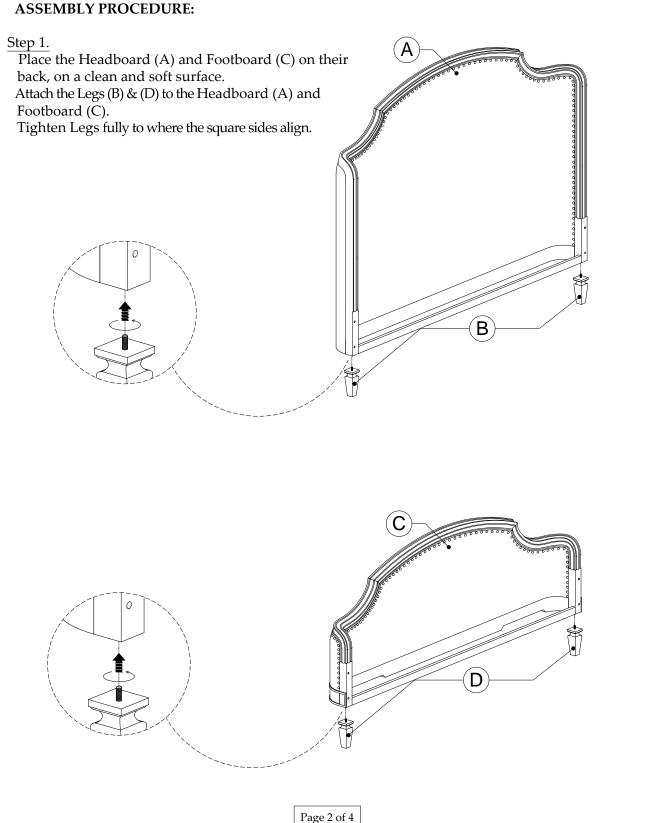



Item No: 33180


Description: KG HB-REGENTS PARK

Item No: 33181


Description: KG FB W/SLTS-REGENTS PARK

Item No: 33172

Description: Q/K RAILS-REGENTS PARK

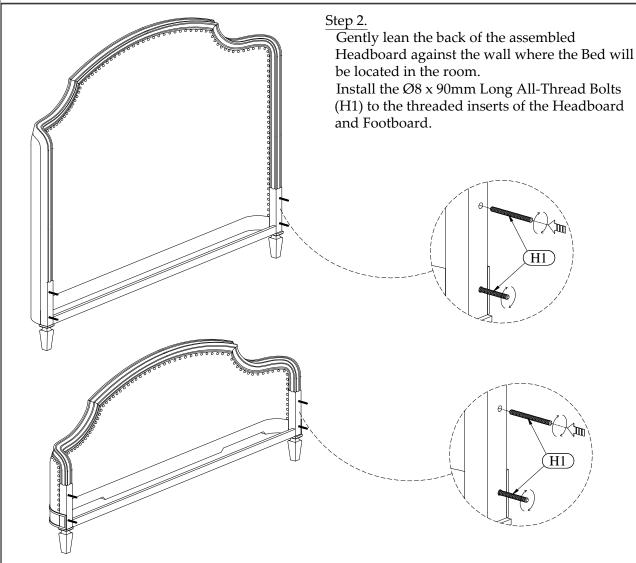

Step 3. Attach the two Support Legs (F) to all four Slats (E).

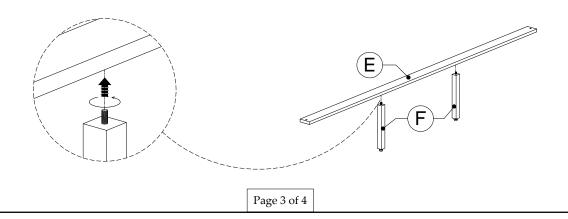



Item No: 33180

Description: KG HB-REGENTS PARK

Item No: 33181

Description: KG FB W/SLTS-REGENTS PARK

Item No: 33172

H2

Description: Q/K RAILS-REGENTS PARK

### Step 4.

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

Carefully position one end of one Bed Rail (G) onto the All-Thread Bolts on the Headboard and connect with the Arc Washers & Nuts (H2). Only partially tighten the Nuts until the Footboard has been connected. Repeat for the other Bed Rail.

Position and connect the Footboard (C) to the other end of the Bed Rails, as in the previous Steps.

Carefully align the
Footboard to be 'square'
with the Headboard.
Using the 12mm Open
Wrench (H4) tighten all
Nuts attaching the Side
Rails to the Headboard
and Footboard.

