

ASSEMBLY INSTRUCTIONS
Item No: 62212
Description: Chairside Table - Lynx Brass

Item No.: 62312
Description: Chairside Table - Lynx Gunmetal

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

ASSEMBLY PROCEDURE:

Step 1. Place one end of the six (6) Metal Tubes (B) onto the mounting tabs of one of the Metal Side Frames (A). Place the tabs of the other Metal Side Frame onto the other end of the Metal Tubes. Secure the Frames and Tubes using the $\frac{3}{4}$ " long Allen Head Bolts (E). Tighten with the Allen Wrench (G or H).

Step 2. With the Table setting upright, peel and apply the Clear Glass Pads (F) around the top edges of the Top frame and around the top edges of the Bottom frame.

Step 3. Carefully place the Top Glass (C) and Bottom Glass (D) onto the Pads.

Note: Use extreme care if moving the Table with the Glass in position.


PARTS LIST:

No.	Description	Sketch	Quantity
A	Metal Side Frame		2
B	Metal Tube		6
C	Top Glass		1
D	Bottom Glass		1

HARDWARE LIST:

No.	Description	Sketch	Size	Quantity
E	Allen Head Bolt		M1/4" x 3/4" L.	24
F	Clear Glass Pad		Ø12 x 2mm	14
G	Allen Wrench		4mm	1
H	Straight Allen Wrench		4mm	1

Note: If the straight Wrench (H) is used in a power drill, use care to not overtighten Bolts and possibly damage parts.

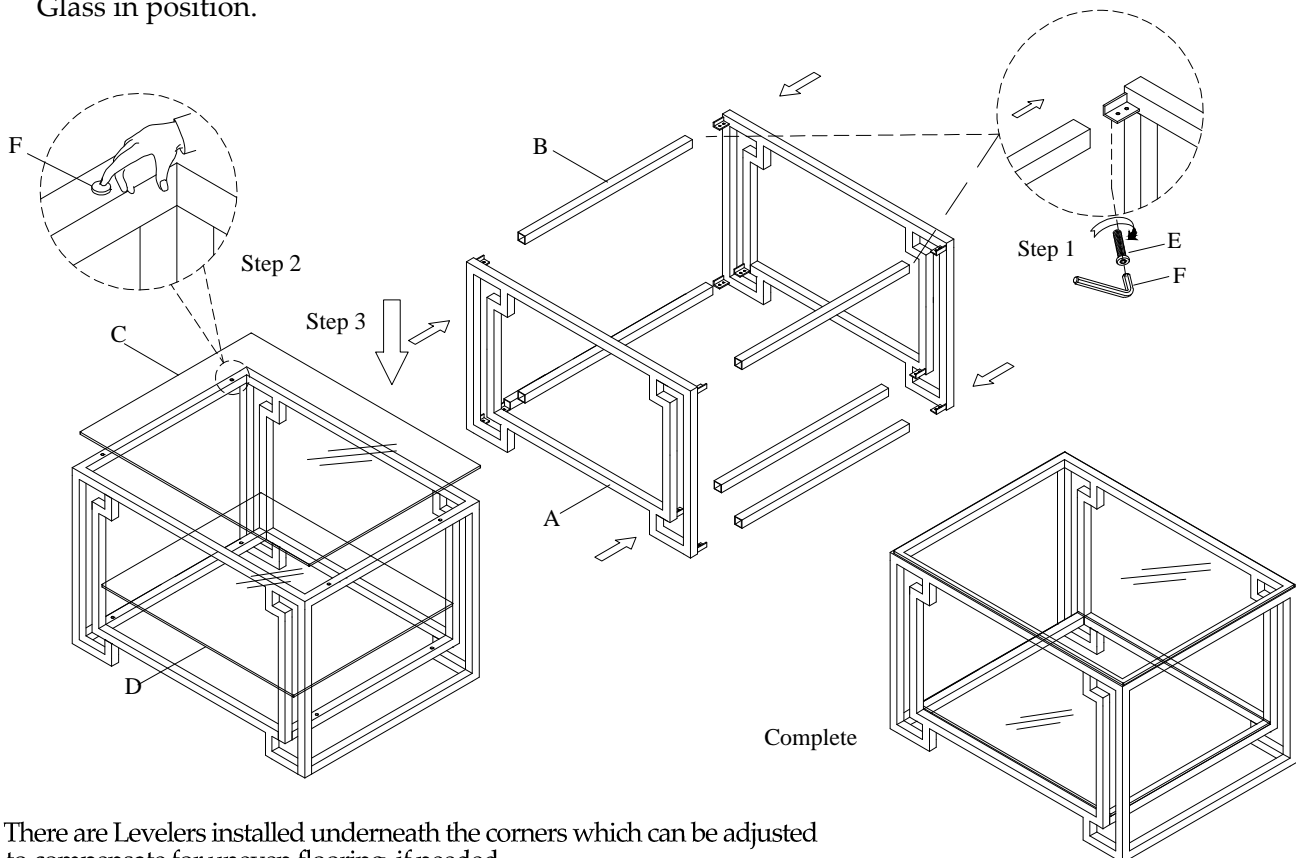

There are Levelers installed underneath the corners which can be adjusted to compensate for uneven flooring, if needed.