

# ASSEMBLY CHEST 3/C - 1/C

**NEW DEAL**


A. Open the drawer and remove the hardware pack. Also remove the bottom drawer of the 3DC and 1DC and attach 3DC and 1DC together using 8x20 bolt sleeve w/ M6x15 bolt. 1DC can be attached to either side. Then use cap covers to cover up outer bolt holes on either side of 3DC and 1DC.

HEAD  $\varnothing$ 8x20 FOR BOLT TBL M6

BOLT TBL M6x15

COVER CAP  $\varnothing$ 10

COVER CAP  $\varnothing$ 10

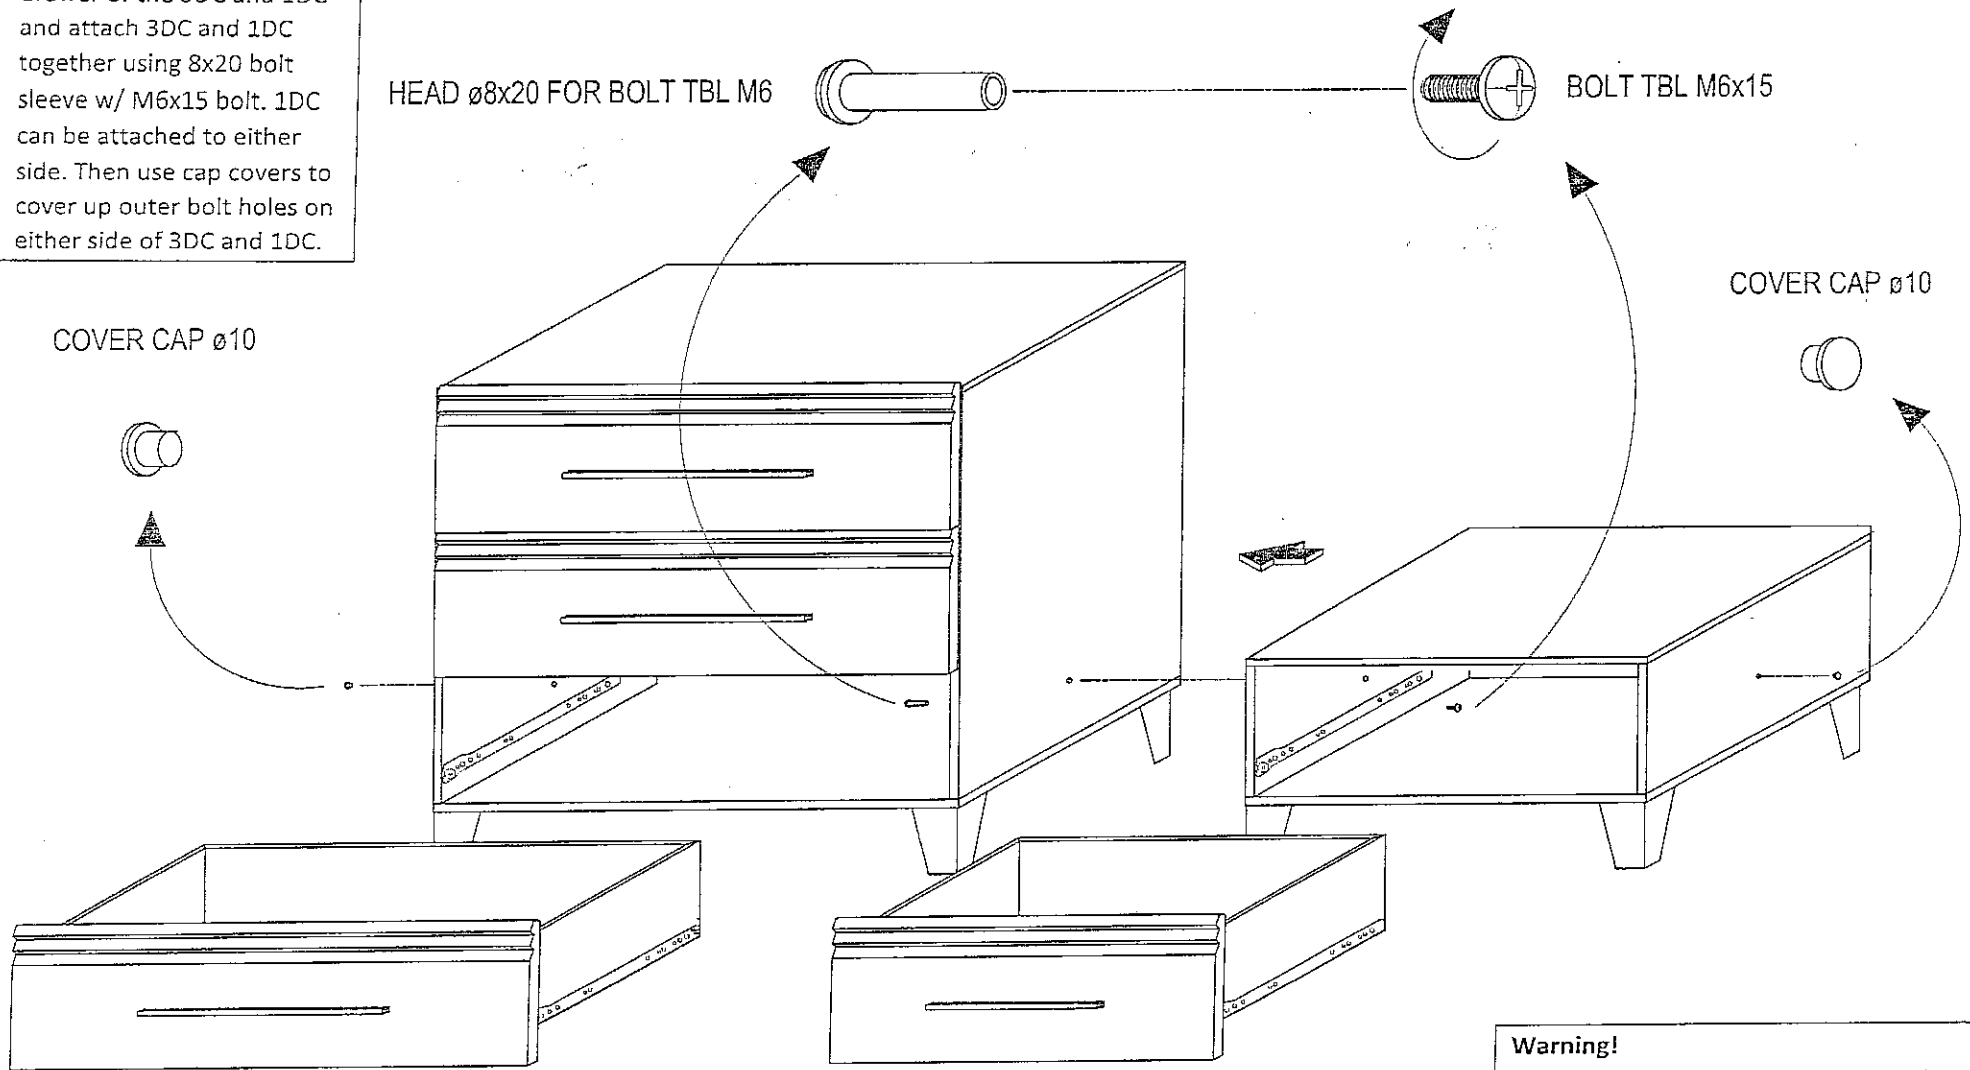

**Warning!**  
The company assumes no responsibility for any injuries if the two chests are not assembled as instructed.