


BED ASSEMBLY

WARNING: DO NOT USE POWER DRILLS FOR THE ASSEMBLY OF THE BOLTS INTO THE INSERTS

NEW DEAL

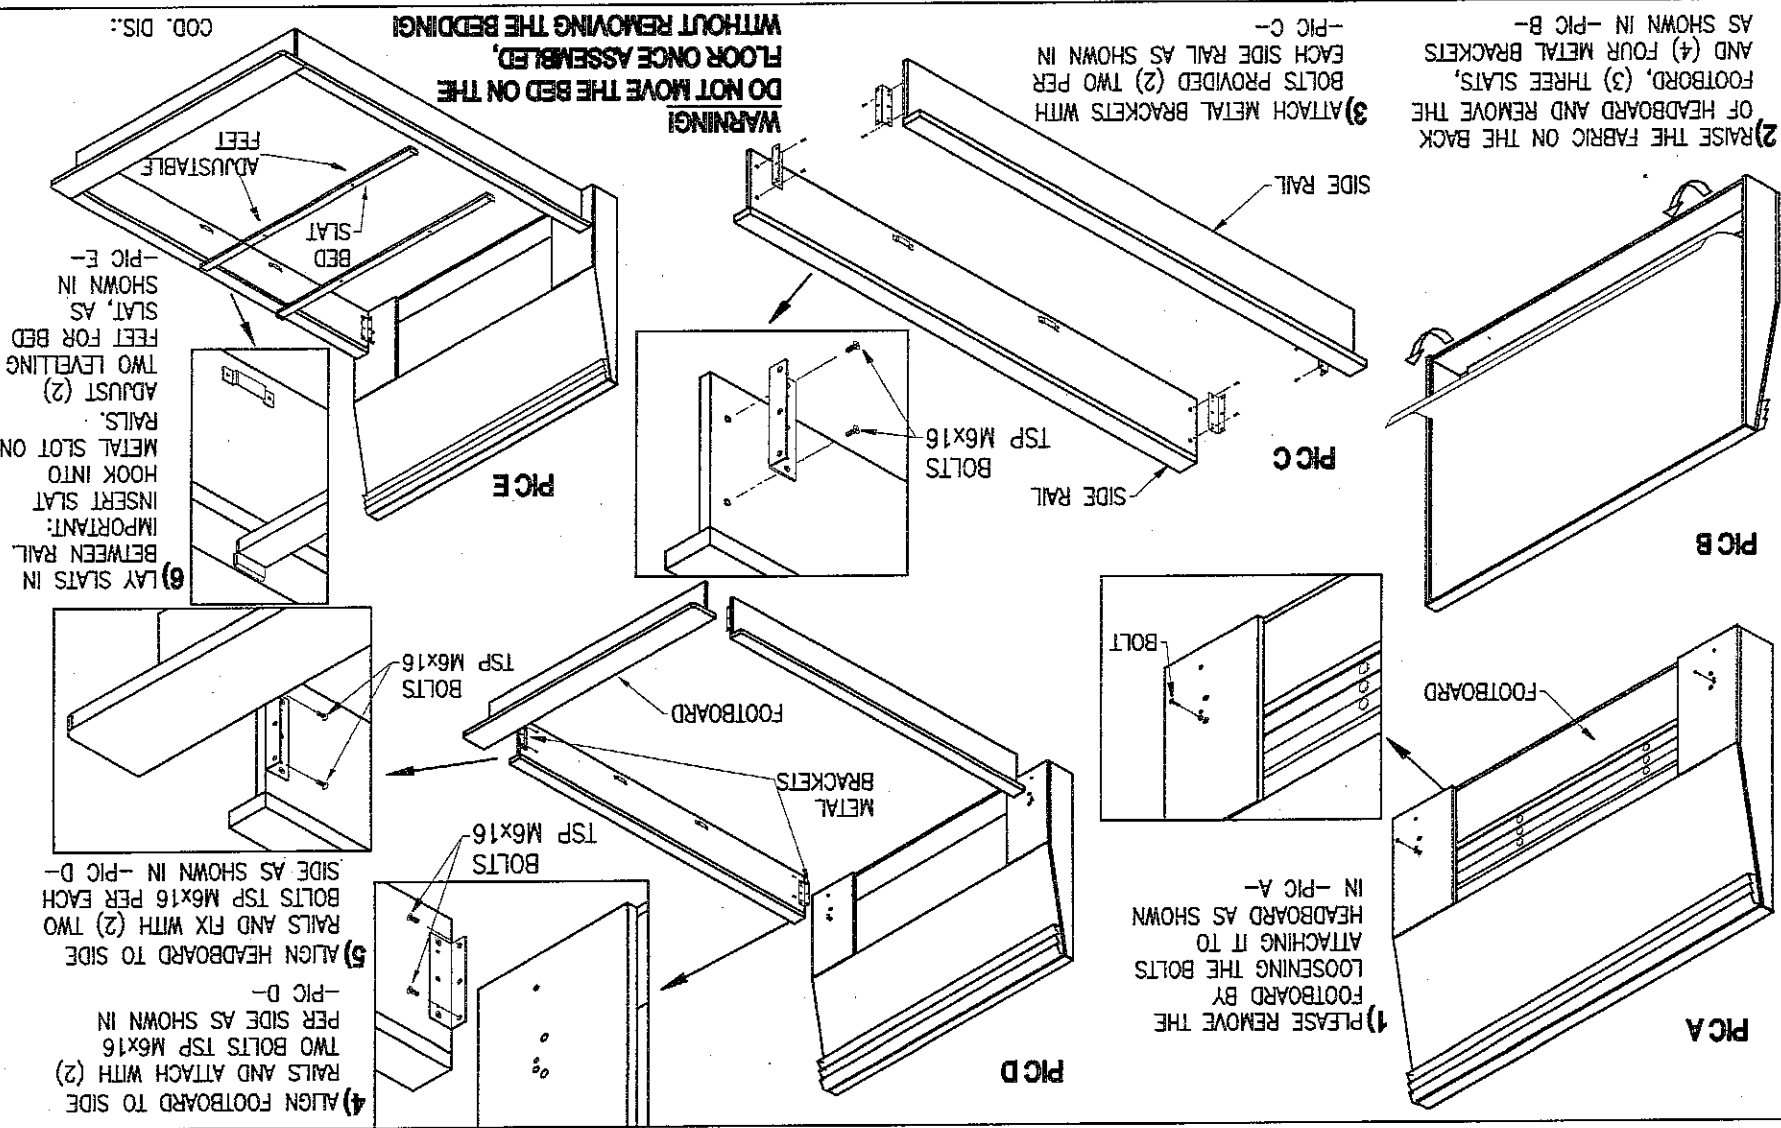

COD. DIS.: