ASSEMBLYINSTRUCTIONS
ItemNo: D-QBKB -127EC/BRN
Description:QUEENKING UPHBED-ELLA CREAM BROWN

Thankyouforpurchasingthisqualityproduct.Besuretocheckallpackingmaterialcarefullyforsmallparts thatmayhavecomelooseinsidethecartonduringshipment.

Step1: AssemblyHB(A),FB(B)withleg(E).

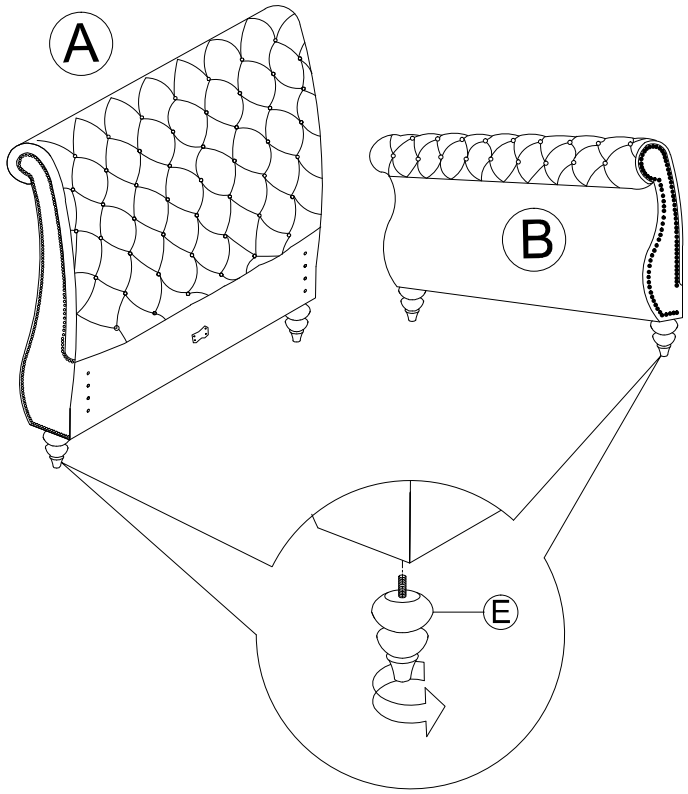

TOOLS REQUIRED (NOT PROVIDED)
Philips Screwdriver

PARTS LIST:

No.	Description	Sketch	Quantity
A	Headboard		1PC
B	Footboard		1PC
C	Side Rail		2PCS
D	Slat		4PCS
E	Leg		4PCS
F1	Center Rail Support Leg		3PCS
F	Slat Support Leg		8PCS
G	Center Rail		1PC

HARDWARE LIST:

No.	Description	Sketch	Size	Quantity
H	Bolt		Ø5/16*2-1/2"	8PCS
I	Bolt		Ø5/16*1-1/2"	19PCS
J	Screw		Ø8*1-1/2"	8PCS
K	Allen Key		Ø5/16*4"	1PC
L	Spring Washer		Ø5/16"	16PCS
M	Flat Washer		Ø5/16"	35PCS
N	Nut		Ø5/16"	8PCS
O	Spanner		Ø5/16"	1PC
P	Straight Allen Key		Ø5/16*4"	1PC
Q	Screw		Ø8*3/4"	4PCS

Note:StraightAllenKey(P)isforusewithapow erdrill .

MADEIN CHINA

ASSEMBLYINSTRUCTIONS
ItemNo: D-QBKB -127EC/BRN
Description:QUEENKING UPHBED-ELLA CREAM BROWN

Thankyouforpurchasingthisqualityproduct.Besuretocheckallpackingmaterialcarefullyforsmallparts thatmayhavecomelooseinsidethecartonduringshipment.

Step2: Assemblysiderails(C)withHB(A)&FB(B).

Note:Don'ttightenallboltsuntiltheendofstep4 .

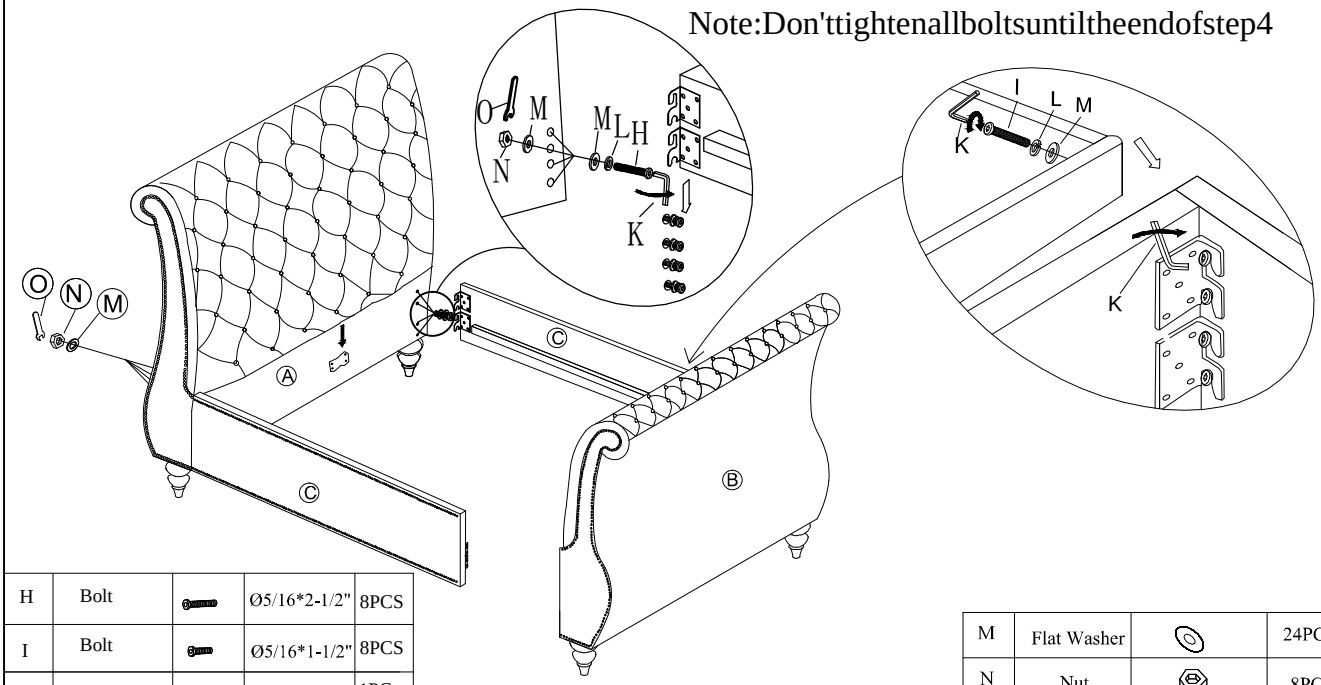

H	Bolt		Ø5/16*2-1/2"	8PCS
I	Bolt		Ø5/16*1-1/2"	8PCS
K	Allen Key			1PC
L	Spring Washer			16PCS

M	Flat Washer		24PCS
N	Nut		8PCS
O	Spanner		1PC

Step 3:Assemblycenterrail(G)withHB(A)&FB(B)

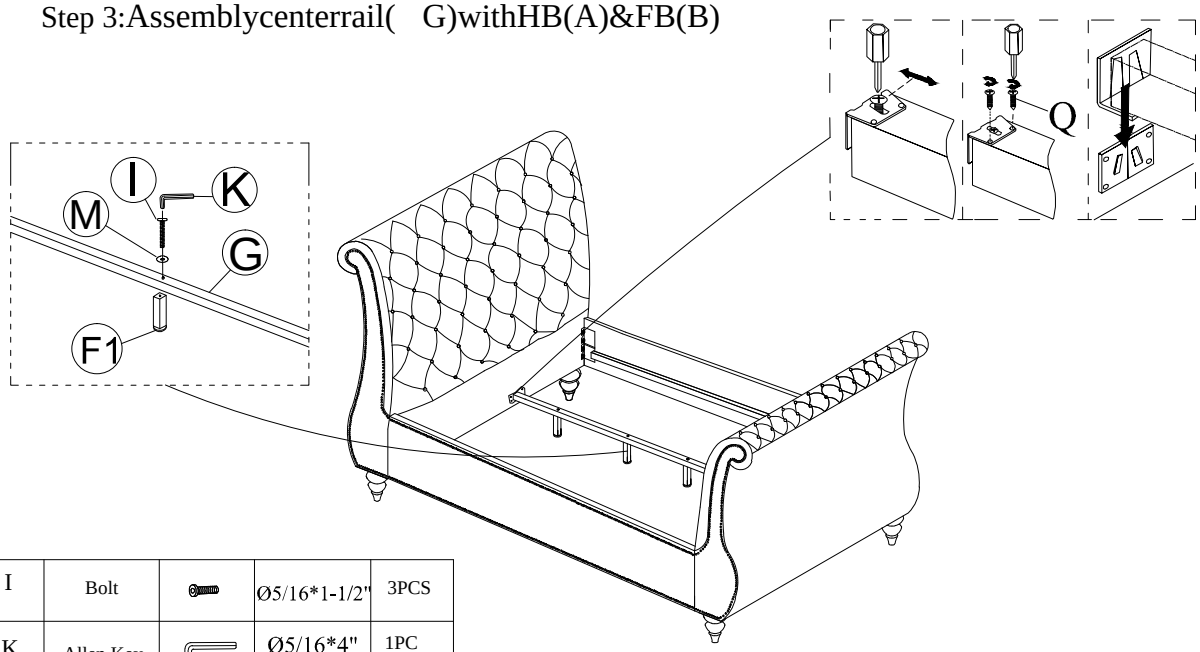

I	Bolt		Ø5/16*1-1/2"	3PCS
K	Allen Key		Ø5/16*4"	1PC
M	Flat Washer		Ø5/16"	3PCS
Q	Screw		Ø8*3/4"	4PCS

ASSEMBLYINSTRUCTIONS
ItemNo: D-QBKB -127EC/ BRN
Description:QUEEN /KING UPHBED-ELLA CREAM/ BROWN

Thankyouforpurchasingthisqualityproduct.Besuretocheckallpackingmaterialcarefullyforsmallparts thatmayhavecomelooseinsidethecartonduringshipment.

Step 4:Assembly slat(D)with side rail(C).

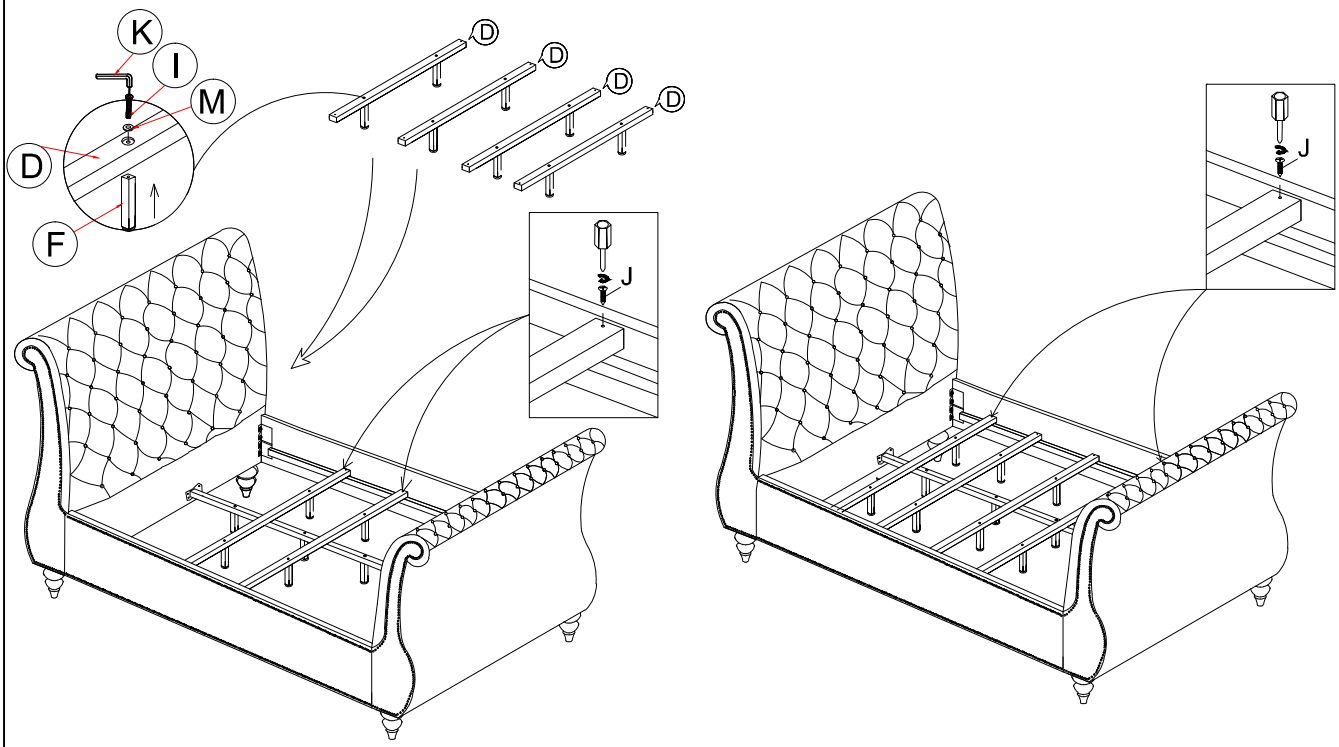

I	Bolt		Ø5/16*1-1/2"	8PCS
K	Allen Key		Ø5/16*4"	1PC
M	Flat Washer		Ø5/16"	8PCS
J	Screw		Ø8*1-1/2"	8PCS

Step 5:Completed assembly for a regular bed.

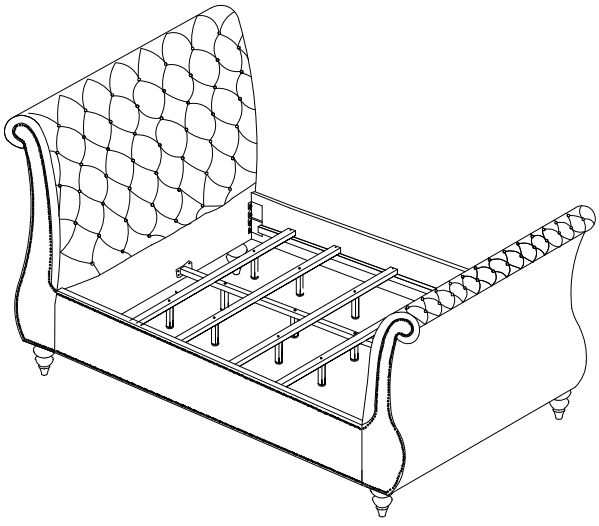

MADEIN CHINA