


ASSEMBLY INSTRUCTIONS

TION" ITEM NO.: 2638-03 & 04


DRAWER DRESSER & RECTANGULAR MIRROR - HANOVER

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.

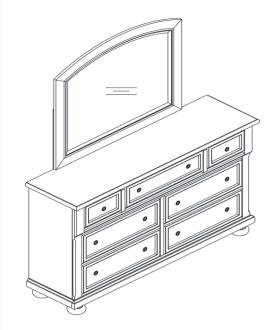



FARTS LIST.						
NO	DESCRIPTION	SKETCH	QTY			
A	DRAWER DRESSER		1 PC			
В	BUN FEET		4 PCS			
С	CENTER SUPPORT LEG		1 PC			
D	RECTANGULAR MIRROR		1 PC			
Е	MIRROR SUPPORT		2 PCS			



HARDWARE LIST:


THAT WALL LIST.							
VO	DESCRIPTION	SKETCH	SIZE	QTY			
a	Allen Key	1	4 x 74 x 29mm	1 PC			
b	Bolt	<i>)</i>	§ 1/4"x 11.5 x 32mm	8 PCS			
С	Spring Washer	0	§ 1/4"x § 11x 2mm T	8 PCS			
d	Flat Washer	0	∲ 1/4"x ∲ 18 x 2mm T	8 PCS			
e	TIPPING RESTRAINT			1 set			
f	STRAIGHT ALLEN KEY		4*100mm	1PC			
	b c d	a Allen Key b Bolt c Spring Washer d Flat Washer e TIPPING RESTRAINT	Allen Key b Bolt c Spring Washer d Flat Washer e TIPPING RESTRAINT	NO DESCRIPTION SKETCH SIZE a Allen Key 4 x 74 x 29mm b Bolt \$ 1/4"x 11.5 x 32mm c Spring Washer \$ 1/4"x \$ 11x 2mm T d Flat Washer \$ 1/4"x \$ 18 x 2mm T e TIPPING RESTRAINT			

STEP 1: Attach bun feet(B) & center support leg (C) to the bottom of drawer dresser (A).

STEP 2: With another person's assistance, lift the mirror (D) and attach mirror support (E) into position on top of the dresser. Secure the mirror in place by using allen key (a), bolt (b), spring washer (c), flat washer (d).

Important note:

- 1. The furniture tipping restraint is stapled to the back of the dresser.
- 2. The hardware bag is packed with mirror.

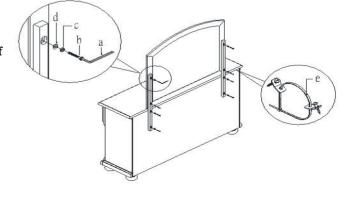

Page 1 of 1 MADE IN VIETNAM