









Assembly Instructions





BDWOOHBK/BDWOOFBK/BDWOORSQK KENTON - KING BED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


NO.		PARTS LIST	Q' TY
A		Headboard	1
B		Post leg (Right)	1
C		Post leg (Left)	1
D		Bottom rail	1
E		Footboard	1
F		Side rails	2
G		Slats	4
H		Slat Support legs	8

NO.		HARDWARE LIST	Q' TY
1		Φ5/16" x 18 x 1-3/4"L Bolt	2
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mmT Flat washer	
		Allen wrench (4mm)	1
		Straight allen key 4mm*80mm L	1
2		Φ5/16" x 18 x 1-3/4"L Bolt	8
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mmT Flat washer	
5		Φ8 x Φ4 x 1"L Screw	8

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER 


Please noted : Please do not tighten bolts 100% until after assembly is complete.

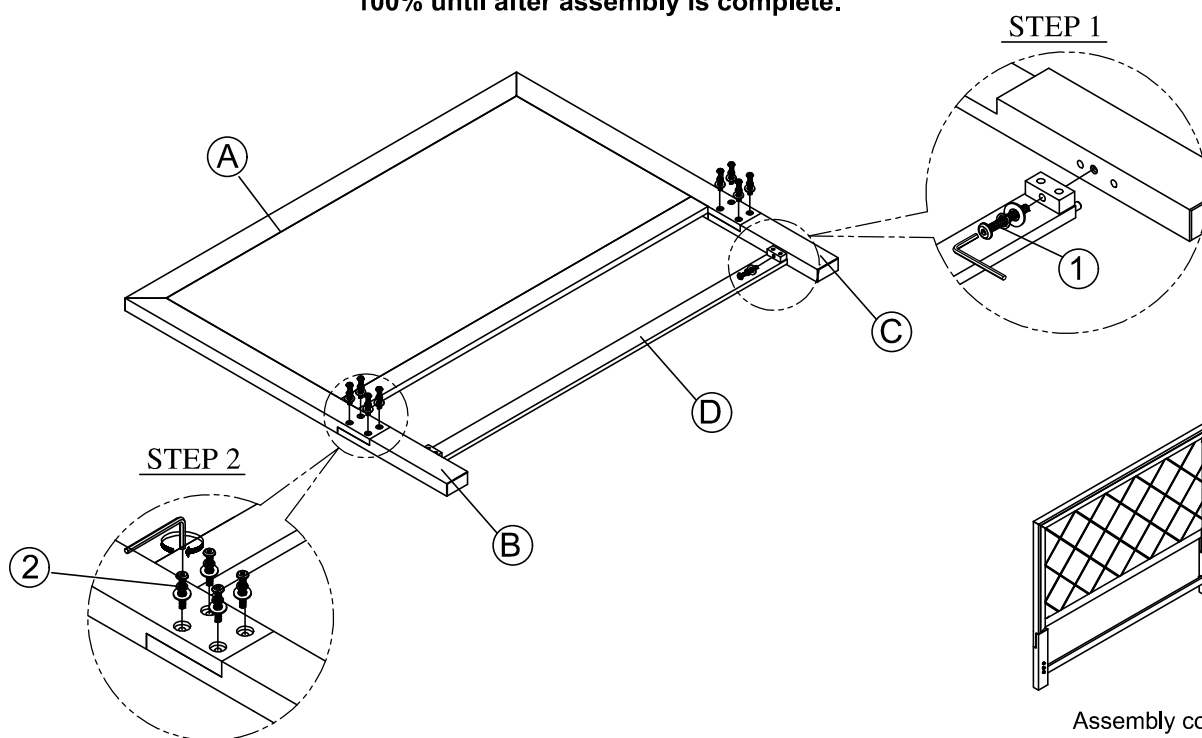

Assembly completed
MADE IN VIETNAM

Assembly Instructions

BDWOOHBK/BDWOOFBK/BDWOORSQK
KENTON - KING BED

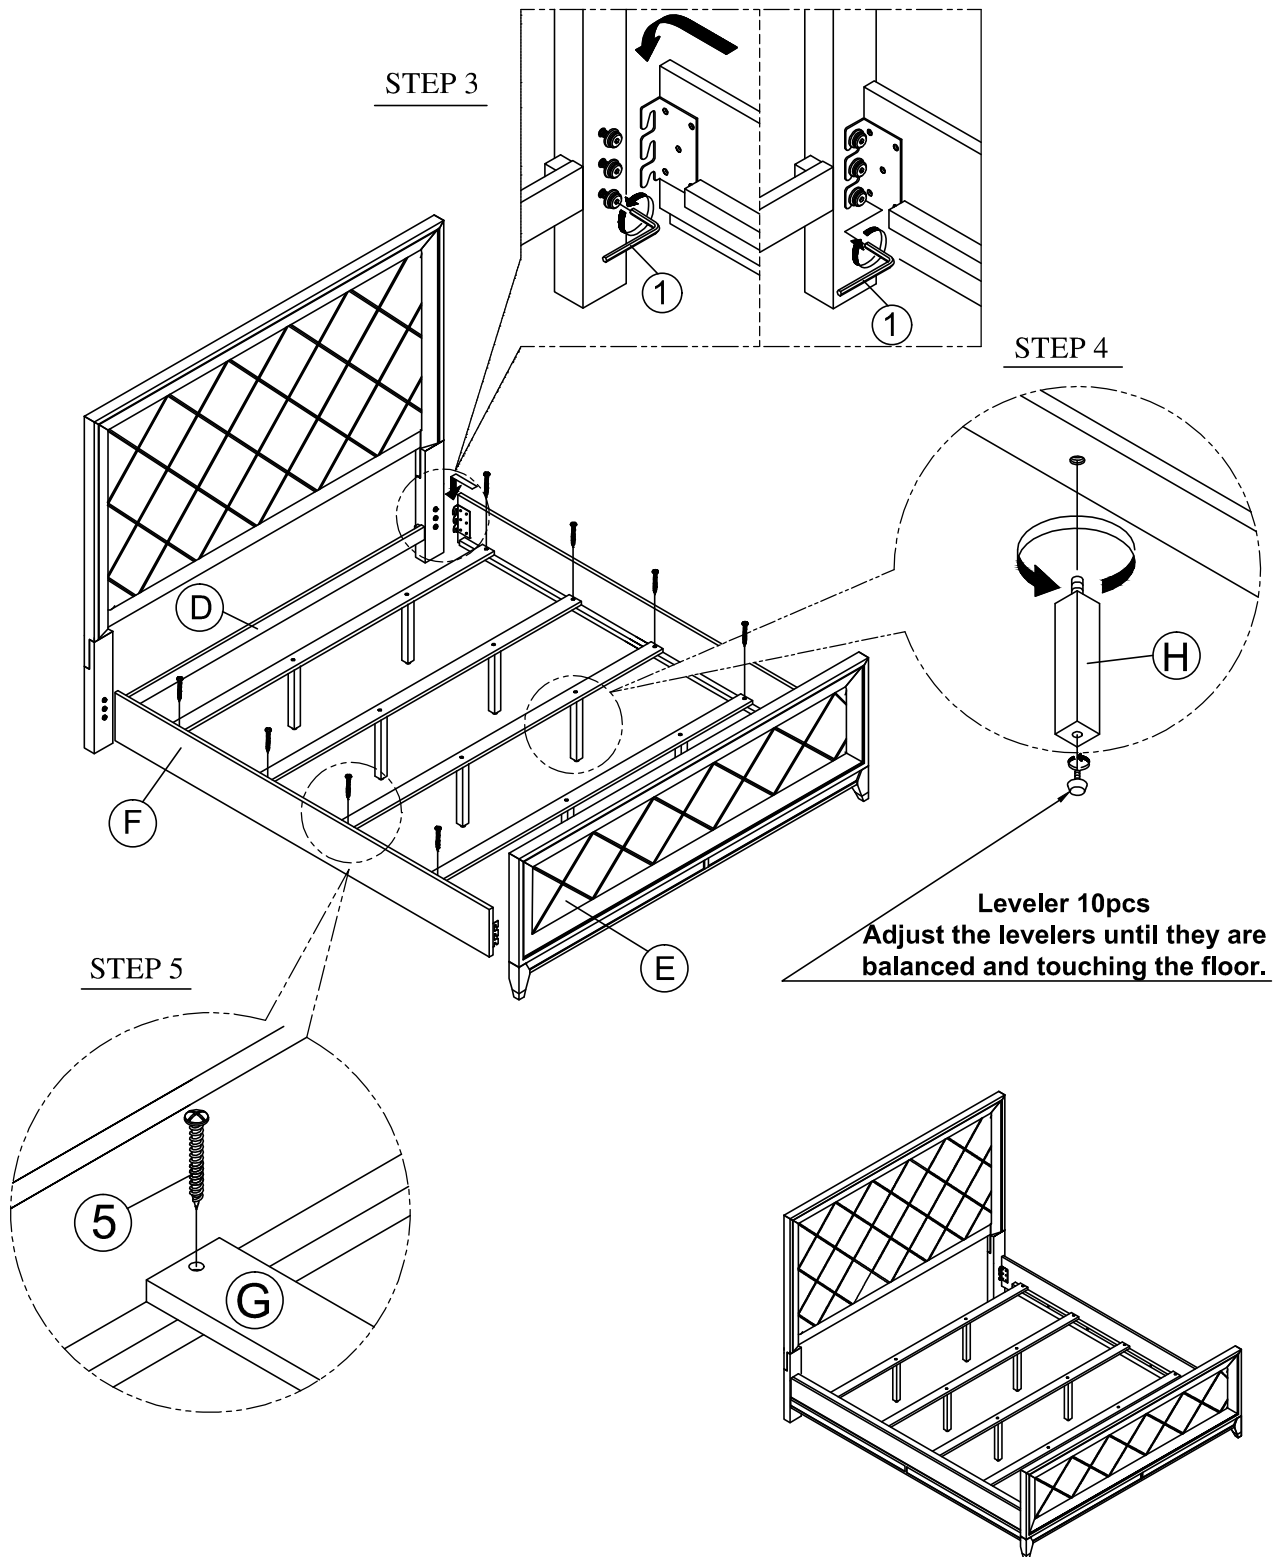

Assembly completed
MADE IN VIETNAM

Assembly Instructions









BDWOOHBQ/BDWOOFBQ/BDWOORSQK





KENTON - QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions thoroughly before unpacking assembly parts.


1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

NO.		PARTS LIST	Q' TY
A		Headboard	1
B		Post leg (Right)	1
C		Post leg (Left)	1
D		Bottom rail	1
E		Footboard	1
F		Side rails	2
G		Slats	4
H		Slat Support legs	4


NO.		HARDWARE LIST	Q' TY
1		Φ5/16" x 18 x 1-3/4"L Bolt	2
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mmT Flat washer	
		Allen wrench (4mm)	1
		Straight allen key 4mm*80mm L	1
2		Φ5/16" x 18 x 1-3/4"L Bolt	8
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mmT Flat washer	
5		Φ8 x Φ4 x 1"L Screw	8

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER




Please noted : Please do not tighten bolts 100% until after assembly is complete.

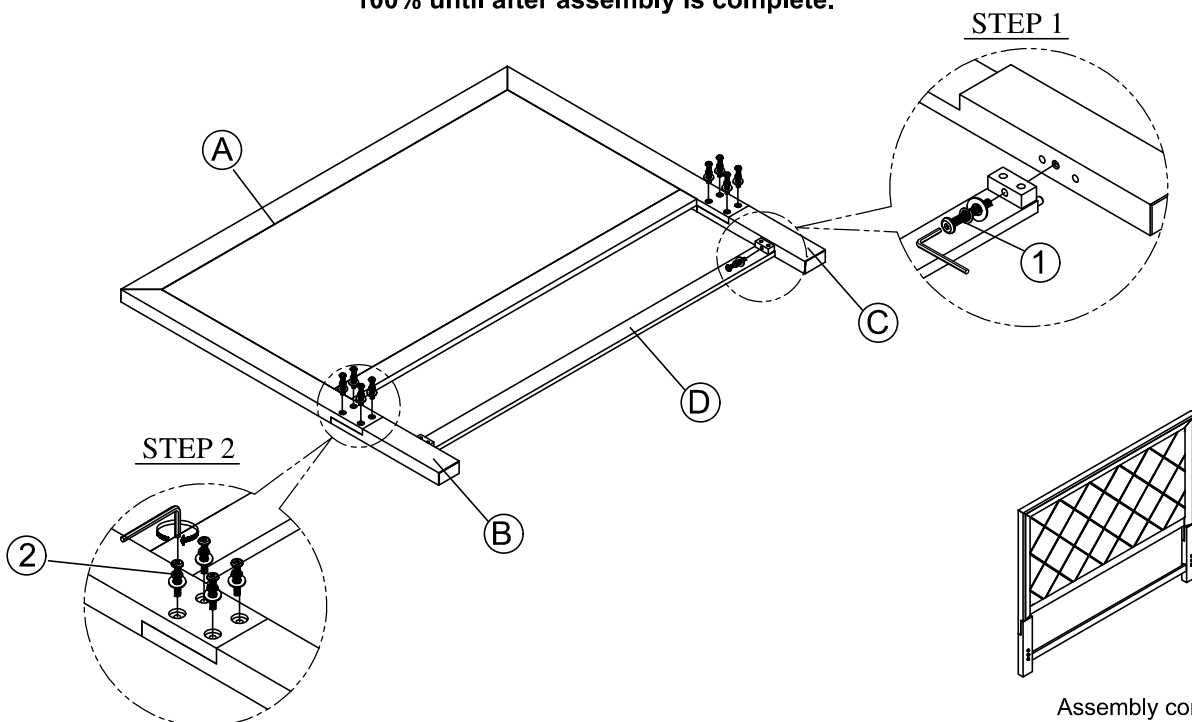

Assembly completed
MADE IN VIETNAM

Assembly Instructions

BDWOOHBQ/BDWOOFBQ/BDWOORSQK
KENTON - QUEEN BED

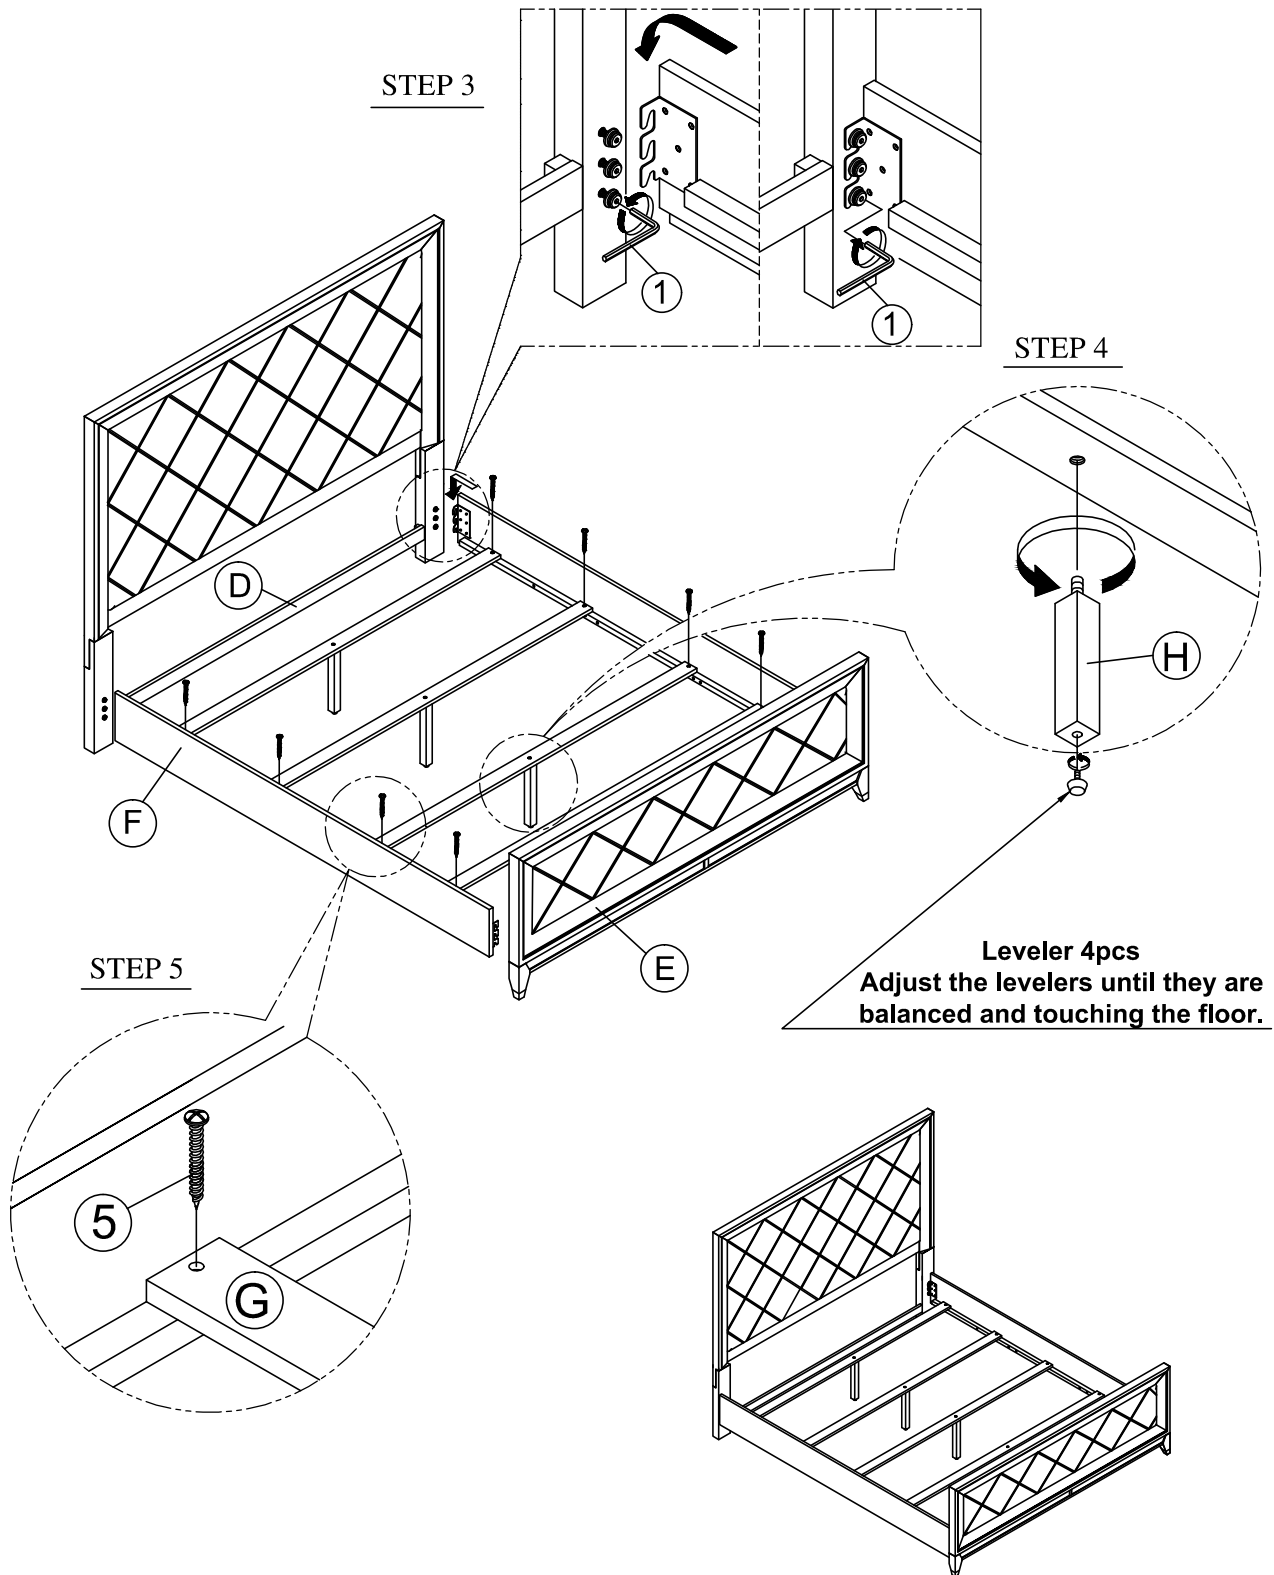

Assembly completed
MADE IN VIETNAM



Assembly Instructions

BDWOONS - KENTON - NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.




NO.	PARTS LIST		Q' TY
A		Cabinet body	1
B		Legs	4

NO.	HARDWARE LIST		Q' TY
1		Φ5/16" x 18 x 2-1/8" L Bolt	8
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mm T Flat washer	
		Allen wrench (4mm)	1
		Straight allen key 4mm*80mm L	1

Please noted : Please do not tighten bolts 100% until after assembly is complete.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

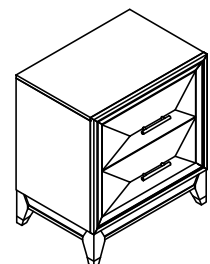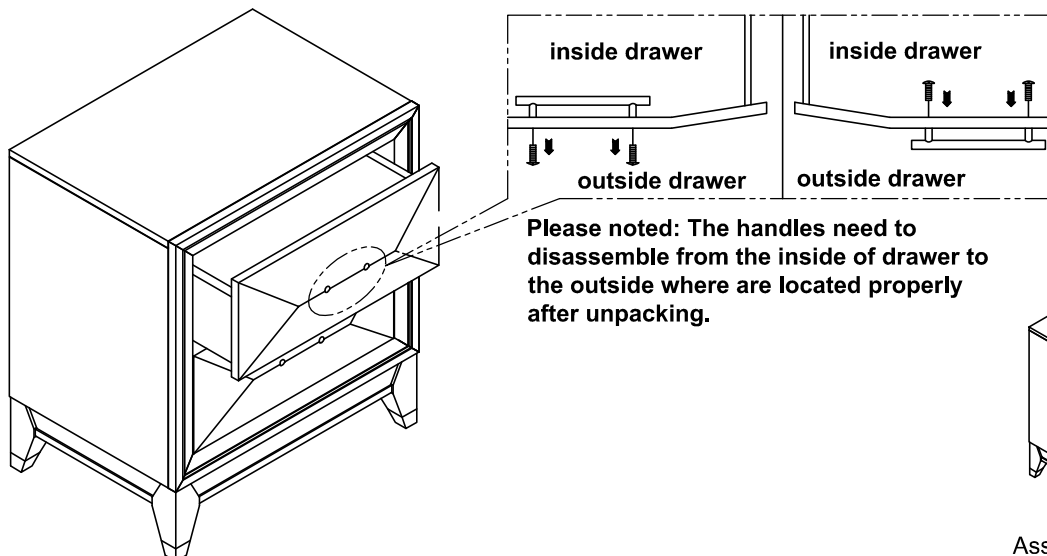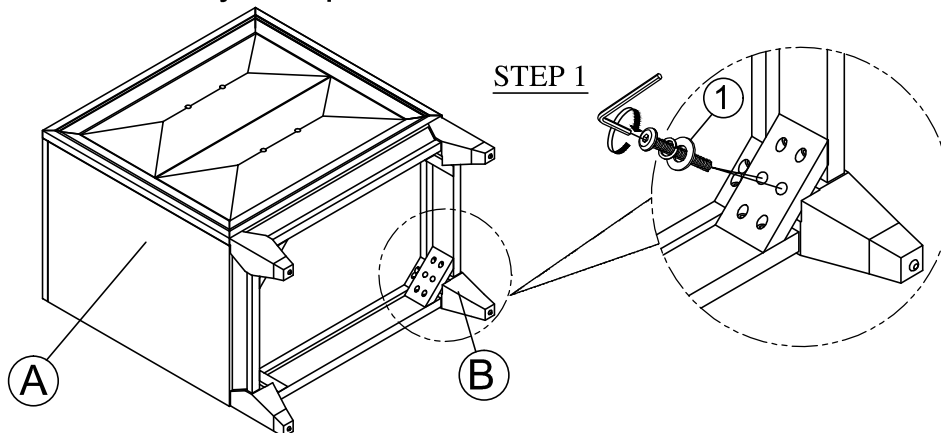

Assembly completed
MADE IN VIETNAM



Assembly Instructions

CTWOOC - KENTON - CHEST




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


NO.	PARTS LIST		Q' TY
A		Cabinet body	1
B		Legs	4

Please noted : Please do not tighten bolts 100% until after assembly is complete.


NO.	HARDWARE LIST		Q' TY
1		Φ5/16" x 18 x 2-1/8" L Bolt	8
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mm T Flat washer	
		Allen wrench (4mm)	1
2		Straight allen key 4mm*80mm L	1
		Furniture tipping restraint	1

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER




STEP 1

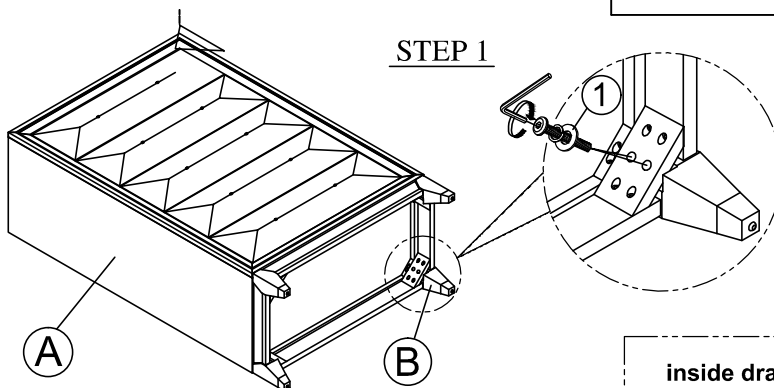


STEP 2

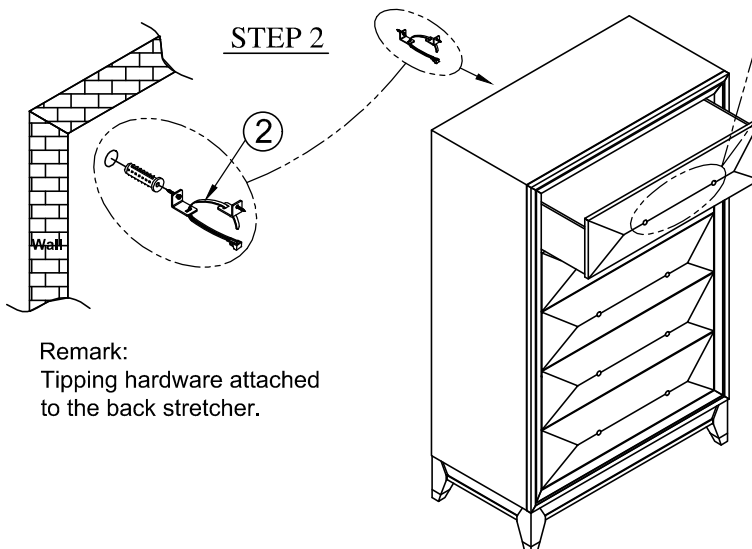

Remark:
Tipping hardware attached to the back stretcher.

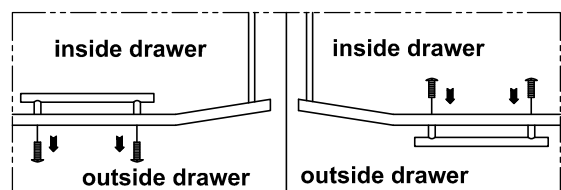

Please noted: The handles need to disassemble from the inside of drawer to the outside where are located properly after unpacking.

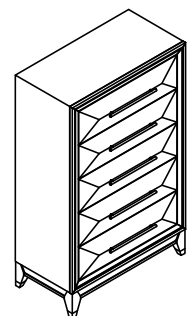

Assembly completed
MADE IN VIETNAM




Assembly Instructions







BDWOODR - KENTON - DRESSER

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



NO.	PARTS LIST	Q' TY
A	 Cabinet body	1
B	 Legs	4
C	 Support Legs	1

NO.	HARDWARE LIST	Q' TY
1	 $\Phi 5/16"$ x 18 x 2-1/8" L Bolt	8
	 $\Phi 5/16"$ x $\Phi 13$ Spring washer	
	 $\Phi 5/16"$ x $\Phi 22$ x 2mm T Flat washer	
	 Allen wrench (4mm)	1
	 Straight allen key 4mm*80mm L	1
2	 Furniture tipping restraint	1


Please noted : Please do not tighten bolts 100% until after assembly is complete.

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER

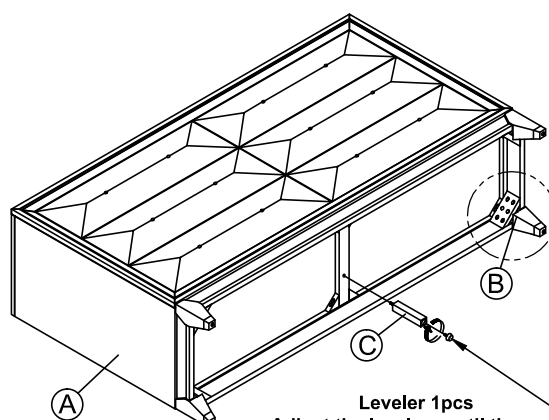


Leveler 1pcs
Adjust the levelers until they are balanced and touching the floor.

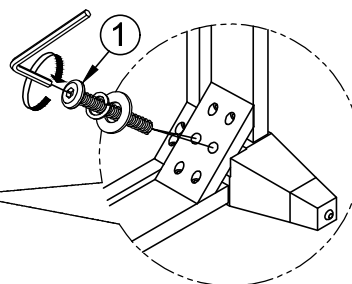



STEP 1

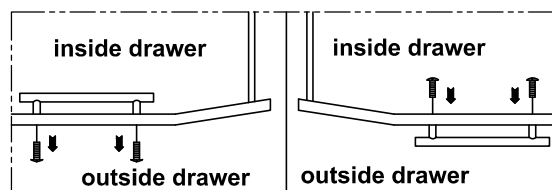

Please noted: The handles need to disassemble from the inside of drawer to the outside where are located properly after unpacking.

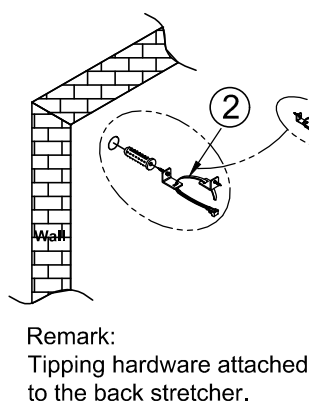

Remark:
Tipping hardware attached to the back stretcher.

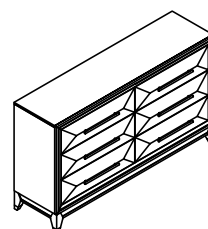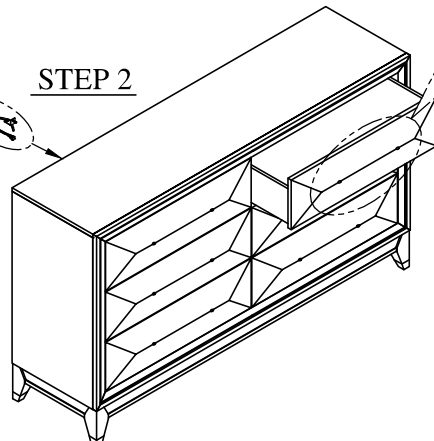

Assembly completed
MADE IN VIETNAM

Assembly Instructions




BDWOOMR - KENTON - MIRROR





BDWOODR - KENTON - DRESSER

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.



1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

NO.	PARTS LIST		Q' TY
A		Mirror	1
B		Support slats	2
C		Dresser	1

NO.	HARDWARE LIST		Q' TY
1		Φ5/16" x 18 x 1-1/2" L Bolt	4
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mm T Flat washer	
		Allen wrench (4mm)	1
		Straight allen key 4mm*80mm L	1
2		Φ5/16" x 18 x 1-1/2" L Bolt	4
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mm T Flat washer	

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

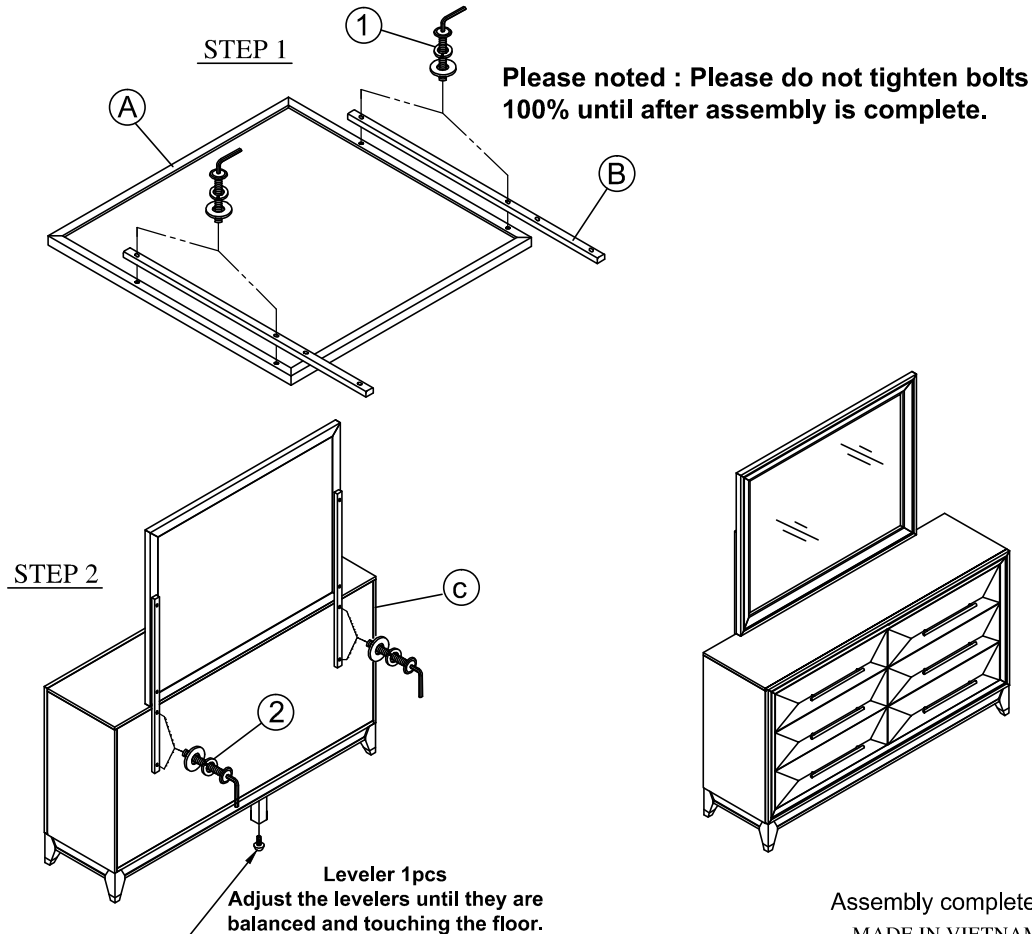



Assembly Instructions

CTWOOTV - KENTON - TV CHEST




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



NO.	PARTS LIST		Q' TY
A		Cabinet body	1
B		Legs	4

Please noted : Please do not tighten bolts 100% until after assembly is complete.

NO.	HARDWARE LIST		Q' TY
1		Φ5/16" x 18 x 2-1/8" L Bolt	8
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mm T Flat washer	
		Allen wrench (4mm)	1
2		Straight allen key 4mm*80mm L	1
		Furniture tipping restraint	1

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

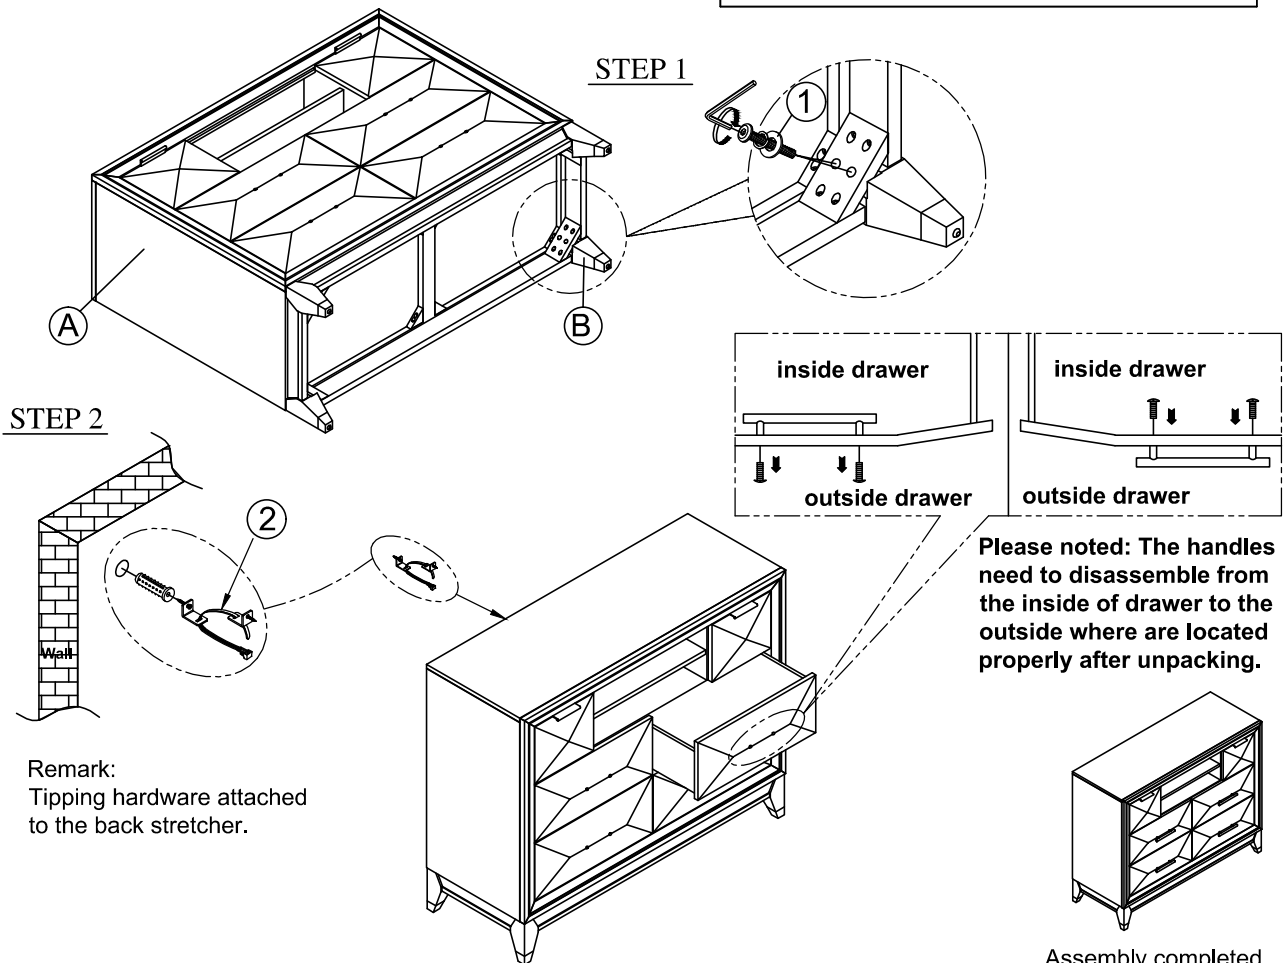



Assembly Instructions

BDWOOB - KENTON - BENCH

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



NO.	PARTS LIST		Q' TY
A		Seat cushion	1
B		Legs	4

NO.	HARDWARE LIST		Q' TY
1		Φ5/16" x 18 x 2-1/8" L Bolt	8
		Φ5/16" x Φ13 Spring washer	
		Φ5/16" x Φ22 x 2mm T Flat washer	
		Allen wrench (4mm)	1
		Straight allen key 4mm*80mm L	1

Please noted : Please do not tighten bolts 100% until after assembly is complete.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

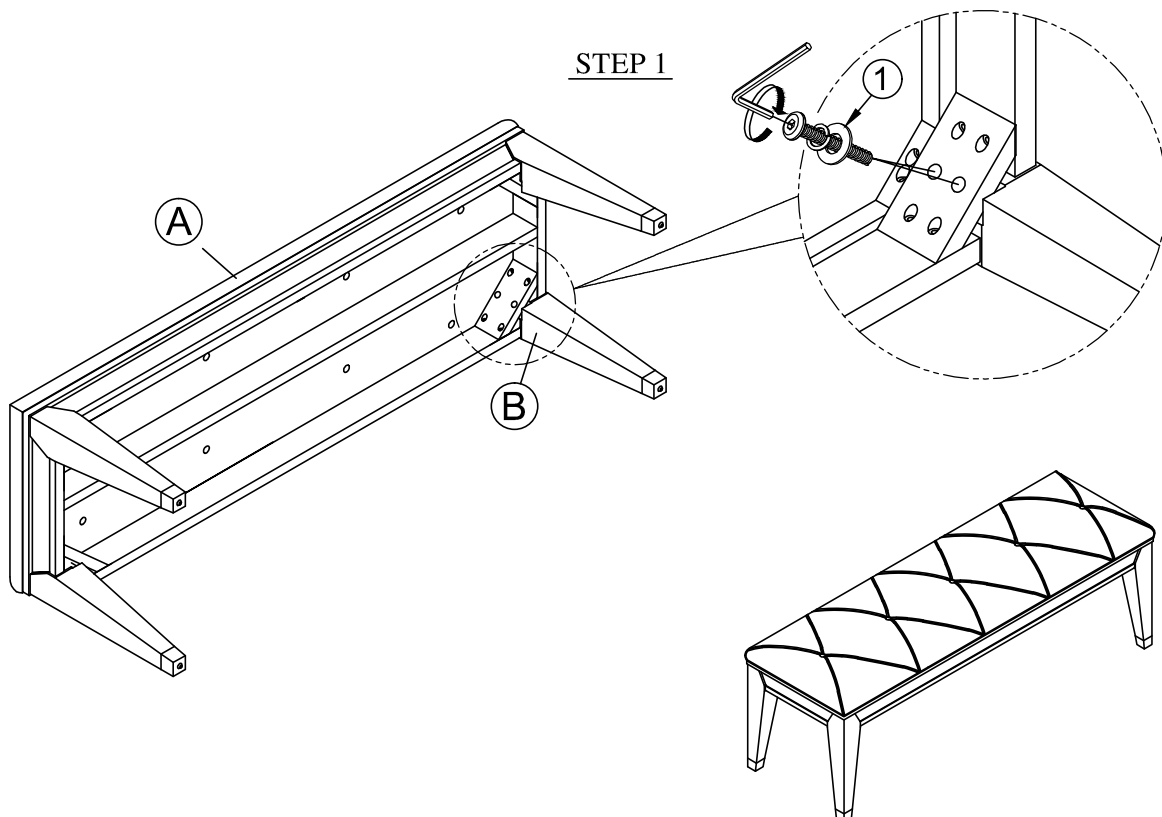

Assembly completed
MADE IN VIETNAM