

ASSEMBLY INSTRUCTIONS

Item No:D-QB/KB-128DC/GS/RBR/RCH/ZWFM/ZWFS

Description: QUEEN/KING UPH BED MANDARIN-CARBON/ SANDSTONE/BRONZF/GRAY/MIRAGE/SUNLIGHT


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

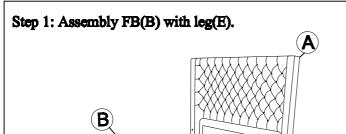

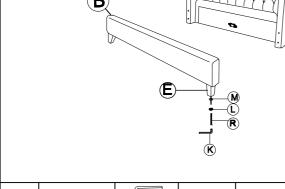

K	Allen Key			1PC
R	Bolt	Ø _{remen}	Ø5/16 *3 "	2PCS
L	Spring Washer	Q		2PCS
М	Flat Washer	0		2PCS

Step 2: Assembly bolts(H) with HB(A)&FB(B).

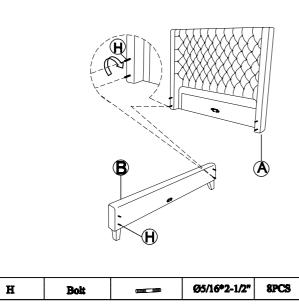

TOOLS REQUIRED (NOT PROVIDE)

Philips Screwdriver

PARTS LIST:						
No.	Description	Sketch	Quantity			
A	Headboard		1PC			
В	Footboard		1PC			
С	Side Rail		2PCS			
D	Slat		4PCS			
E	Footboard Leg	Ŷ	2PCS			
F1	Center Rail Support Leg	Ū	3PCS			
F	Slat Support Leg		8PCS			

1PC

HARDWARE LIST.

Center Rail

HARDWARE LIST:							
No.	Description	Sketch	Size	Quantity			
H	Bolt	grave profit	Ø5/16°4°	8PCS			
1	Bolt	9	Ø5/16*1-1/2*	11PCS			
J	Screw	4 mma>	Ø8*1-1/2*	8PCS			
K	Allen Key		Ø5/16*4"	1PC			
L	Spring Washer	٩	Ø5/16"	10PCS			
М	Flat Washer	0	Ø5/16"	21PCS			
N	Nut	•	Ø5/16"	8PCS			
0	Spanner	<i></i>	Ø5/16"	1PC			
P	Straight Allen Key	•	Ø5/16*4"	1PC			
Q	Screw	(Ø8*3/4"	4PCS			
R	Bolt	(O)mananan	Ø5/16*4*	2PCS			

Note: Straight Allen Key(P) is for use with a power drill.


PAGE 1 OF 3 MADE IN CHINA

ASSEMBLY INSTRUCTIONS

Item No:D-QB/KB-128DC/GS/RBR/RCH/ZWFM/ZWFS Description:QUEEN/KING UPH BED MANDARIN-CARBON/

SANDSTONE/BRONZF/GRAY/MIRAGE/SUNLIGHT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

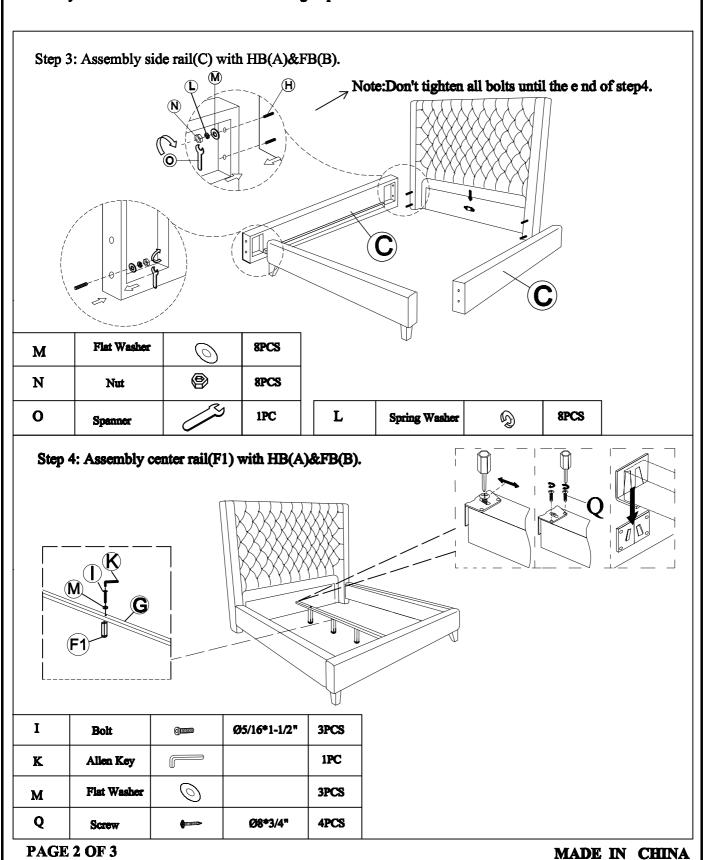

ASSEMBLY INSTRUCTIONS

Item No:D-QB/KB-128DC/GS/RBR/RCH/ZWFM/ZWFS

Description:QUEEN/KING UPH BED MANDARIN-CARBON/

SANDSTONE/BRONZF/GRAY/MIRAGE/SUNLIGHT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

