



# ASSEMBLY INSTRUCTIONS


ITEM NO: IA34-415/406/407

KING PANEL BED-ROSALIE CHESTNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.




UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

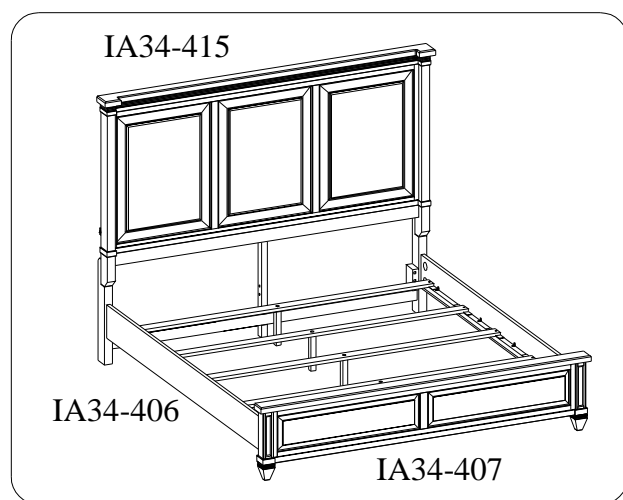

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.









## TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER








UTILITY KNIFE (FOR CAL KING)






## HARDWARE LIST: IA34-415

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-1/2"		4 PCS
C	Bolt Ø1/4"*1-1/4"		4 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" *3/4"		10 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" *3/4"		4 PCS
H	Allen Wrench 4mm		1 SET



## HARDWARE LIST: IA34-406

No.	Description	Sketch	Quantity
I	Hanger Bolt Ø5/16"*3"		8 PCS
J	Half Moon Washer 5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Screw M4*1-1/4"		10 PCS

## COMPONENTS LIST: IA34-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

## COMPONENTS LIST: IA34-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

## COMPONENTS LIST: IA34-407

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support leg (for slats)		5 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.  
Save these instructions for future reference.

FOR INDOOR USE ONLY





# ASSEMBLY INSTRUCTIONS

ITEM NO: IA34-415/406/407


KING PANEL BED-ROSALIE CHESTNUT

**STEP 1:** Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

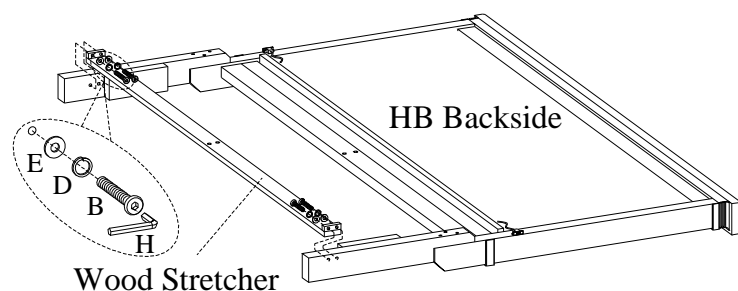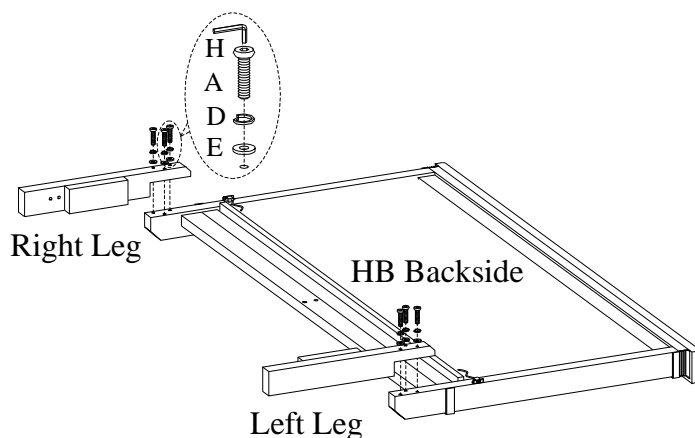


**STEP 2:** Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(D) and flat washers(E).

**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 4 bolts(C), lock washers(F) and flat washers(G).

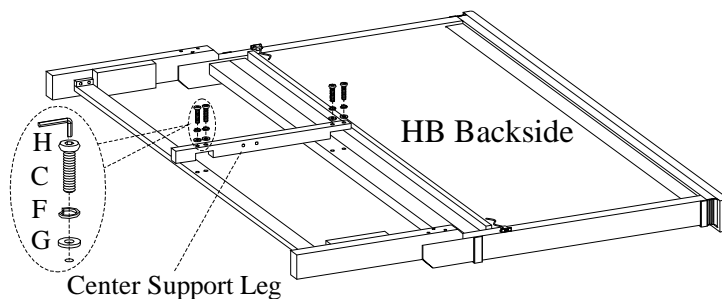

**STEP 4:** The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 5.

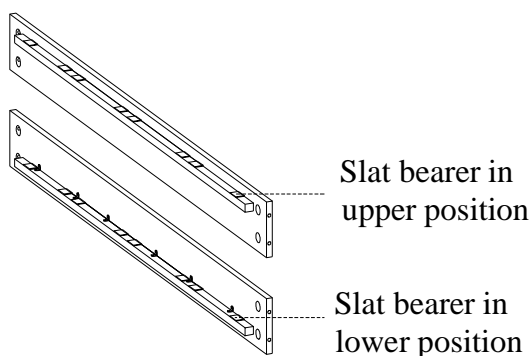




# ASSEMBLY INSTRUCTIONS



ITEM NO: IA34-415/406/407

KING PANEL BED-ROSALIE CHESTNUT

**STEP 5:** Screw the bolts(I) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (J) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

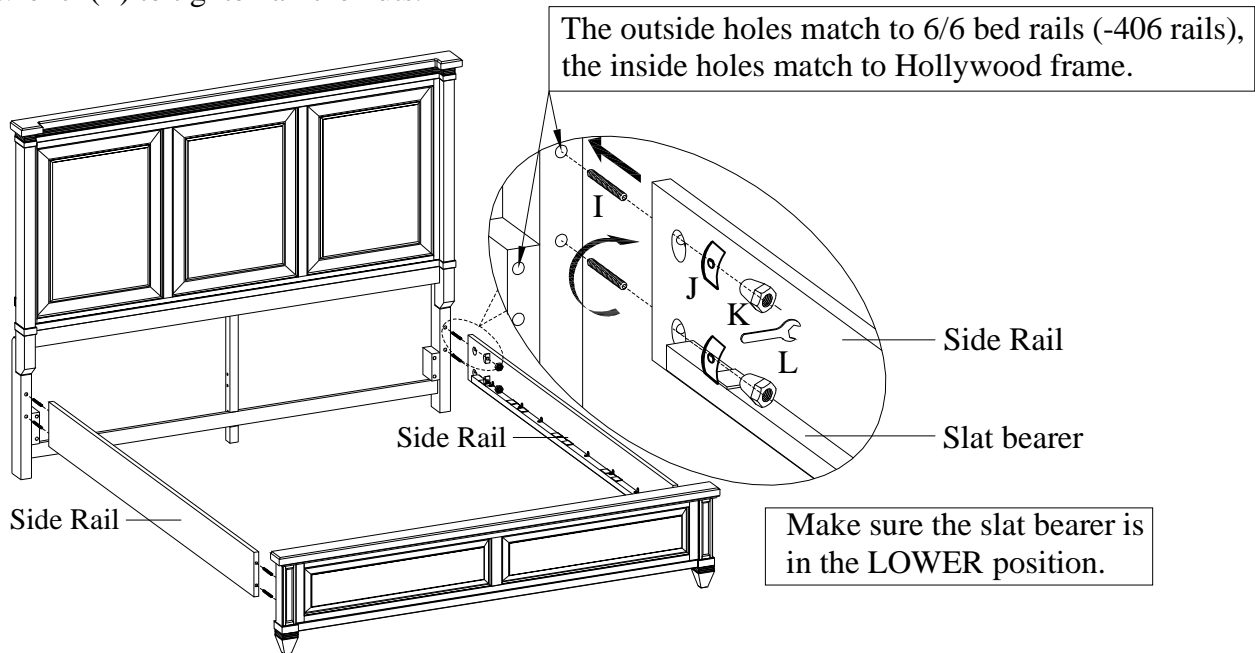

**STEP 6:** Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

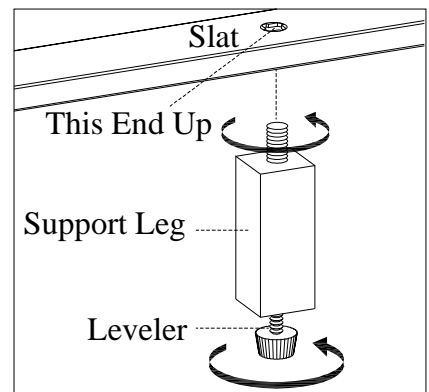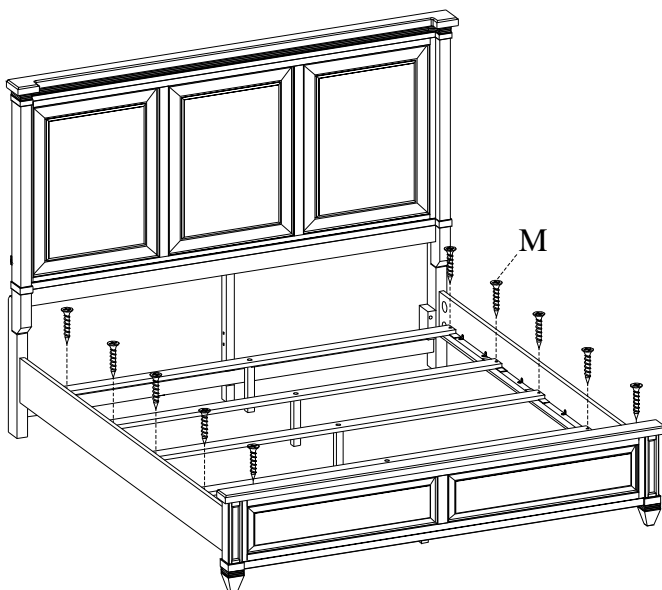

**STEP 7:** Place the slats in the right position marked by the spacer blocks and attach slats to the slat bearers with wood screws (M).




# ASSEMBLY INSTRUCTIONS

ITEM NO: IA34-415/406/407

KING PANEL BED-ROSALIE CHESTNUT

## FUNCTIONALITY INSTRUCTION

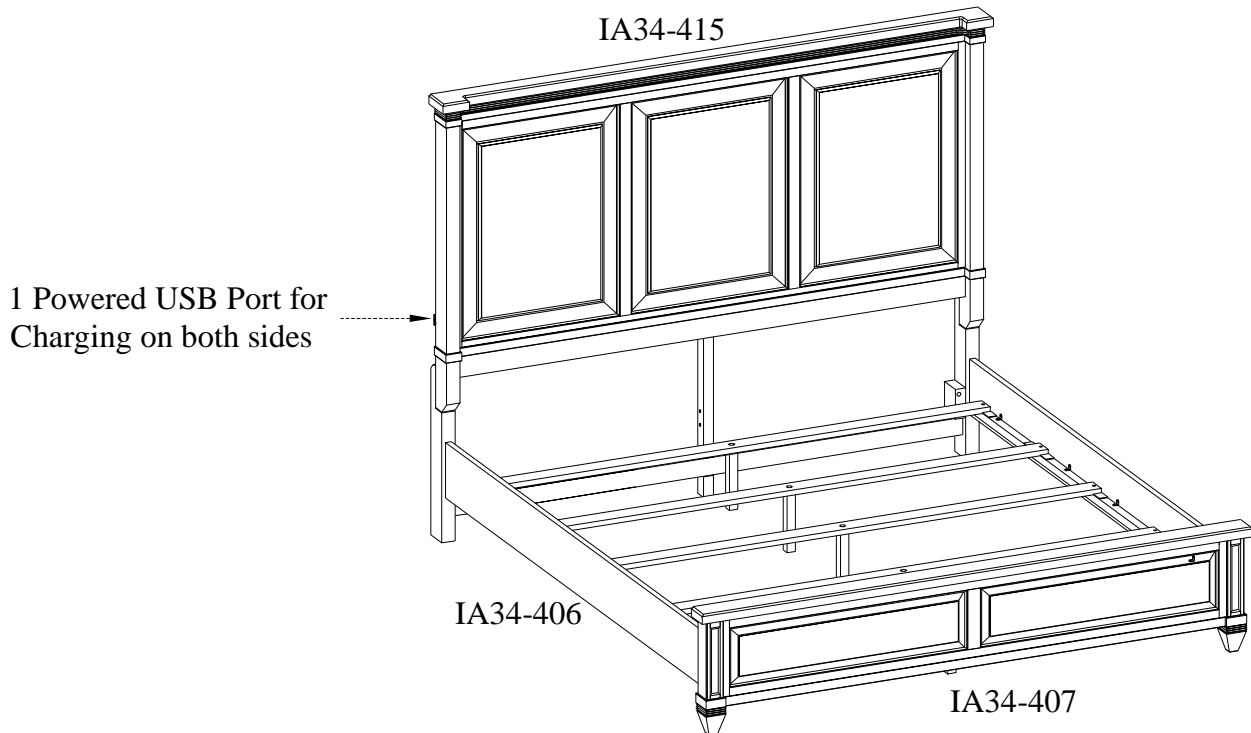




ITEM NO: IA34-455 TALL DRESSER-ROSALIE CHESTNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



## TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER



## COMPONENTS LIST:



No.	Description	Sketch	Quantity
1	Case		1 PC
2	Leg		4 PCS
3	Support Leg		1 PC

## HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" *5/8"		8 PCS
D	Allen Wrench 4mm		1 SET
	Tipping Restraint Hardware		1 SET

**STEP 1:** Put the case upside down on a soft surface, Attach the legs and support leg to the bottom of case by using 8 bolts(A), lock washers(B) and flat washers(C). Return the case to the upright position.

## FUNCTIONALITY INSTRUCTION

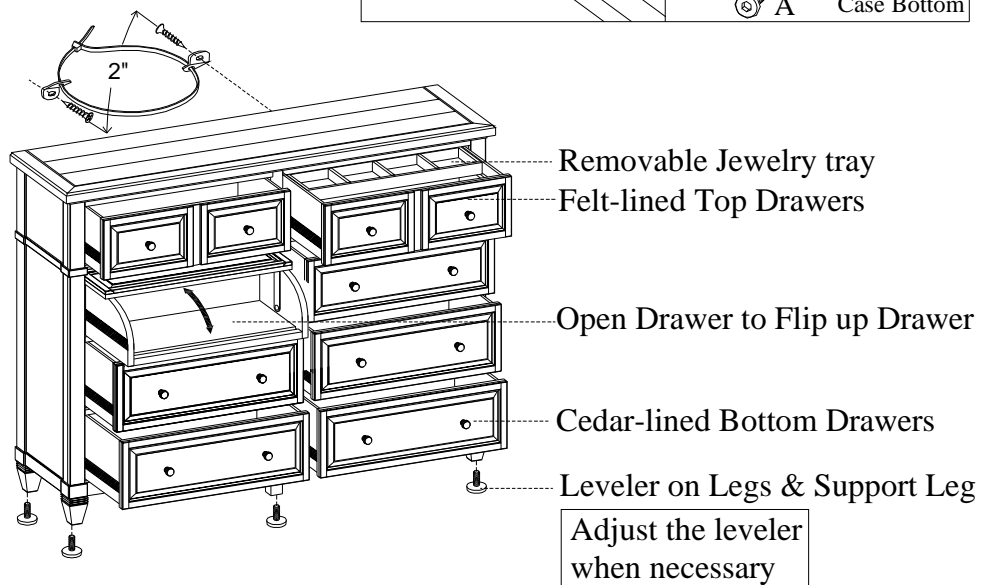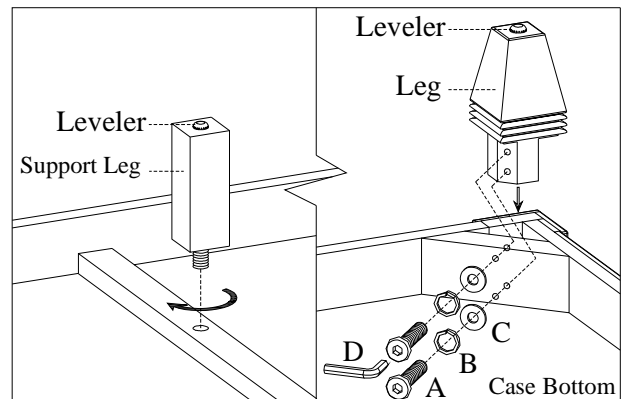



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY



ITEM NO: IA34-487 TV PANEL MOUNT-ROSALIE CHESTNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

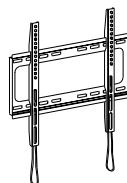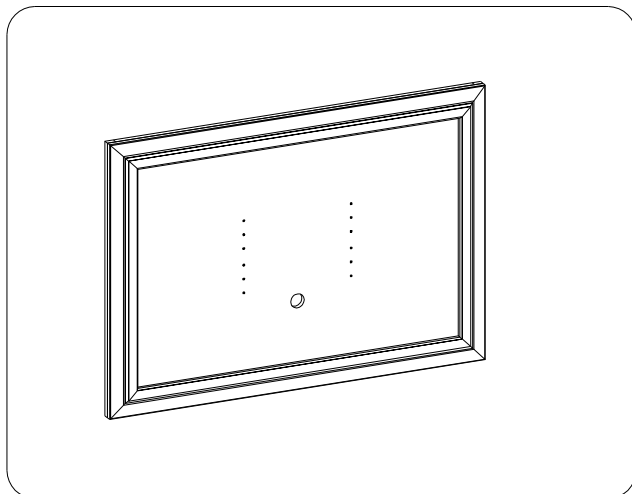

TV Mount

Assembly instructions for the TV mount are in the TV mount package. Follow these instructions when attaching TV mount and TV to the TV frame.

## TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER




## HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*1-1/4"		8 PCS
B	Lock Washer Ø1/4"		8 PCS
C	Flat Washer Ø1/4" *3/4"		8 PCS
D	Allen Wrench 4mm		1 SET

## COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	TV Frame		1 PC
2	Metal Strip		2 PCS
3	TV Mount		1 Set

## FUNCTIONALITY INSTRUCTION

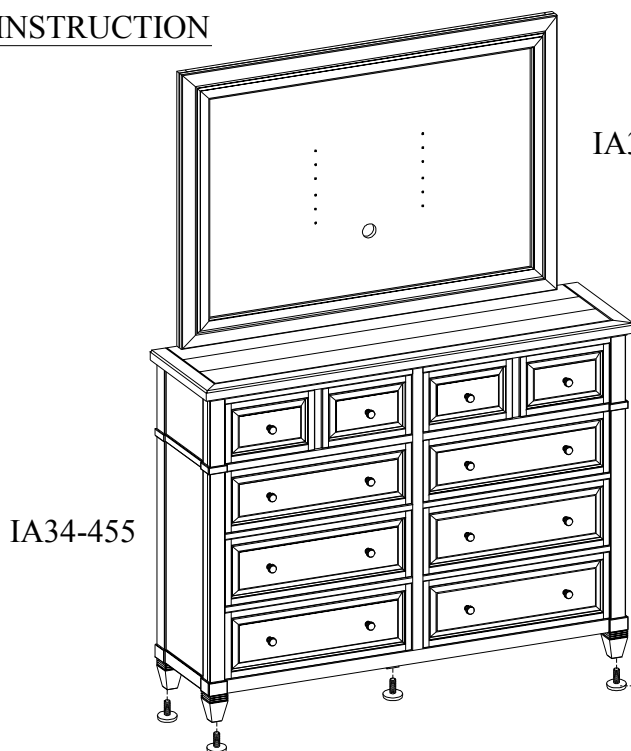

IA34-487

IA34-455

Adjust the leveler when necessary

Leveler on Legs & Support Leg


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY



ITEM NO: IA34-487 TV PANEL MOUNT-ROSALIE CHESTNUT

**STEP 1:** Attach the metal strips to inner sets of threaded inserts on the tall dresser by using 4 bolts (A), lock washers (B) and flat washers (C). See below. Do not tighten the bolts completely.

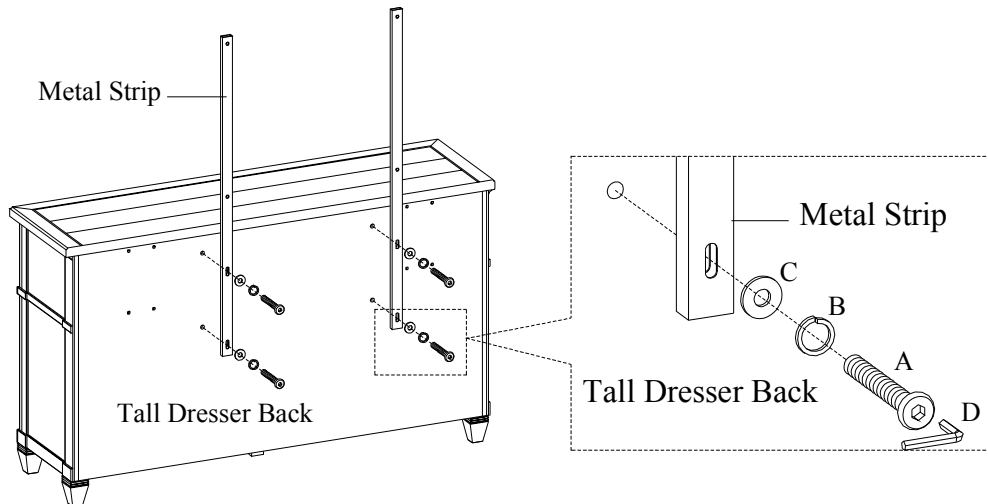

**STEP 2:** Attach the metal strips to the TV frame by using 4 bolts (A), lock washers (B) and flat washers (C). Tighten all the bolts on TV frame and tall dresser with Allen wrench.

