

ASSEMBLY INSTRUCTIONS



ITEM NO: IA34-455 TALL DRESSER-ROSALIE CHESTNUT


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



STEP 1: Put the case upside down on a soft surface, Attach the legs and support leg to the bottom of case by using 8 bolts(A), lock washers(B) and flat washers(C). Return the case to the upright position.

FUNCTIONALITY INSTRUCTION

| TOOLS REQUIRED (NOT PROVIDED) | | |
|-------------------------------|---|--|
| HILLIPS SCREWDRIVER | | |
| COMPONENTS LIST: | | |
| Description | Sketch | Quantity |
| Case | | 1 PC |
| Leg | 8 | 4 PCS |
| Support Leg | Ō | 1 PC |
| HARDWARE LIST: | | |
| Description | Sketch | Quantity |
| Bolt Ø5/16" x 1-3/4" | | 8 PCS |
| Lock Washer Ø5/16" | Ð | 8 PCS |
| Flat Washer Ø5/16" *5/8" | 0 | 8 PCS |
| Allen Wrench 4mm | | 1 SET |
| Tipping Restraint Hardware | \$ | 1 SET |
| | HILLIPS SCREWDRIVER MPONENTS LIST: Description Case Leg Support Leg RDWARE LIST: Description Bolt Ø5/16" x 1-3/4" Lock Washer Ø5/16" Flat Washer Ø5/16" *5/8" Allen Wrench 4mm | HILLIPS SCREWDRIVER MPONENTS LIST: Description Sketch Case Leg Support Leg C RDWARE LIST: Description Sketch Bolt Ø5/16" x 1-3/4" Lock Washer Ø5/16" Flat Washer Ø5/16" © Allen Wrench 4mm |

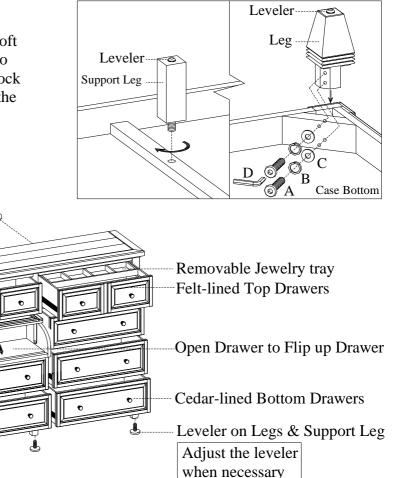

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY