




## ASSEMBLY INSTRUCTION


**7154 - 330 - TWIN UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS**  
**7154 - 350 - TWIN / FULL SIDERAIL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):  
 PHILIPS SCREW DRIVER

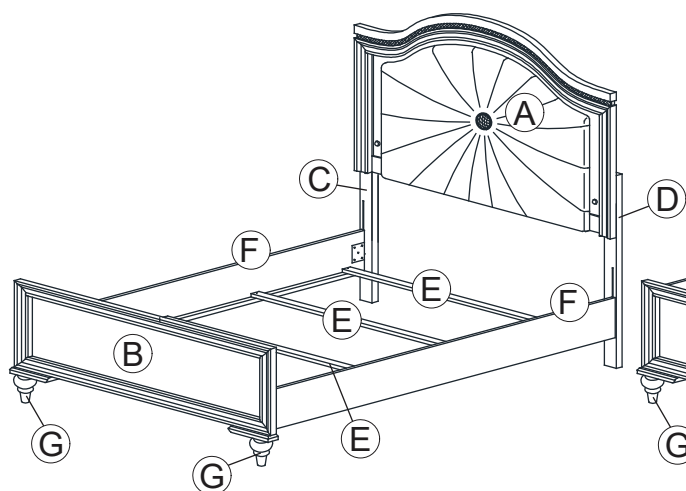

**Assembly Complete  
With Low Position**

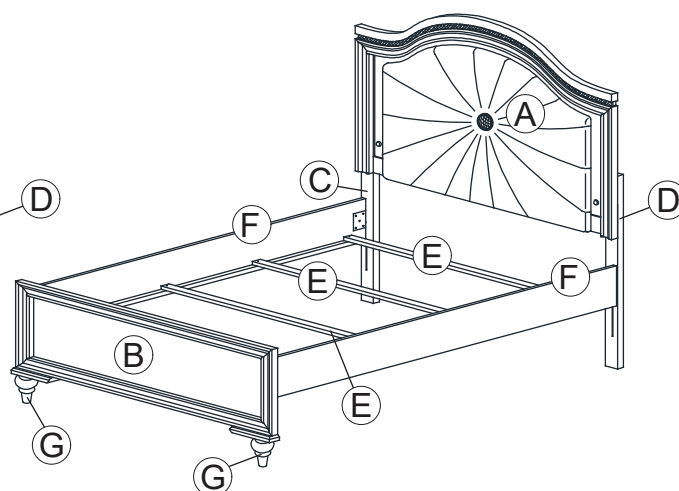

**Assembly Complete  
With High Position**

### HARDWARE LIST

No	Description	Q'ty
1	JCBC Nylok Bolt M6 x 35mm	6
2	Spring Washer M6	6
3	Flat Washer M6 x 13mm	6
4	CSK Screw M4 x 32mm	8
5	L Key M4	1
6	I Key M4	1
7	LED Adapter	1

### PARTS LIST


No	Description	Picture	Q'ty
A	Headboard Panel		1
B	Footboard Panel		1
C	Headboard Leg (1)		1
D	Headboard Leg (2)		1
E	Bed Slat (18mm x 45 mm x 1000 mm)		4
F	Side Rail		2
G	Bun Foot (Acrylic)		2



## ASSEMBLY INSTRUCTION

**7154 - 330 - TWIN UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS**  
**7154 - 350 - TWIN / FULL SIDERAIL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that


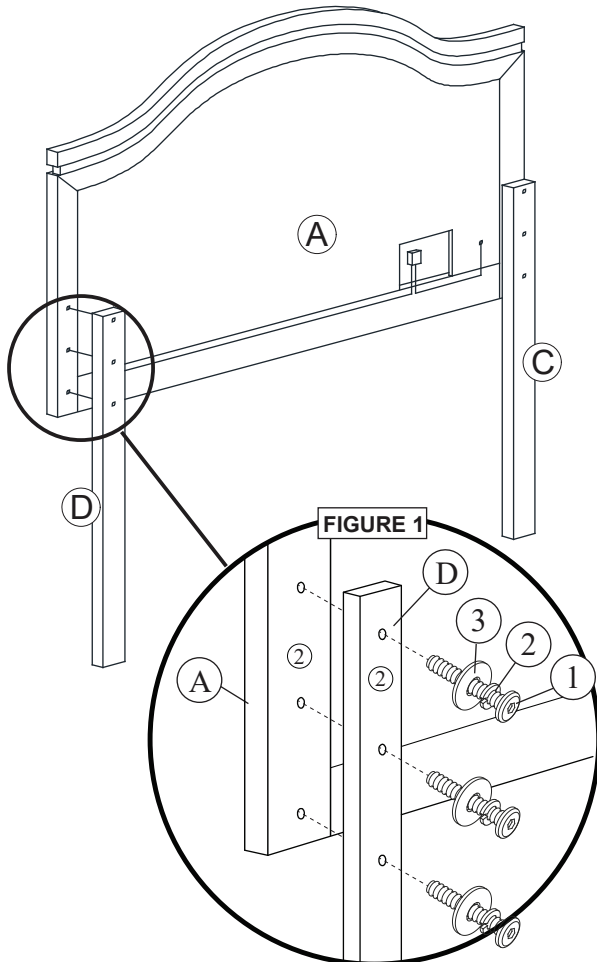


### STEP 1 - FIGURE 1

Attach the legs (C) & (D) to the Headboard (A) follow by Notification Label of 1 to 1 and 2 to 2. Secure with JCB (1), Spring Washer (2), Flat Washer (3) using L key (5) or I Key (6) provided.

### STEP 2 - FIGURE 2

Secure the Bun Feet (G) to the Footboard (B) by screwing into place.

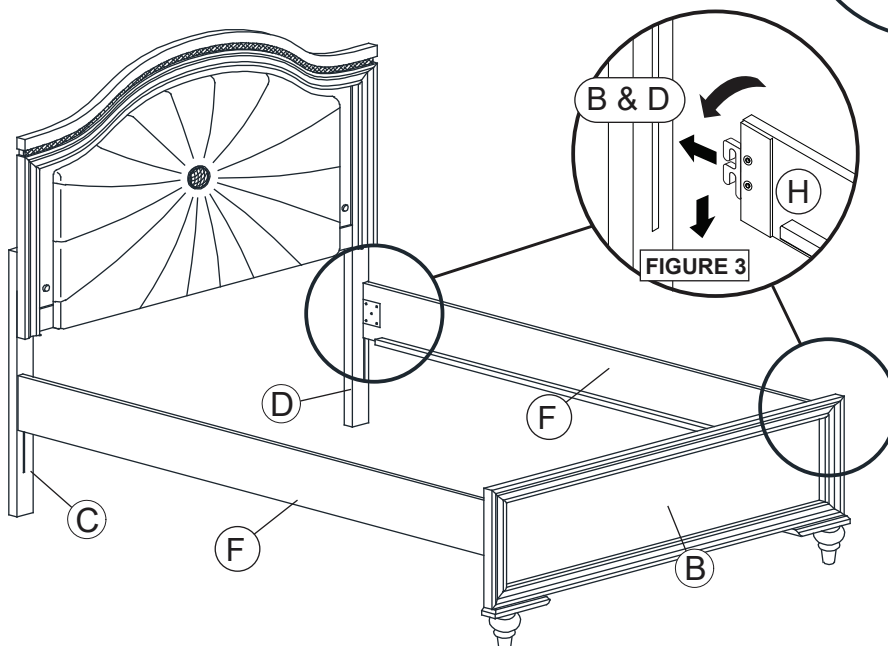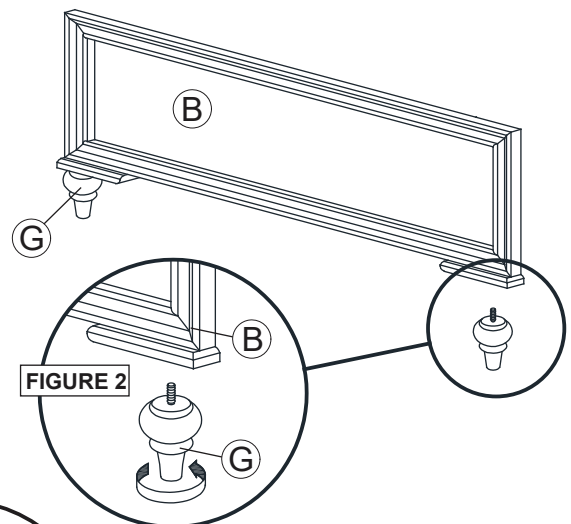

### STEP 3 - FIGURE 3



Attach Side Rails (F) to Headboard Legs (C) & (D) by inserting hooks into slots. Repeat step for Footboard (B).



## ASSEMBLY INSTRUCTION

**7154 - 330 - TWIN UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD  
SLATS**  
**7154 - 350 - TWIN / FULL SIDERAIL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that

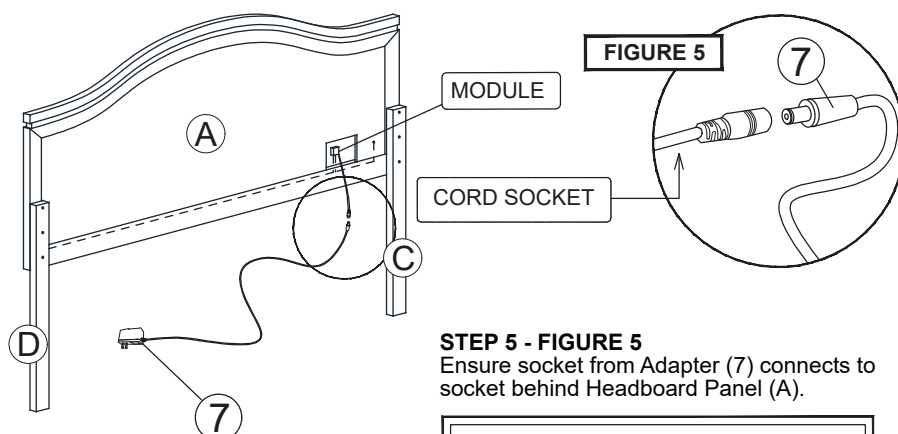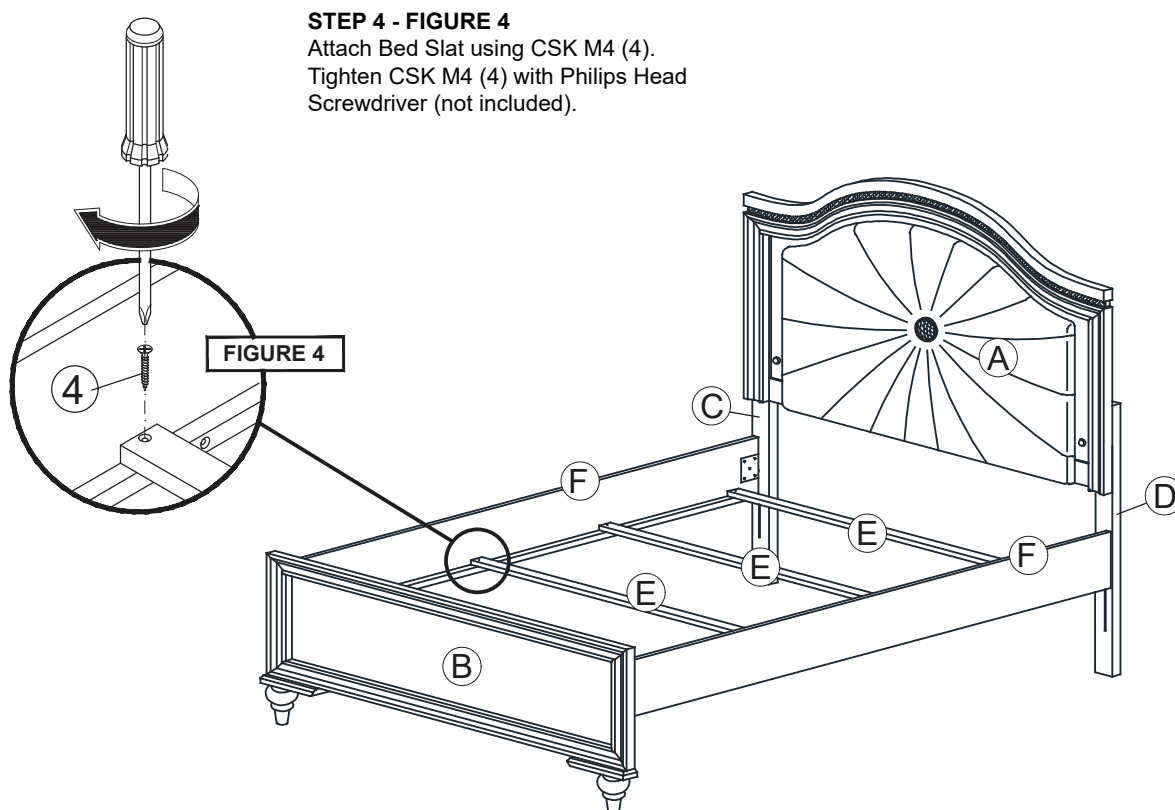

### Warning !

**Caution ! : Please do not touch  
the chrome button with wet hand.**