




ASSEMBLY INSTRUCTION

2293 - 464 - FULL UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS


2293 - 350 - TWIN / FULL SIDERAILS - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):
PHILIPS SCREW DRIVER

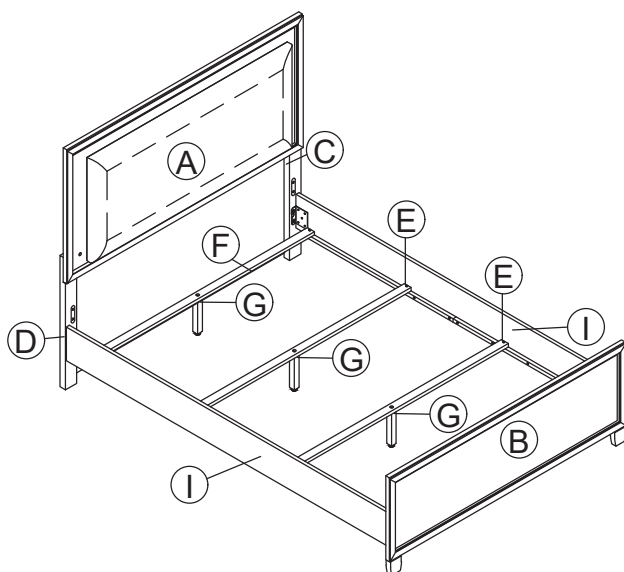

**COMPLETE BED
WITHOUT STORAGE**

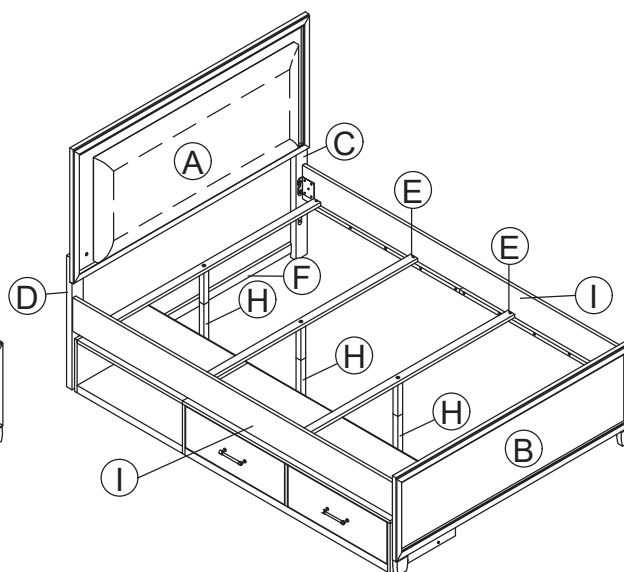

**COMPLETE BED
WITH STORAGE**

HARDWARE LIST

No	Description	Q'ty
1	JCBC Nylok Bolt M6 x 30mm	6
2	JCBC Nylok Bolt M6 x 50mm	4
3	Spring Washer Ø1/4"	6
4	Flat Washer Ø1/4" x 13mm	6
5	CSK Screw M4 x 32mm	10
6	L Key M4	1
7	L Key M5	1
8	I Key M4	1
9	I Key M5	1
10	LED Adapter	1
11	JCBC Nylok Bolt M8 x 14mm	8

PARTS LIST

No	Description	Picture	Q'ty
A	Headboard Panel		1
B	Footboard Panel		1
C	Headboard Leg (R)		1
D	Headboard Leg (L)		1
E	Bed Slat (18mm x 45 mm x 1387 mm)		4
F	Headboard Rail Support		1
G	Bed Slat Top Support Leg (29mm x 29mm x 155mm)		4
H	Bed Slat Lower Support Leg (29mm x 29mm x 175mm)		4
I	Side Rail		2

ASSEMBLY INSTRUCTION


2293 - 464 - FULL UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS

2293 - 350 - TWIN / FULL SIDERAIL - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 1 - FIGURE 1

Attach & tighten the Headboard Leg (C/D) to the Headboard Panel (A). Using JCBC Nylok Bolt M6 x 30mm (1), Spring Washer (3), Flat Washer (4) using L key M4 (6) or I Key M4 (8) provided.

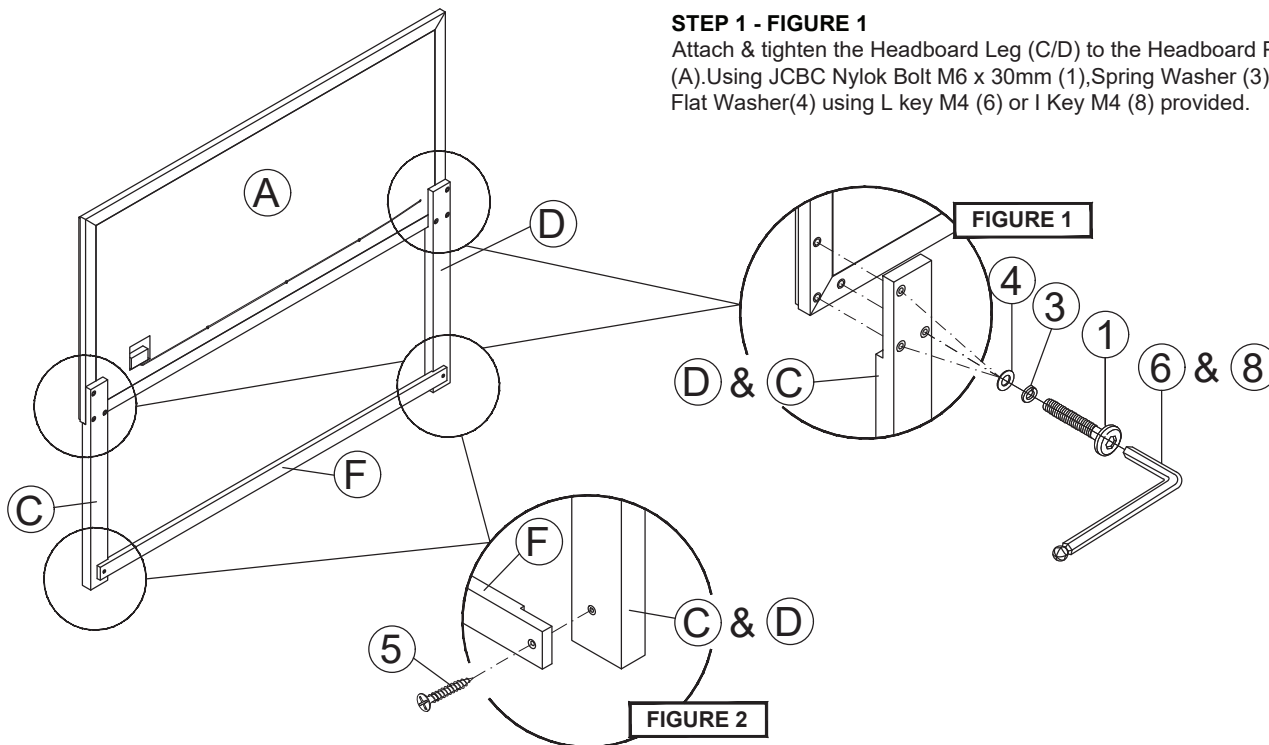


STEP 2 - FIGURE 2

Attach Headboard Rail Support (F) using CSK screw M4 x 32mm (5).

STEP 3 - FIGURE 3

Attach Side Rail (I) to Headboard Leg (C/D). Tighten M8 JCBC Nylok Bolt (11) to Headboard Leg (C/D) by using L Key M5 (7) or I Key M5 (9) and repeat the same step on Footboard Panel (B). Note: Attach Side Rail (I) to top of hook plate for use of Storage Unit.

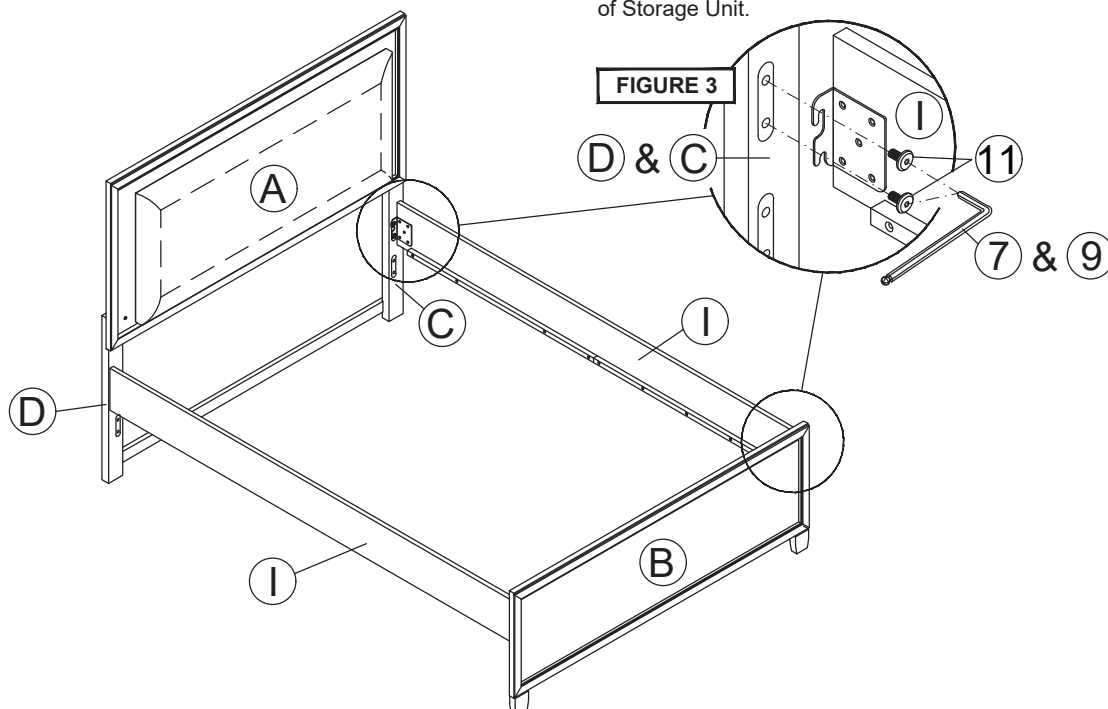

ASSEMBLY INSTRUCTION


2293 - 464 - FULL UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS

2293 - 350 - TWIN / FULL SIDERAIL - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 4 - FIGURE 4 WITHOUT STORAGE UNIT

Attach the Bed Slat Lower Support Leg (H) to Bed Slat (E) using JCBC Nylok Bolt M6 x 50mm (2). Tighten screws with L Key (6) or I Key (8) provided.

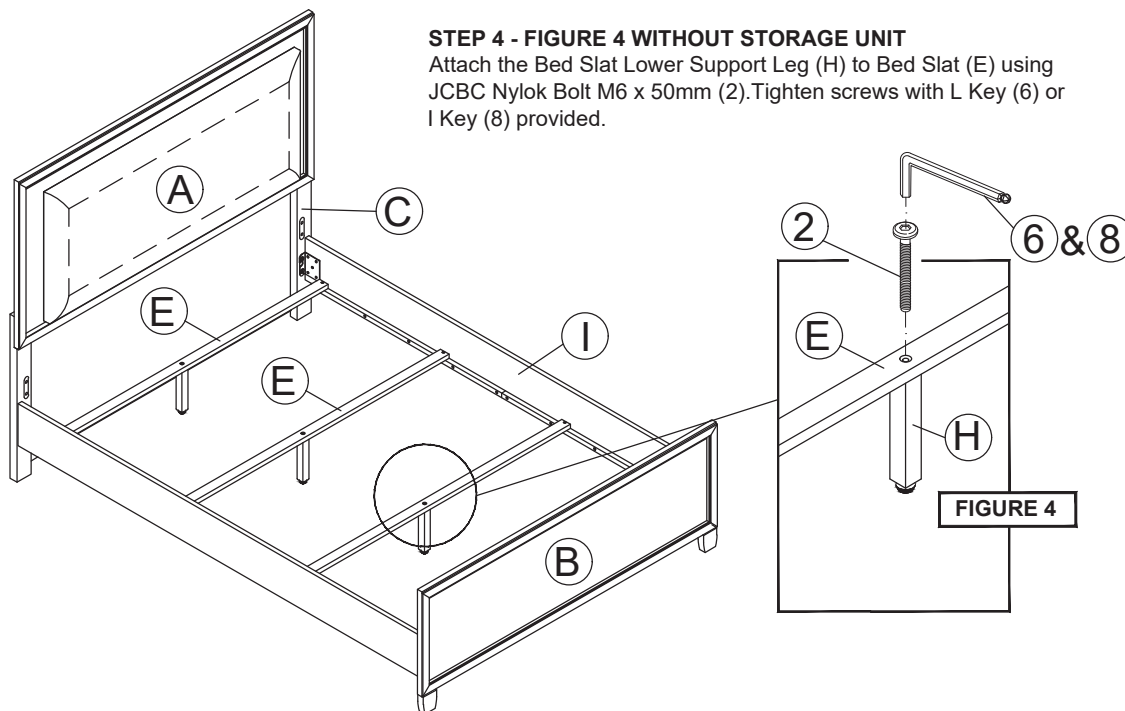

STEP 5 - FIGURE 5 WITH STORAGE UNIT

Attach Bed Slat Top Support Leg (G) to Bed Slat (E) using JCBC Nylok Bolt M6 X 50mm (2). Tighten screws with L Key M4 (6) or I Key M4 (8) provided. Next attach Bed Slat Lower Support Leg (H) to Bed Slat Top Support Leg (G).


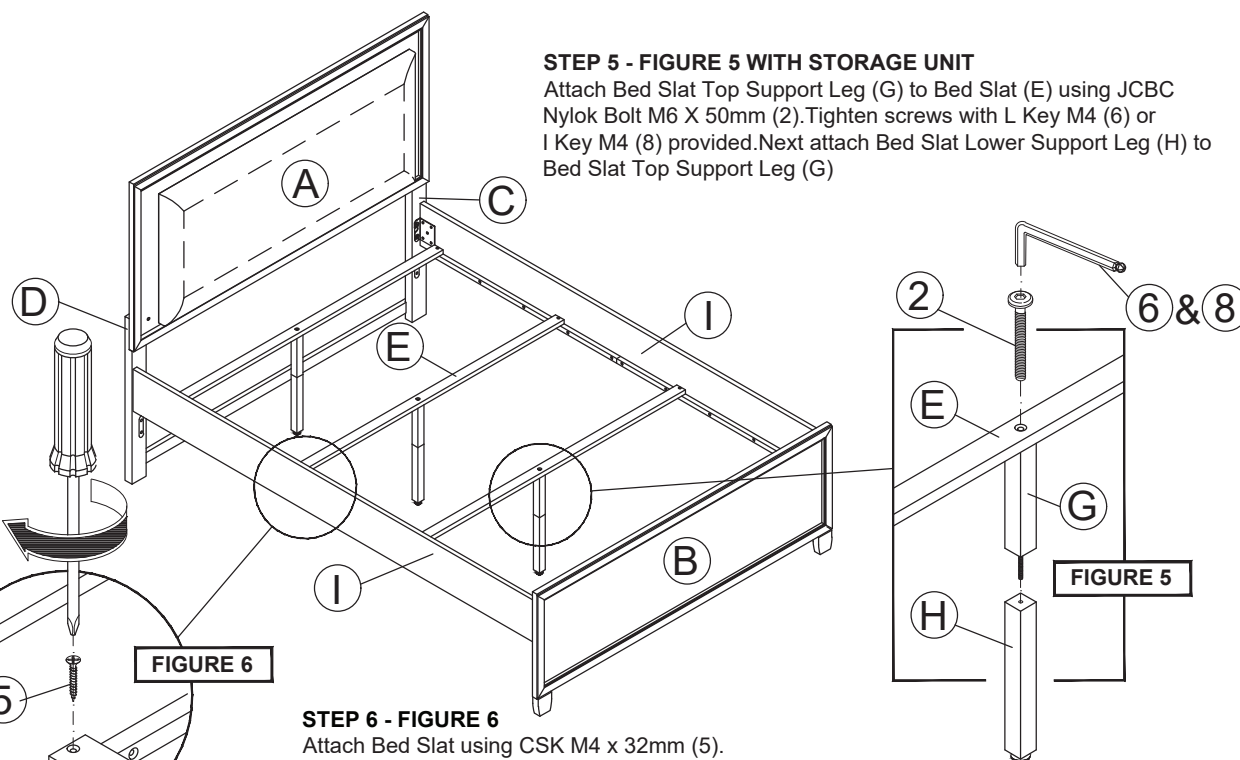


FIGURE 6

STEP 6 - FIGURE 6

Attach Bed Slat using CSK M4 x 32mm (5). Tighten CSK M4 x 32mm (5) with Philips Head Screwdriver (not included).




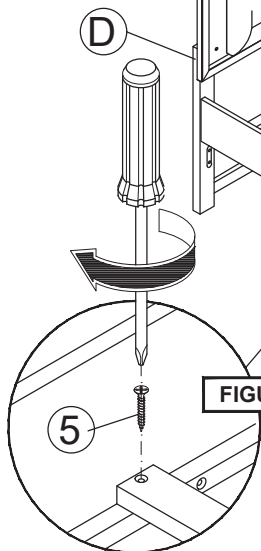


ASSEMBLY INSTRUCTION

2293 - 464 - FULL UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD
SLATS

2293 - 350 - TWIN / FULL SIDERAIL - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

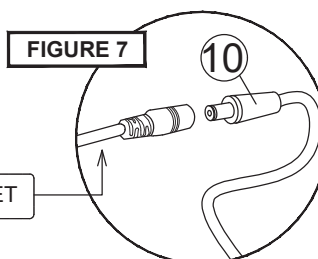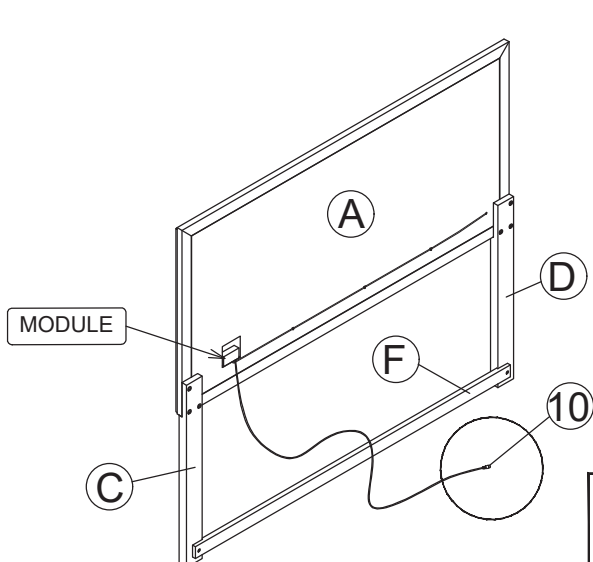

CORD SOCKET

STEP 7 - FIGURE 7

Ensure socket from Adapter (10) connects to socket behind Headboard Panel (A).

Warning !

Caution ! : Please do not touch the chrome button with wet hand.



ASSEMBLY INSTRUCTION

2293 - 717 - DRESSER - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):
PHILIPS SCREW DRIVER




PART LIST

No.	Description	Picture	Q'ty
A	Drawer Dresser		1
B	Bun Foot		4
C	Handle		6
D	Support Leg		1

HARDWARE LIST

No.	Description	Picture	Q'ty
1	Wood Dowel 10mm x30mm		4
2	JCBC Nylok Bolt M6 x 50mm		4
3	Spring Washer Ø1/4"		4
4	Flat Washer Ø1/4" x 13mm		4
5	L Key M4		1
6	I Key M4		1
7	Tip Restraint Kit		1

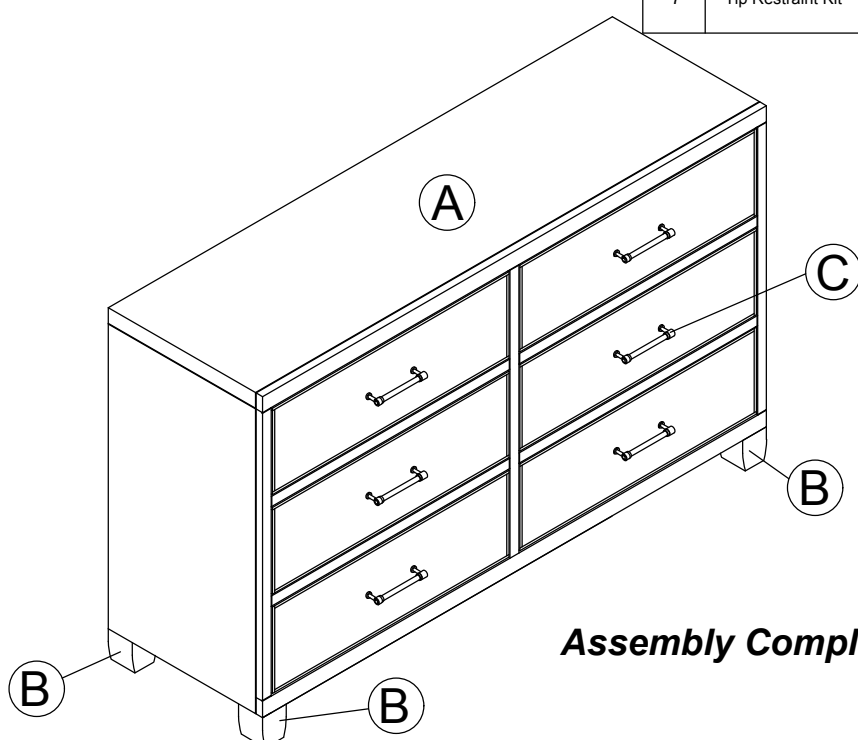


Assembly Complete


ASSEMBLY INSTRUCTION

2293 - 717 - DRESSER - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

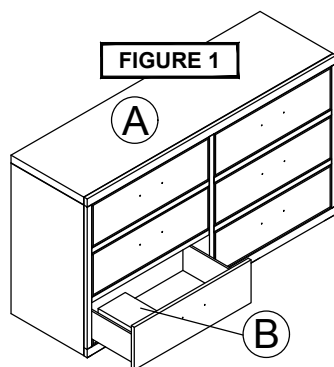

STEP 1 - FIGURE 1
Begin assembly by removing Bun Foot (B)
Support Leg (C) from drawer in Dresser (A).

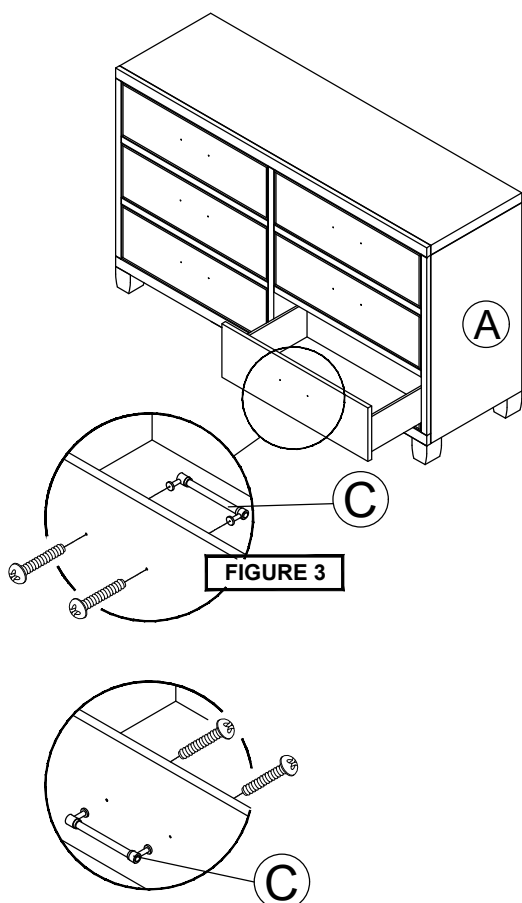

STEP 3 - FIGURE 3
Remove Handles (C) from drawers and then turn around
and secure from the front. Tighten screws with Philips
Screwdriver (not included).

STEP 2 - FIGURE 2
Insert Wood Dowel 10mm x 30mm (1) into each Bun Foot (B).
Attach Bun Foot (B) to bottom of Dresser (A) using JCBC Nylok
Bolt M6 x 50mm (2), Spring Washer $\varnothing \frac{1}{4}$ " (3) & Flat Washer
 $\varnothing \frac{1}{4}$ " x 13mm (4). Tighten using L Key M4 (5) or I Key M4 (6)
provided. Attach Support Leg (D) to Dresser (A).


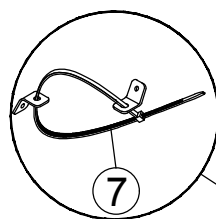


FIGURE 4

STEP 4 - FIGURE 4
Attach one end of Tip Restraint Kit (7) to wall and the
other end to Dresser (A). The assembly is now
complete.



ASSEMBLY INSTRUCTION

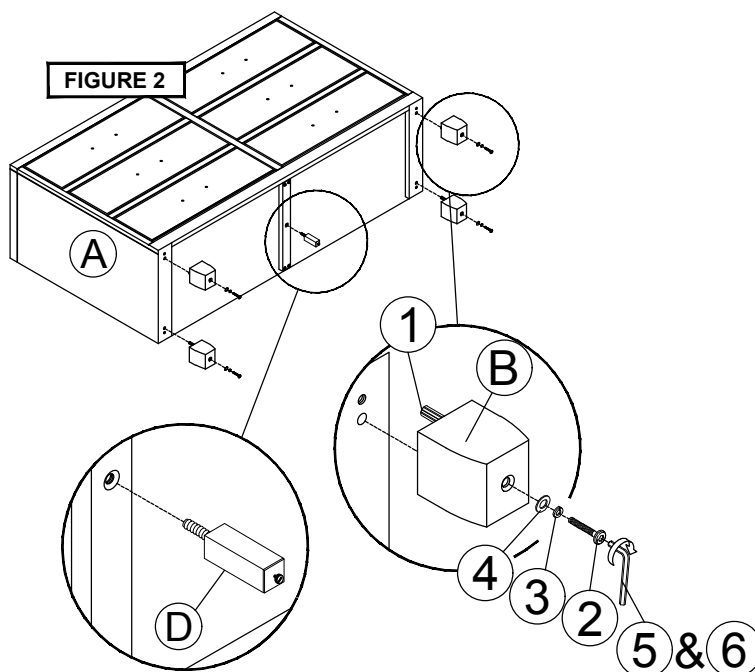


2293 - 721 - MIRROR - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.






TOOLS REQUIRED (NOT PROVIDED):
PHILIPS SCREW DRIVER




PART LIST

No.	Description	Picture	Q'ty
A	Dresser		1
B	Mirror		1
C	Mirror Support		2

HARDWARE LIST

No.	Description	Picture	Q'ty
1	JCBC Nylok Bolt M6 x 35mm		8
2	Spring Washer Ø1/4"		8
3	Flat Washer Ø1/4" x 20mm		8
4	L Key M4		1
5	I Key M4		1

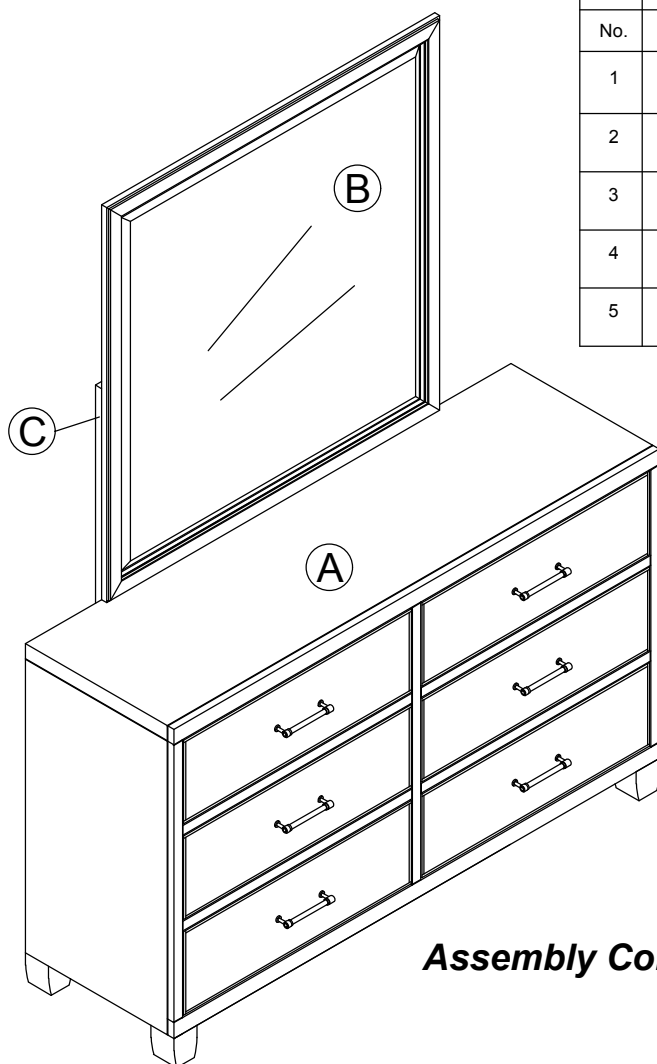

Assembly Complete



ASSEMBLY INSTRUCTION

2293 - 721 - MIRROR - SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 1 - FIGURE 1

Begin assembly by attaching each Mirror Support (C) to back of Mirror (B) using JCBC Nylok Bolt M6 x 35mm (1), Spring Washer Ø1/4" (2) & Flat Washer Ø1/4" x 20mm (3). Tighten using L Key M4 (4) or I Key M4 (5) provided.

