




ASSEMBLY INSTRUCTION

2293 - 001 - UNDERBED STORAGE UNIT- SULLIVAN WALNUT








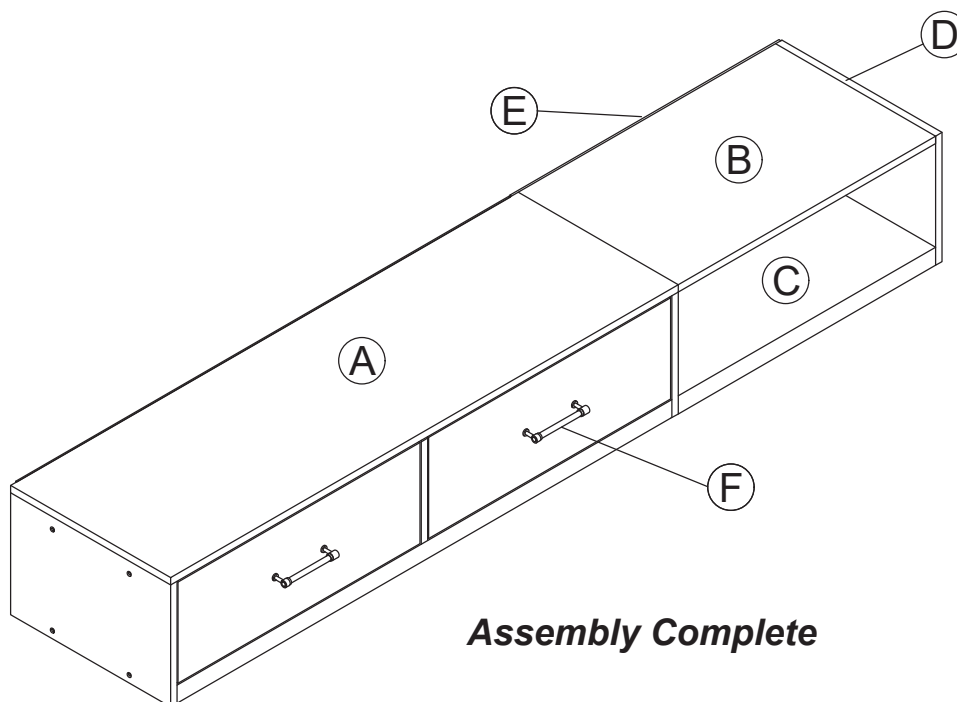Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):
PHILIPS SCREW DRIVER









Assembly Complete

HARDWARE LIST

No	Description	Q'ty
1	 JCBC Nylok Bolt M6 x 35mm	8
2	 JCBC M6 Sleeve Nut	4
3	 Spring Washer Ø1/4"	8
4	 Flat Washer Ø1/4" x 20mm	8
5	 Pan Head Screw M4x16mm	16
6	 L Key M4	1
7	 I Key M4	1
8	 JCBC Nylok Bolt M6 x 12mm	2

PARTS LIST

No	Description	Picture	Q'ty
A	Storage Unit		1
B	Top		1
C	Bottom		1
D	Side Panel		1
E	Back Panel		1
F	Handle		2


ASSEMBLY INSTRUCTION

2293 - 001 - UNDERBED STORAGE UNIT- SULLIVAN WALNUT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


STEP 1- FIGURE 1

Begin assembly by attaching Top (B) and Bottom (C) to Storage Unit (A) using to JCBC Nylok Bolt M6 x 35mm (1) ,Spring Washer Ø1/4" (3) & Flat Washer Ø1/4" x 20mm (4). Attach Side Panel (D) using JCBC Nylok Bolt M6 x 35mm (1) ,Spring Washer Ø1/4"(3) & Flat Washer Ø1/4" x 20mm (4) and JCBC M6 Sleeve Nut (2). Tighten using L Key M4 (6) or I Key M4 (7) provided.

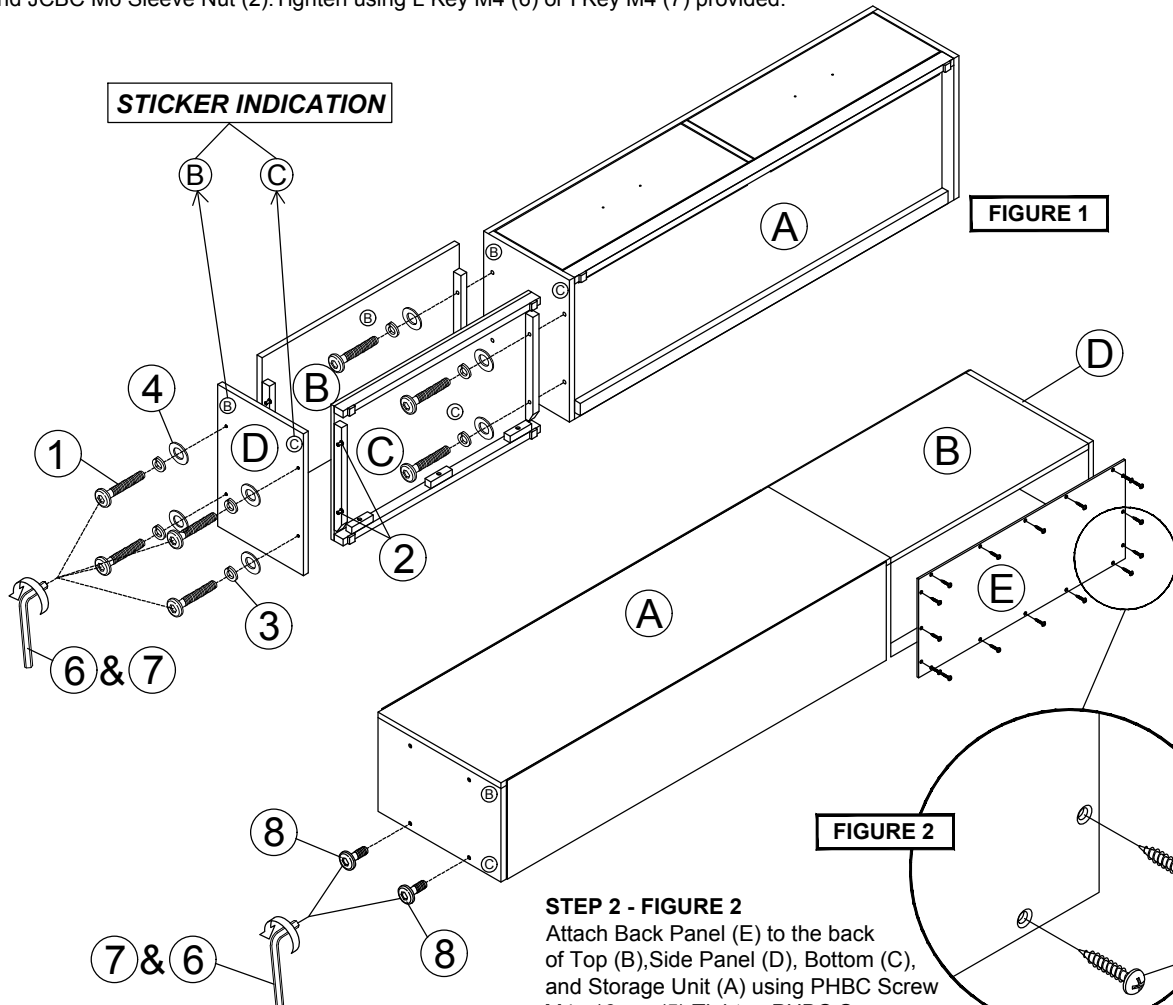

STEP 2 - FIGURE 2

Attach Back Panel (E) to the back of Top (B), Side Panel (D), Bottom (C), and Storage Unit (A) using PHBC Screw M4 x 16mm (5). Tighten PHBC Screw M4 x 16mm (5) with Philips Head Screwdriver (not included). Attach JCBC Nylok Bolt M6 x 12mm (8) to the other end of Storage Unit (A), tighten with L Key M4 (6) or I Key M4 (7) provided.

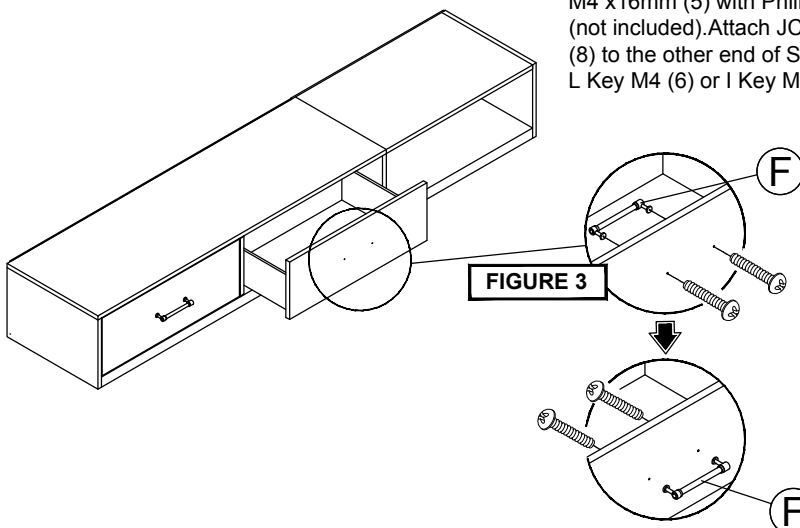

STEP 3 - FIGURE 3

Handles (F) and screws are pre assembled to drawer faces. Unscrew and attach handle on the outside by securing it from the inside with the screws that have been removed. Make sure to hold drawers in place. Tighten all handles from the inside. Do not overtighten.