




## ASSEMBLY INSTRUCTION

**7154 - 330 - TWIN UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS**

**7154 - 350 - TWIN / FULL SIDERAIL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):  
PHILIPS SCREW DRIVER

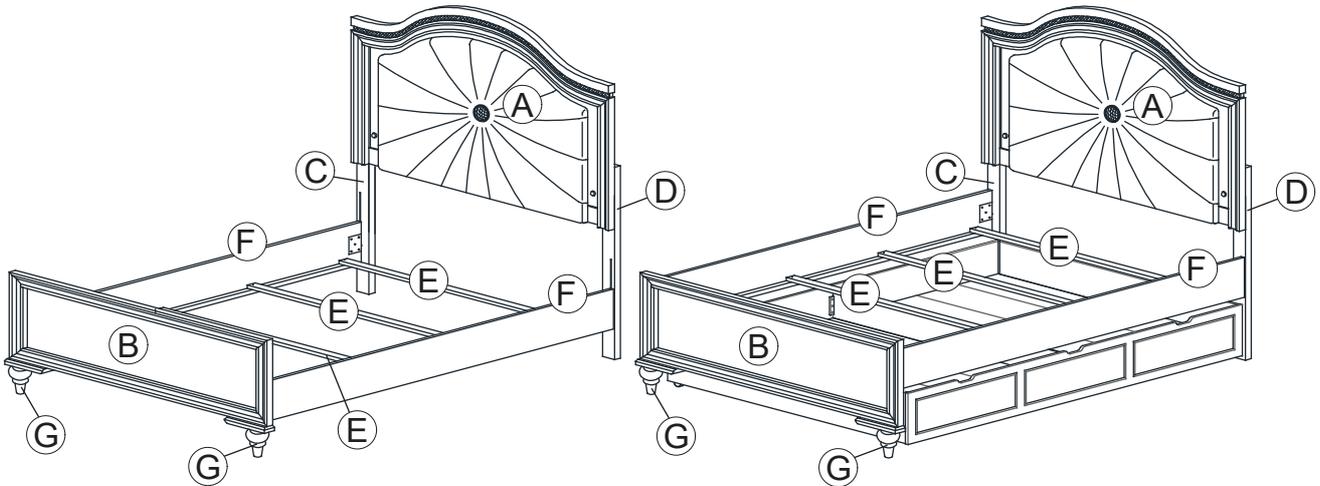

**Assembly Complete  
Without Trundle**

**Assembly Complete  
With Trundle**

### HARDWARE LIST

No	Description	Q'ty
1	 JCBC Nylok Bolt M6 x 35mm	6
2	 Spring Washer M6	6
3	 Flat Washer M6 x 13mm	6
4	 CSK Screw M4 x 32mm	8
5	 L Key M4	1
6	 I Key M4	1
7	 LED Adapter	1

### PARTS LIST


No	Description	Picture	Q'ty
A	Headboard Panel		1
B	Footboard Panel		1
C	Headboard Leg (1)		1
D	Headboard Leg (2)		1
E	Bed Slat (18mm x 45 mm x 1000 mm)		4
F	Side Rail		2
G	Bun Foot (Acrylic)		2



**ASSEMBLY INSTRUCTION**

**7154 - 330 - TWIN UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS**  
**7154 - 350 - TWIN / FULL SIDERAIL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that


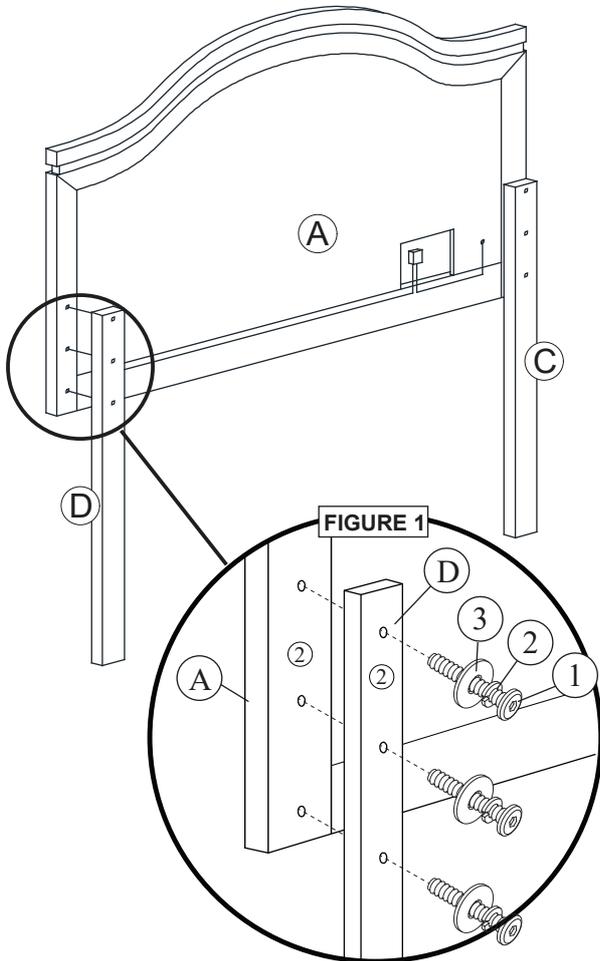


**STEP 1 - FIGURE 1**

Attach the legs (C) & (D) to the Headboard (A) follow by Notification Label of 1 to 1 and 2 to 2. Secure with JBBC (1), Spring Washer (2), Flat Washer (3) using L key (5) or I Key (6) provided.

**STEP 2 - FIGURE 2**

Secure the Bun Feet (G) to the Footboard (B) by screwing into place.

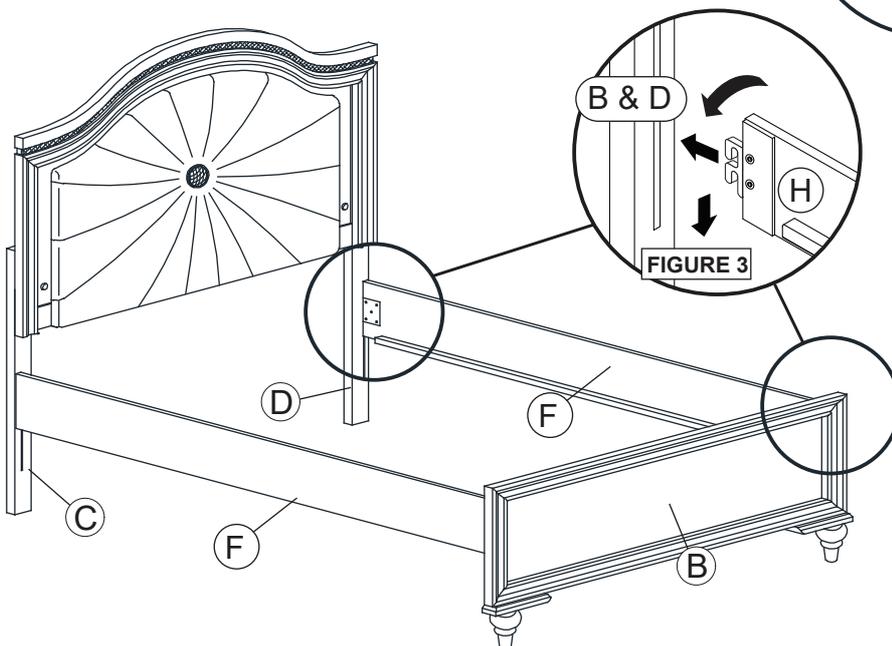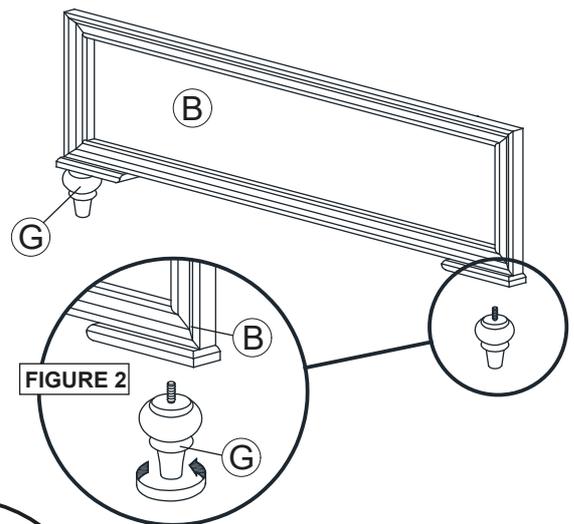

**STEP 3 - FIGURE 3**


Attach Side Rails (F) to Headboard Legs (C) & (D) by inserting hooks into slots. Repeat step for Footboard (B).



### ASSEMBLY INSTRUCTION


7154 - 330 - TWIN UPHOLSTERED LIGHT UP HEADBOARD / FOOTBOARD SLATS  
7154 - 350 - TWIN / FULL SIDERAIL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that

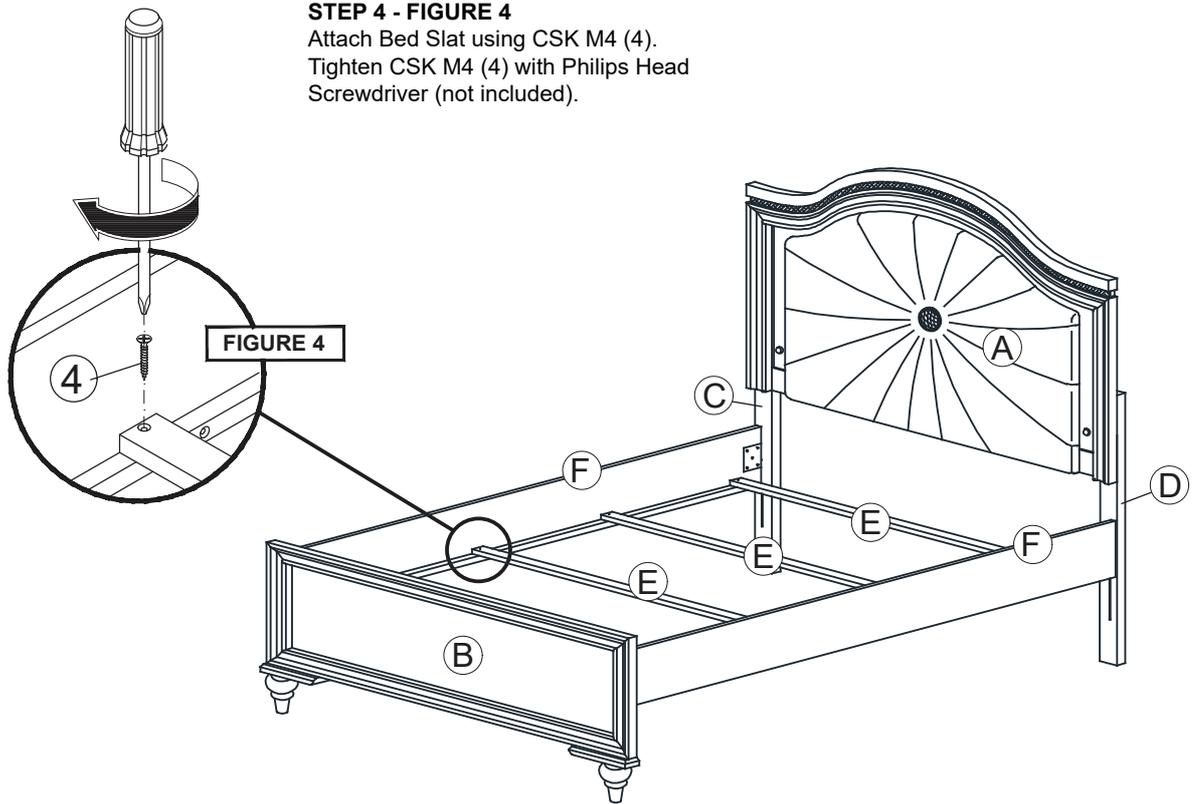

#### STEP 4 - FIGURE 4

Attach Bed Slat using CSK M4 (4).  
Tighten CSK M4 (4) with Philips Head  
Screwdriver (not included).

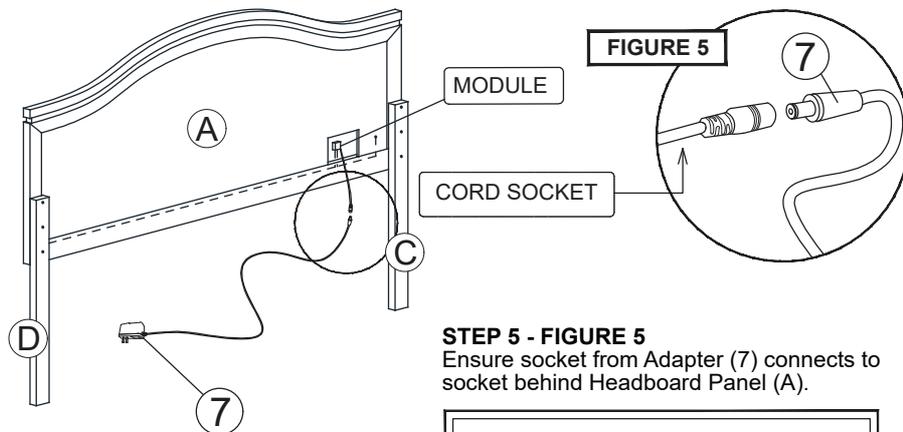

#### STEP 5 - FIGURE 5

Ensure socket from Adapter (7) connects to  
socket behind Headboard Panel (A).

### Warning !

Caution ! : Please do not touch  
the chrome button with wet hand.



## ASSEMBLY INSTRUCTION

### 7154-716 DRESSER - SOPHIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):  
PHILIPS SCREW DRIVER




#### PART LIST

No.	Description	Picture	Q'ty
A	Drawer Dresser		1
B	Front Bun Foot (Acrylic)		2
C	Back Bun Foot (Wood)		2
D	Knob		6
E	Support Leg		1

#### HARDWARE LIST

No.	Description	Picture	Q'ty
1	Tip Restraint Kit		1

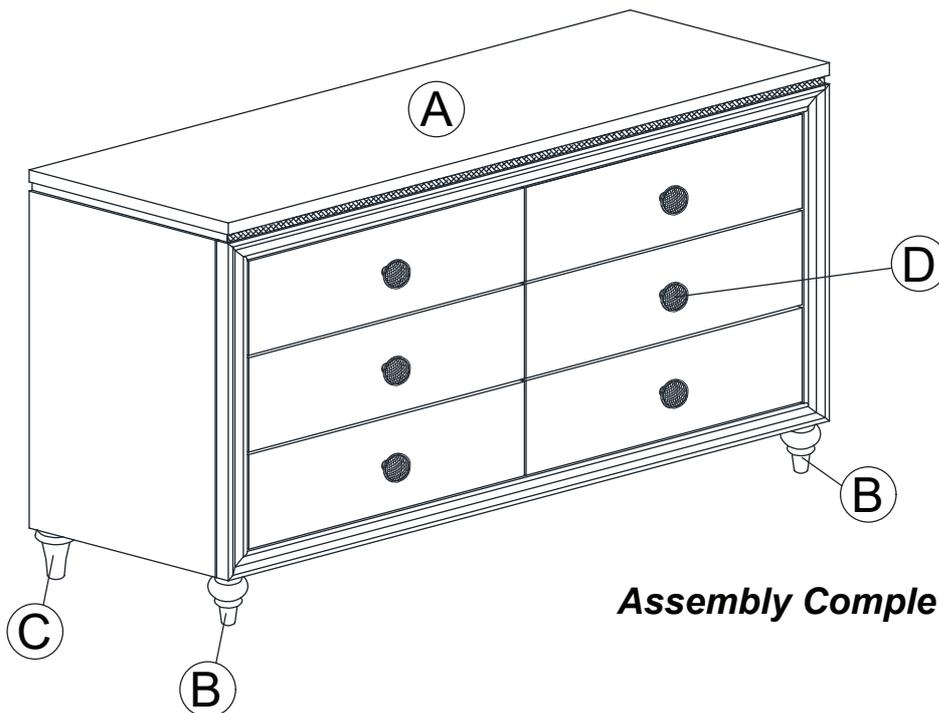



**Assembly Complete**

## ASSEMBLY INSTRUCTION 7154-716 DRESSER - SOPHIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that


### STEP 1 - FIGURE 1

Begin assembly by removing Bun Foot (B) & (C) from drawer in Dresser (A).

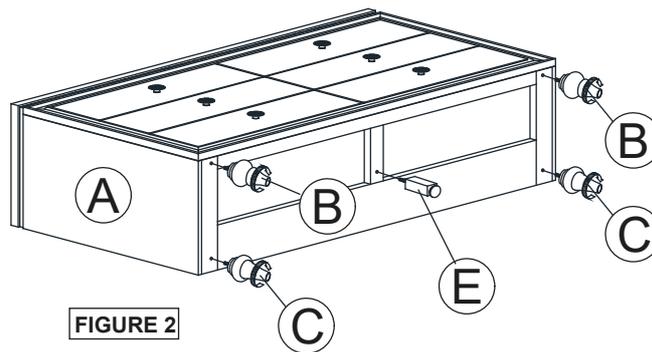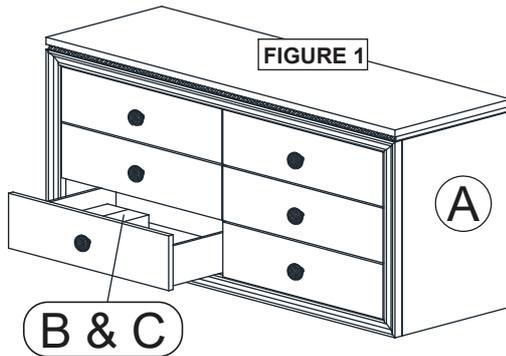

### STEP 2 - FIGURE 2

Secure Bun Feet (B) (C) & Support Leg (E) to Dresser (A) by screwing into place.

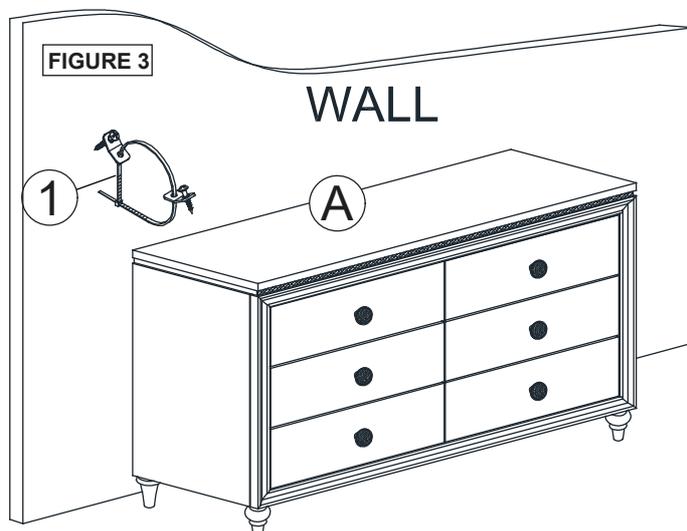

### STEP 3 - FIGURE 3

Attach one end of Tip Restraint Kit (1) to wall and the other end to Dresser (A). The assembly is now complete.



## ASSEMBLY INSTRUCTION

### 7154 - 721 - MIRROR - SOPHIA


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

#### PART LIST

No.	Description	Picture	Q'ty
A	Dresser		1
B	Mirror		1
C	Mirror Support		2

#### HARDWARE LIST

No.	Description	Picture	Q'ty
1	JCBC Nylok Bolt M6 x 35mm		8
2	Spring Washer Ø1/4"		8
3	Flat Washer Ø1/4" x 20mm		8
4	L Key M4		1
5	I Key M4		1

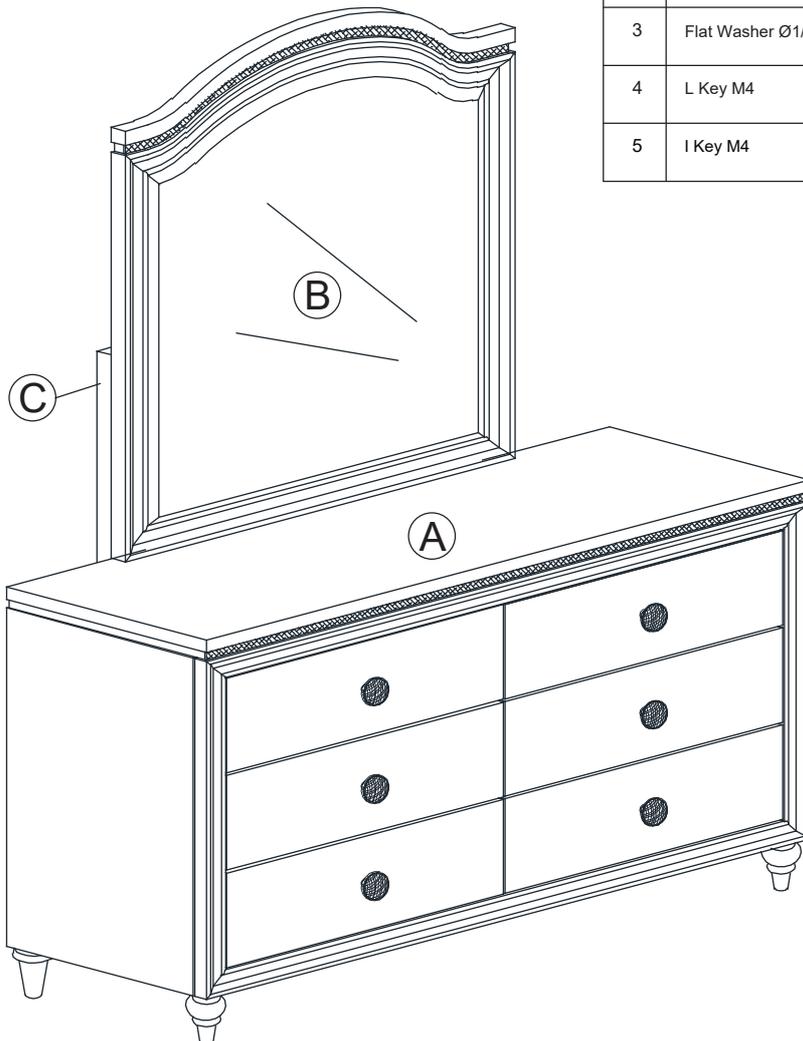




# ASSEMBLY INSTRUCTION

## 7154 - 721 - MIRROR - SOPHIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the cartan during shipment.

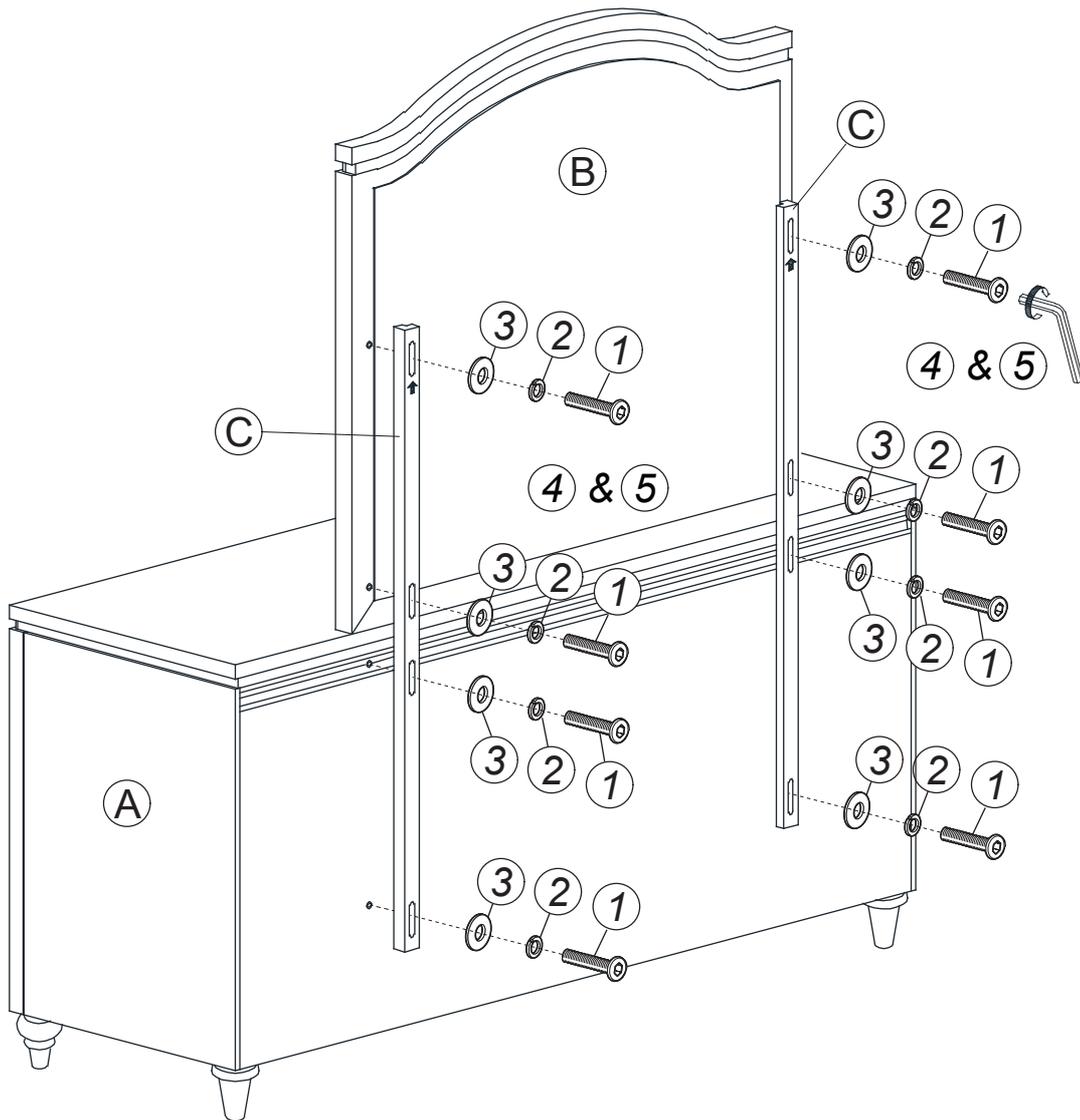

### STEP 1

Begin assembly by attaching each Mirror Support (C) to back of Mirror (B) using JCBC Nylok Bolt (1), Spring Washer (2) & Flat Washer (3). Tighten using L Key M4 (4) or I Key M4 (5) provided.