



## ASSEMBLY INSTRUCTION

### 7154-716 DRESSER - SOPHIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED):  
PHILIPS SCREW DRIVER




#### PART LIST

No.	Description	Picture	Q'ty
A	Drawer Dresser		1
B	Front Bun Foot (Acrylic)		2
C	Back Bun Foot (Wood)		2
D	Knob		6
E	Support Leg		1

#### HARDWARE LIST

No.	Description	Picture	Q'ty
1	Tip Restraint Kit		1

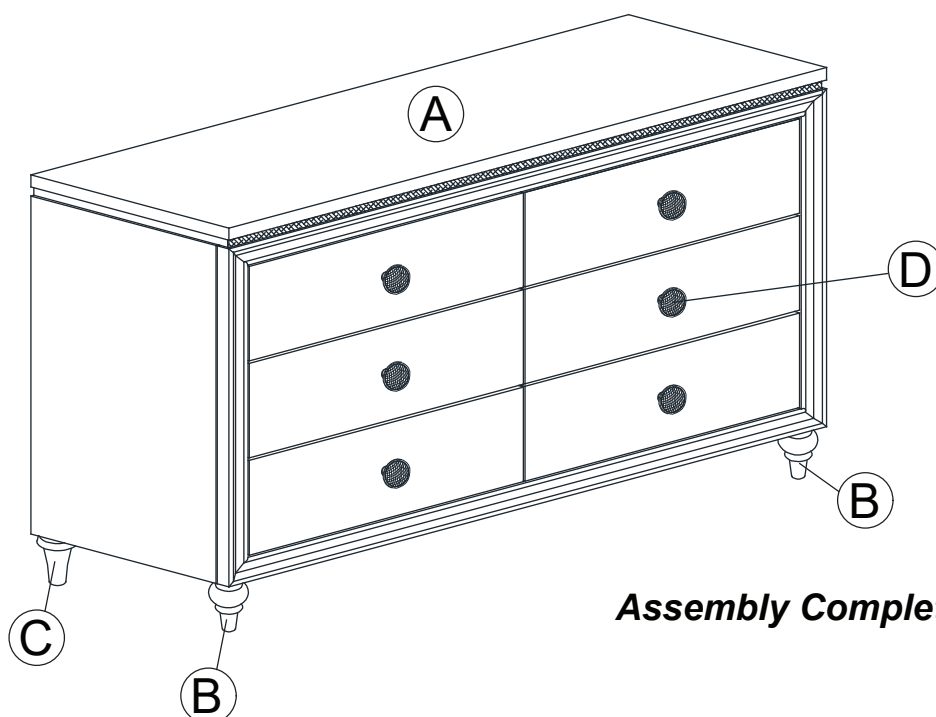

**Assembly Complete**



# ASSEMBLY INSTRUCTION

## 7154-716 DRESSER - SOPHIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that


### STEP 1 - FIGURE 1

Begin assembly by removing Bun Foot (B) & (C) from drawer in Dresser (A).

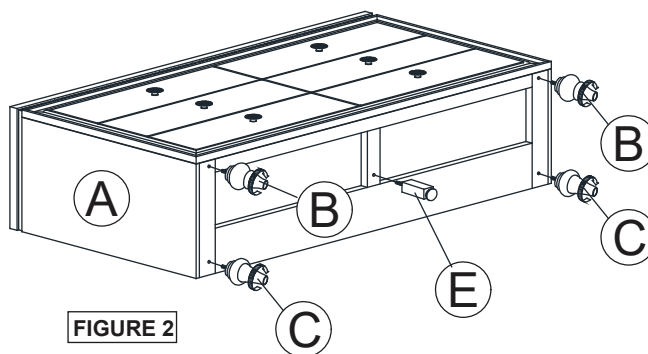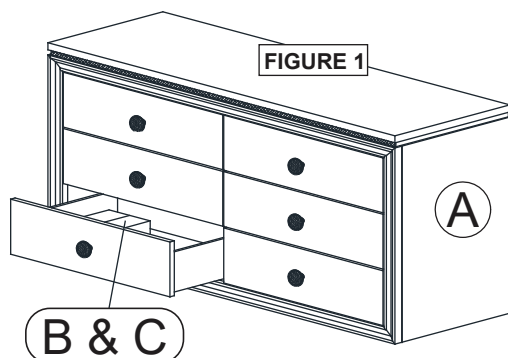

### STEP 2 - FIGURE 2

Secure Bun Feet (B) (C) & Support Leg (E) to Dresser (A) by screwing into place.

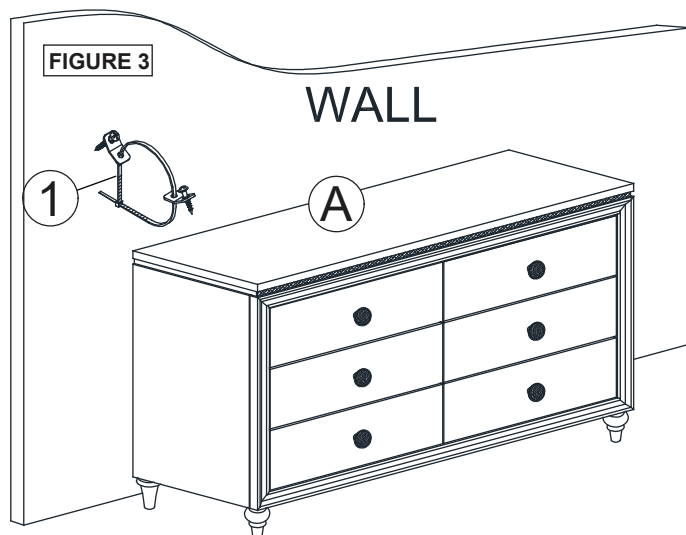

### STEP 3 - FIGURE 3

Attach one end of Tip Restraint Kit (1) to wall and the other end to Dresser (A). The assembly is now complete.






## ASSEMBLY INSTRUCTION






### 7154 - 721 - MIRROR - SOPHIA


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

#### PART LIST

No.	Description	Picture	Q'ty
A	Dresser		1
B	Mirror		1
C	Mirror Support		2

#### HARDWARE LIST

No.	Description	Picture	Q'ty
1	JCBC Nylok Bolt M6 x 35mm		8
2	Spring Washer Ø1/4"		8
3	Flat Washer Ø1/4" x 20mm		8
4	L Key M4		1
5	I Key M4		1

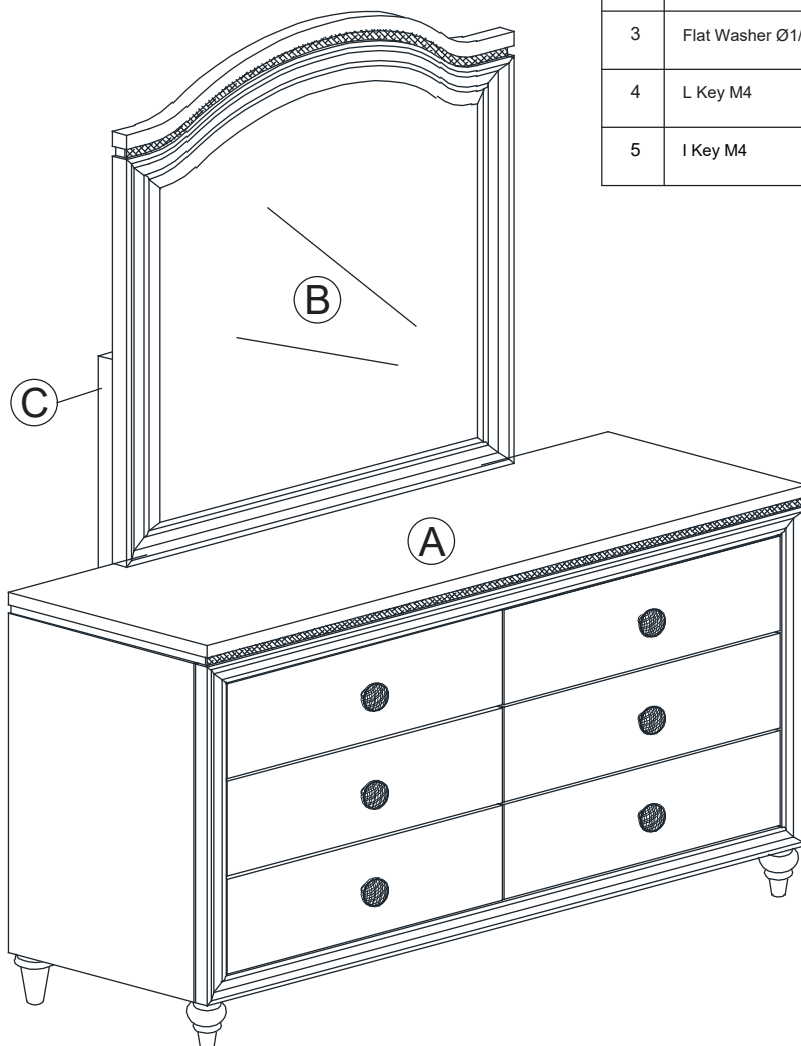




# ASSEMBLY INSTRUCTION

## 7154 - 721 - MIRROR - SOPHIA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

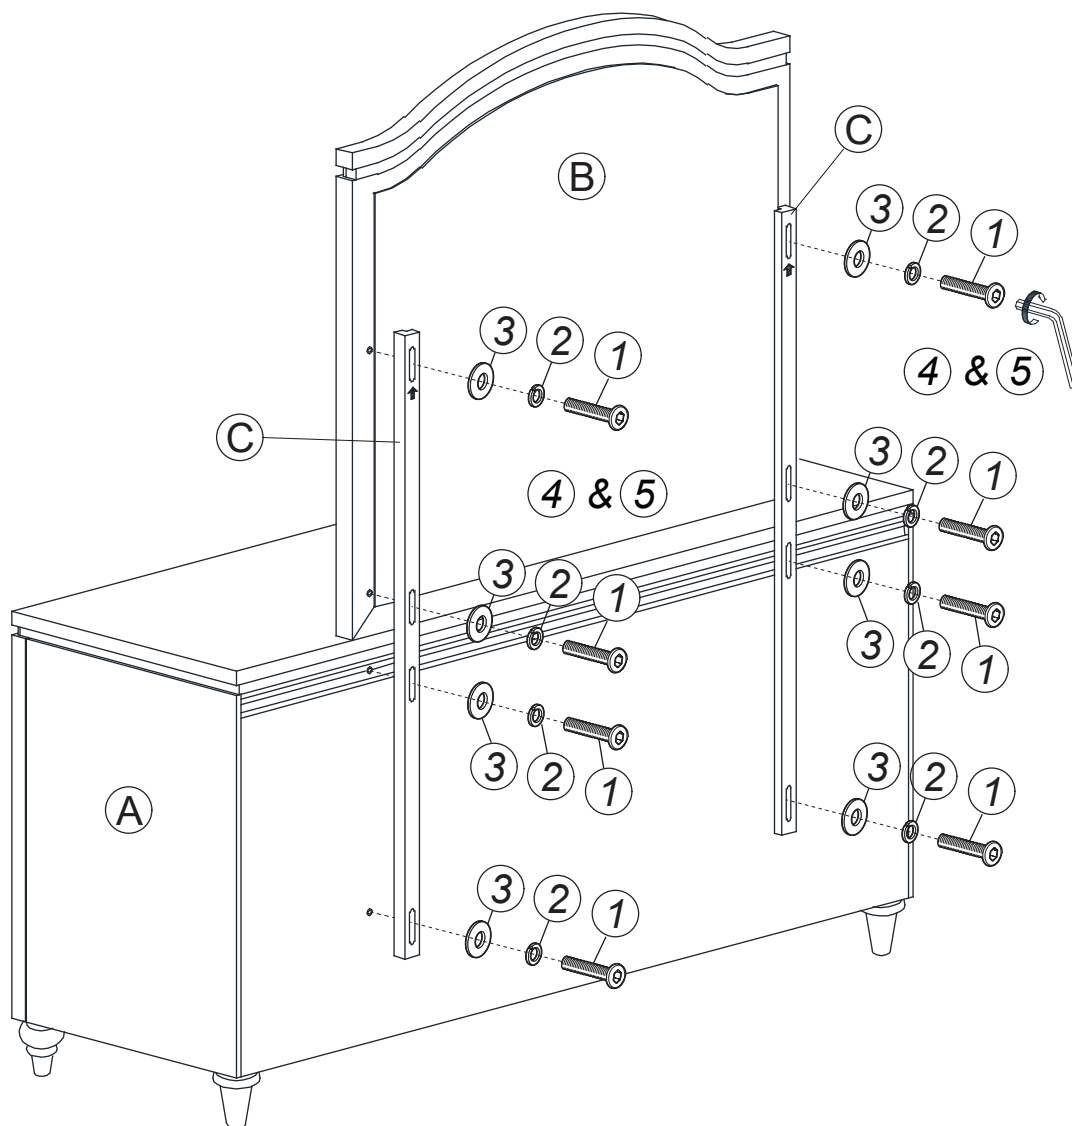

### STEP 1

Begin assembly by attaching each Mirror Support (C) to back of Mirror (B) using JBBC Nylok Bolt (1), Spring Washer (2) & Flat Washer (3). Tighten using L Key M4 (4) or I Key M4 (5) provided.