







# ASSEMBLY INSTRUCTIONS

ITEM NO.: 2650-11

CHEST

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.

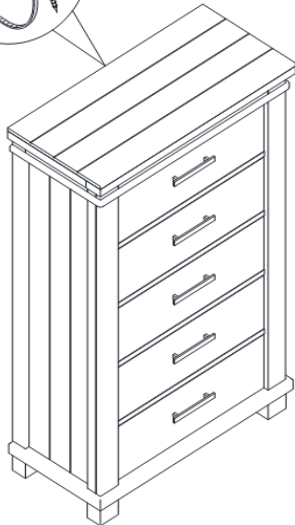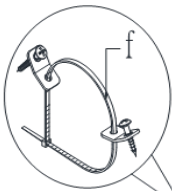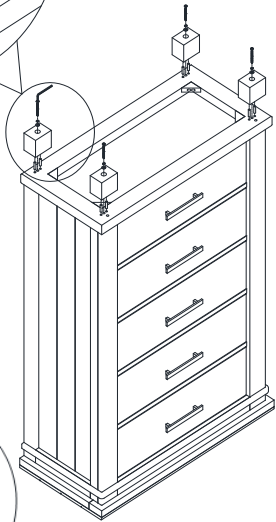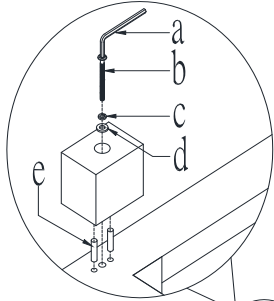

## TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER



## PARTS LIST:

NO	DESCRIPTION	SKETCH	QTY
A	CHEST		1 PC
B	BUN FEET		4 PCS

## HARDWARE LIST:

NO	DESCRIPTION	SKETCH	SIZE	QTY
a	Allen Key		4 x 74 x 29mm	1 PC
b	Bolt		φ 1/4"x 15 x 70mm	4 PCS
c	Spring Washer		φ 1/4"x φ 11x 2mm T	4 PCS
d	Flat Washer		φ 1/4"x φ 18 x 2mm T	4 PCS
e	WOODEN DOWEL		10*40mm	8 PCS
f	TIPPING RESTRAINT			1 set
g	STRAIGHT ALLEN KEY		4*100mm	1PC

STEP 1: Lay the chest (A) up side down on a soft surface. Insert wooden dowel (e) to the bottom of chest (A). Attach bun feet (B) by using allen key (a), bolt (b), spring washer (c), flat washer (d).

### Important note:

1. The furniture tipping restraint is stapled to the back of the CHEST.
2. The hardware bag is packed with CHEST.