ASSEMBLY INSTRUCTIONS

ITEM NO.: 3650&3651-17H/46USF/18R TW PANEL HB W/STORAGE FOOTBOARD & RAILS -TRIBECA YTH

Q'TY

1 PC

1 PC

2 PCS

1 PC

1 SET

2 PCS

2 PCS

2 PCS

Q'TY

1 PC

16 PCS

16 PCS

16 PCS

1 PC

SIZE

4 x 74 x 29mm


4*100mm

4x100mm

∮ 1/4"x 15 x 38m

∮1/4"x∮11x 2mm T

∮1/4"x∮18 x 2mm '

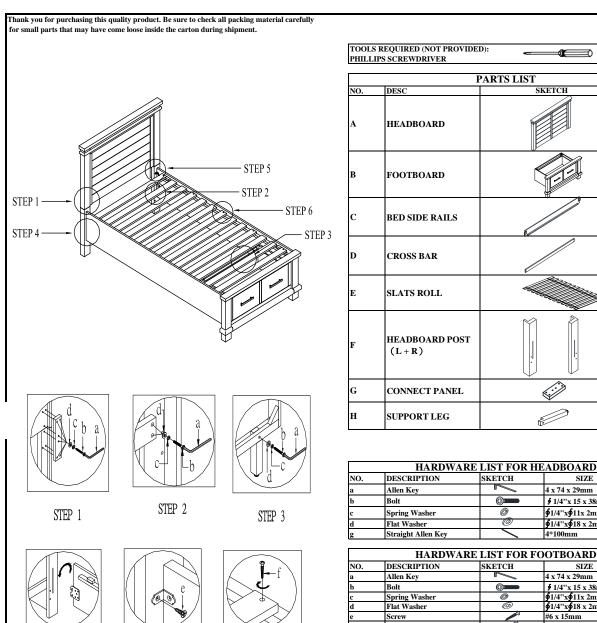

HARDWARE LIST FOR FOOTBOARD				
NO.	DESCRIPTION	SKETCH	SIZE	Q'TY
a	Allen Key	7	4 x 74 x 29mm	1 PC
b	Bolt	0	∮ 1/4"x 15 x 38mm	2 PCS
с	Spring Washer	©	∮1/4"x∮11x 2mm T	2 PCS
d	Flat Washer	<i>©</i> .	∮1/4''x∮18 x 2mm T	2 PCS
e	Screw	20	#6 x 15mm	4 PCS
f	Screw	-50	#8v30mm	10 PC

- STEP 1: ATTACH CONNECT PANEL (G) TO HEADBOARD POST (F) HEADBOARD (A) BY USING ALLEN KEY (a), BOLT (b), SPRING WASHER (c) AND FLAT WASHER (d).
- STEP 2: ATTACH CROSS BAR (D) TO THE HEADBOARD POST (F) BY USING ALLEN KEY (a), BOLT (b), SPRING WASHER (c) AND FLAT WASHER (d).

STEP 6

- STEP 3: ATTACH SUPPORT LEGS (H) TO THE STORAGE FOOTBOARD (B) BY USING ALLEN KEY (a), BOLT (b), SPRING WASHER (c), FLAT WASHER (d).
- STEP 4: HANG SIDE RAILS (C) TO THE HEADBOARD POST (F) AND FOOTBOARD (B). STEP 5: SECURE SIDE REAILS (C) WITH HEADBOARD POST (F) BY USING SCREW (e).

STEP 5

STEP 6: ATTACH SLATS (E) TO SIDE RAILS (C) BY USING SCREW (f).

IMPORTANT NOTE:

STEP 4

- 1. HARDWARE BAG FOR HEADBOARD IS PACKED WITH HEADBOARD.
- 2. HARDWARE BAG FOR FOOTBOARD AND SLATS IS PACKED WITH FOOTBOARD.

Made In Vietnam

Straight Allen Key