
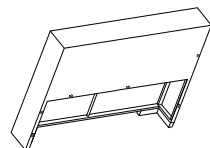


PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

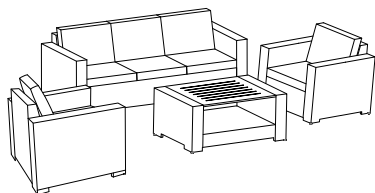


A

x3 Left Arm Panel
x3 Panneau du bras gauche
x3 Panel del brazo izquierdo

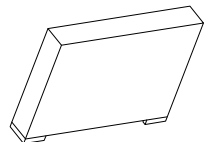


B

x3 Right Arm Panel
x3 Panneau de bras droit
x3 Panel del brazo derecho




C

x2 Back Panel (arm chair)
x2 Panneau arrière (fauteuil)
x2 Panel posterior (Sillón)




D

x2 Seat Panel (arm chair)
x2 Panneau de siège (fauteuil)
x2 Panel de asiento (Sillón)

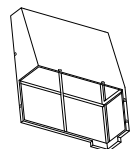

E

x1 Back Panel (left corner chair)
x1 Panneau arrière (chaise d'angle gauche)
x1 Panel trasero (silla de la esquina izquierda)

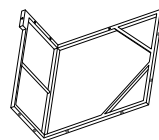


F

x1 Seat Panel (left corner chair)
x1 Panneau de siège (chaise d'angle gauche)
x1 Panel de asiento (silla de la esquina izquierda)




G

x4 Side Panel (armless&corner chair)
x4 Panneau latéral (sans bras et chaise d'angle)
x4 Panel lateral (sin brazos y silla de esquina)

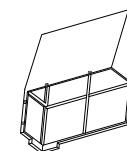


H

x1 Back Panel (right corner chair)
x1 Panneau arrière (chaise d'angle droite)
x1 Panel trasero (silla de la esquina derecha)

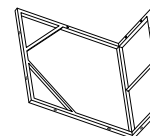


I

x1 Seat Panel (right corner chair)
x1 Panneau de siège (chaise d'angle droite)
x1 Panel de asiento (silla de la esquina derecha)

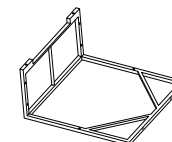


J

x1 Seat Panel (armless chair)
x1 Panneau de siège (chaise sans bras)
x1 Panel de asiento (silla sin brazo)



K

x1 Back Panel (armless chair)
x1 Panneau arrière (chaise sans bras)
x1 Panel trasero (silla sin brazos)

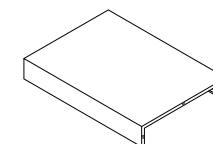



L

x1 Bottom Panel
x1 Panneau du bas
x1 Panel inferior

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

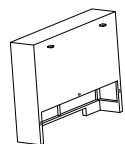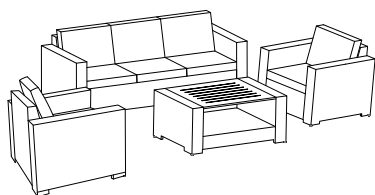

M

x2 Table Side Panel
x2 Panneau latéral de table
x2 Panel lateral de mesa



N

x1 Table Panel
x1 Panneau de table
x1 Panel de mesa



O

x5 Seat Cushion
x5 Coussin de siege
x5 Cojín del asiento



P

x5 Back Cushion
x5 Coussin Dos
x5 Amortiguador trasero



Q

x4(Extra 1) M6*20mm Bolt
x4(Extra 1) Boulon M6*20mm
x4(Extra 1) Perno M6*20mm



R

x12(Extra 2) M6*35mm Bolt
x12(Extra 2) Boulon M6*35mm
x12(Extra 2) Perno M6*35mm



S

x60(Extra 4) M6*55mm Bolt
x60(Extra 4) Boulon M6*55mm
x60(Extra 4) Perno M6*55mm




T

x136(Extra 8) M6 Washer
x136(Extra 8) Rondelle M6
x136(Extra 8) Lavadora M6



U

x60(Extra 4) M6 Nut
x60(Extra 4) Écrou M6
x60(Extra 4) Tuerca M6



V

x2 M6 Wrench
x2 Clé M6
x2 Llave M6



W

x2 M6 Allen Wrench
x2 Clé allen m6
x2 Llave allen M6



X

x24(Extra 2) M6 Leveler
x24(Extra 2) M6 Niveleur
x24(Extra 2) Nivelador M6

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno


Steps 1-3

Chair Assembly:


Lay Back Panel (C) on a soft dry surface and align the bolt holes on R/L Arm Panels (A & B) with those on the the back panel. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten, but do not tighten completely. Now add Seat Panel (D) aligning the bolt holes, and repeat the bolt process as in step 1. Now make sure all of the panels are aligned properly and tighten all bolts completely. Add levelers(X) by inserting into the legs and turning clockwise.

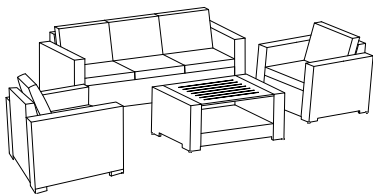


Step1

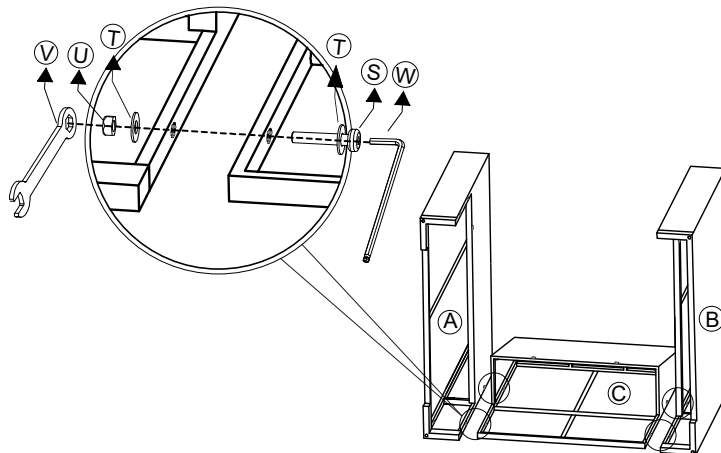


Step2

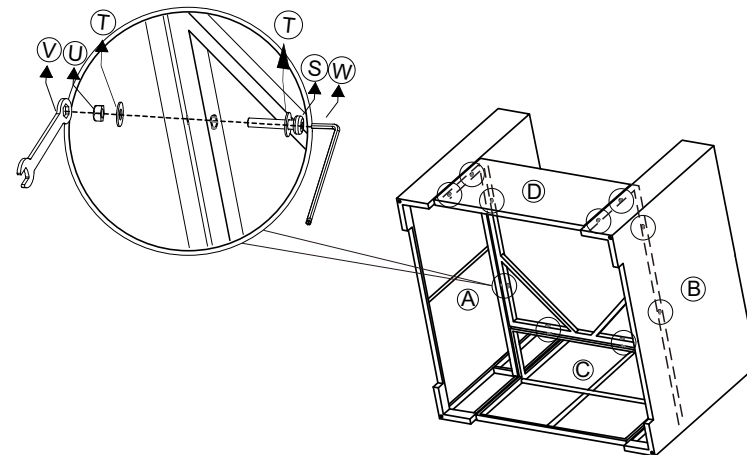

Step3

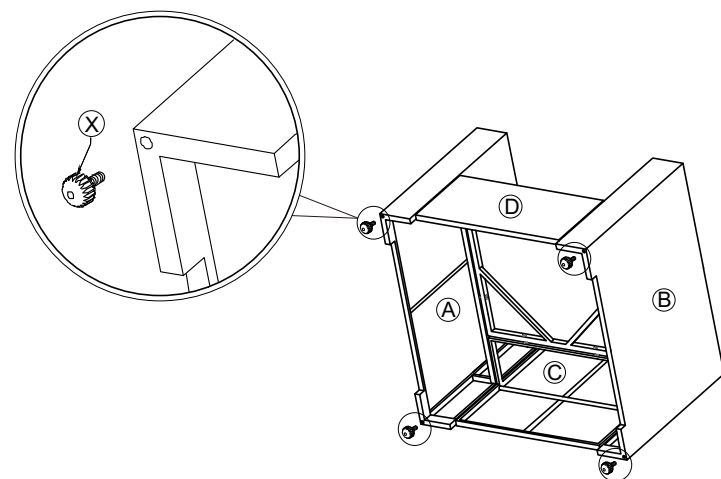

Step4

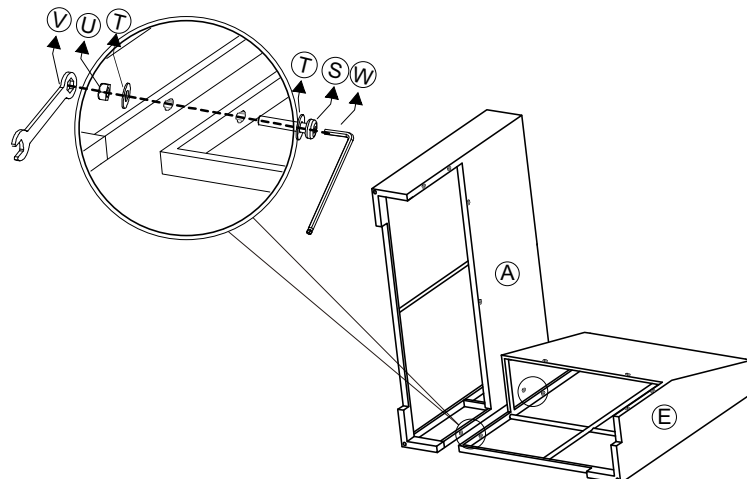

Step 4

Left Corner Chair Assembly:

Lay Back Panel (E) on a soft dry surface and align the bolt holes on Left Arm Panel (A) with those on the the back panel. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten, but do not tighten completely. Now add Seat Panel (D) aligning the bolt holes, and repeat the bolt process as in step 1. Now make sure all of the panels are aligned properly and tighten all bolts completely. Add levelers(X) by inserting into the legs and turning clockwise.

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

Steps 5-7

Left Corner Chair Assembly continued:

Lay Side Panel (G) on a soft dry surface and align the bolt holes on Seat Panel (F) with those on the side panel. Add Washer (T) to Medium Bolt (R) and insert through the bolt holes as shown in the diagram. Make sure the panels are aligned properly, but do not tighten completely. Now add assembled parts (F & G) to assemble parts (A & E) aligning the bolt holes. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten all bolts completely. Add levelers (X) by inserting into the legs and turning clockwise.

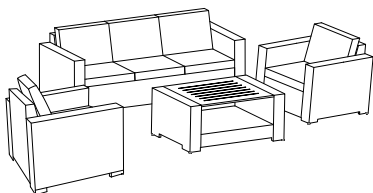


Step 8


Right Corner Chair Assembly:

Lay Back Panel (H) on a soft dry surface and align the bolt holes on Right Arm Panel (B) with those on the back panel. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten, but do not tighten completely.


Step5

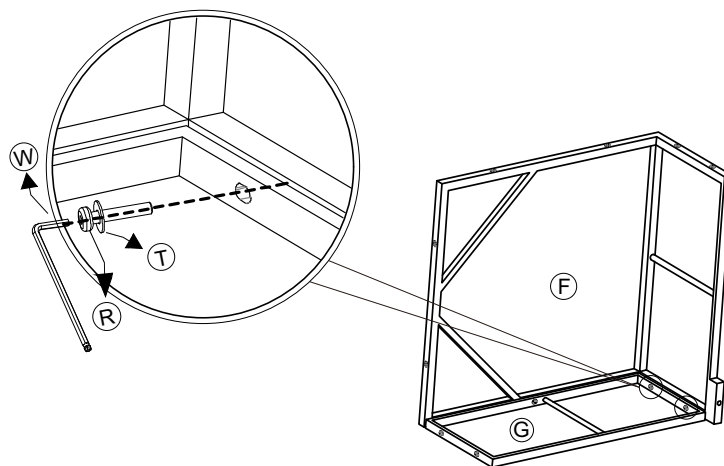


Step6

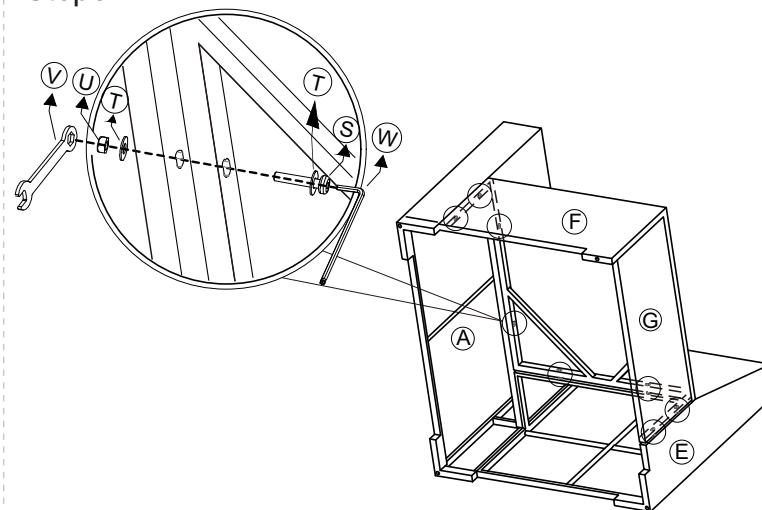

Step7

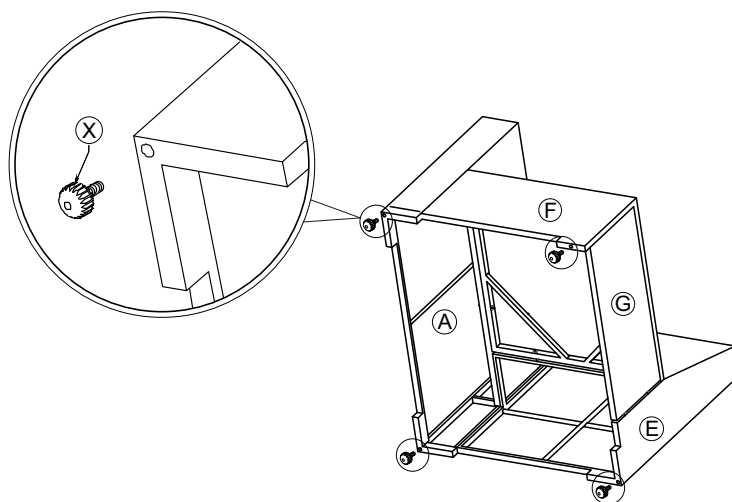

Step8

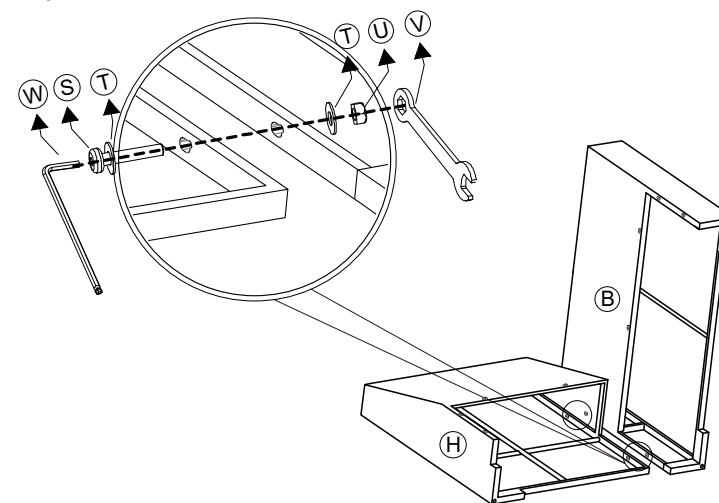

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno


Steps 9-11

Right Corner Chair Assembly continued:


Lay Side Panel (G) on a soft dry surface and align the bolt holes on Seat Panel (I) with those on the side panel. Add Washer (T) to Medium Bolt (R) and insert through the bolt holes as shown in the diagram. Make sure the panels are aligned properly, but do not tighten completely. Now add assembled parts (I & G) to assemble parts (B & H) aligning the bolt holes. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten all bolts completely. Add levelers (X) by inserting into the legs and turning clockwise.

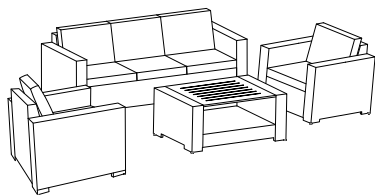


Step9

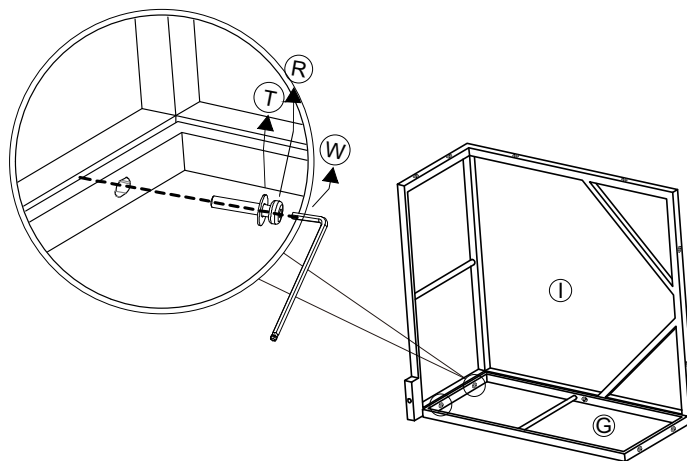


Step10

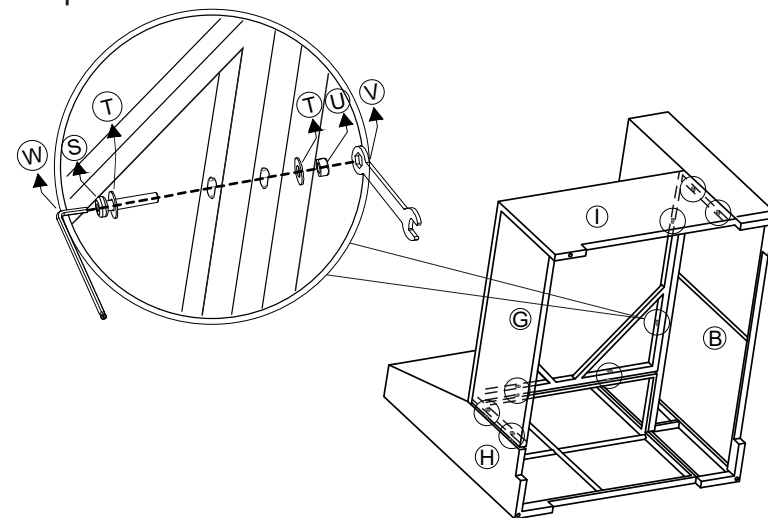

Step11

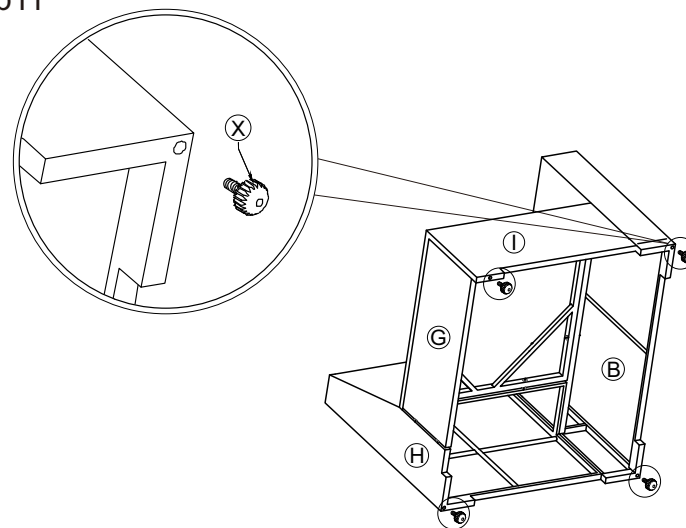

Step12

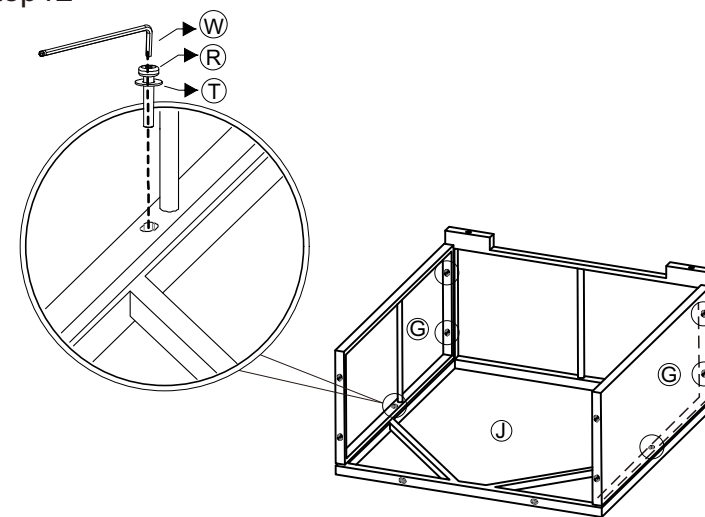

Step 12

Armless Chair Assembly:

Lay Seat Panel (J) on a soft dry surface and align the bolt holes on Side Panels (G) with those on the seat panel. Add Washer (T) to Medium Bolt (R) and insert through the bolt holes as shown in the diagram. Make sure the panels are aligned properly, but do not tighten completely.

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno


Steps 13-14

Armless Chair Assembly Continued:


Lay Back Panel (K) on it's side on a soft dry surface. Now add assembled parts (G&J) to Back Panel (K) aligning the bolt holes. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten all bolts completely. Add levelers (X) by inserting into the legs and turning clockwise.

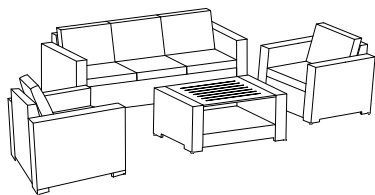


Step13

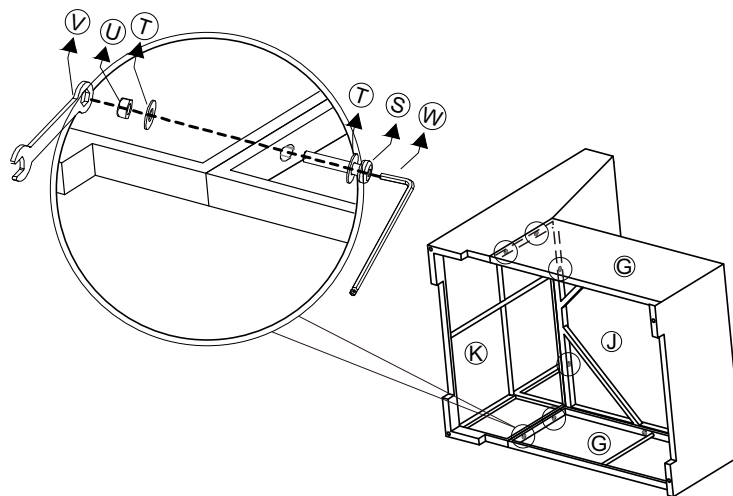


Step14

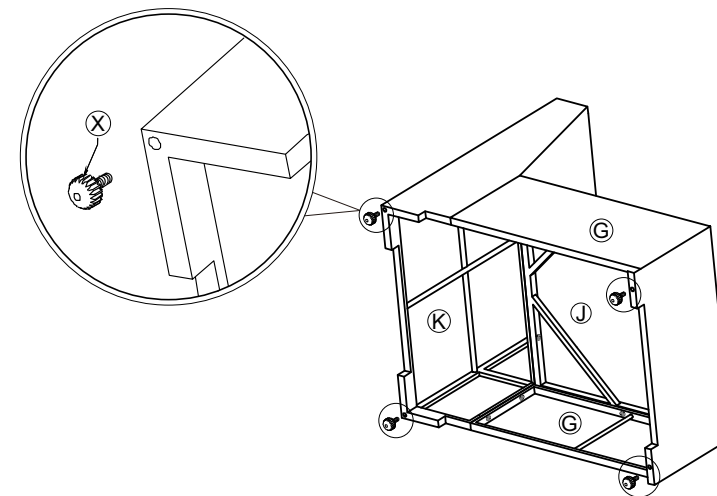

Step15

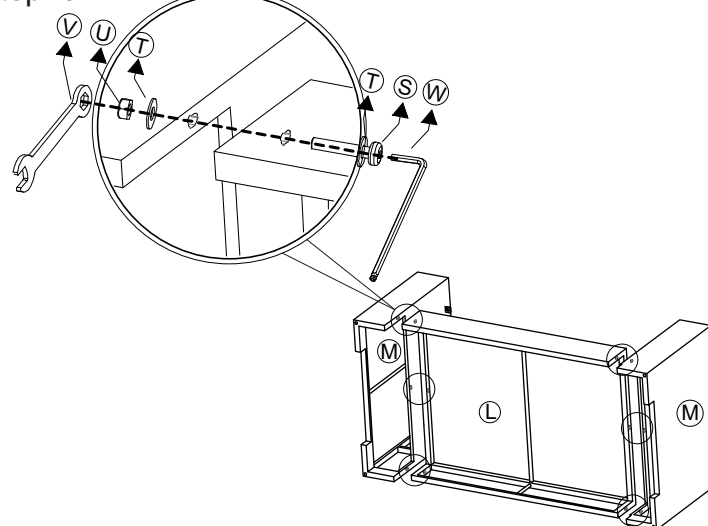

Step16

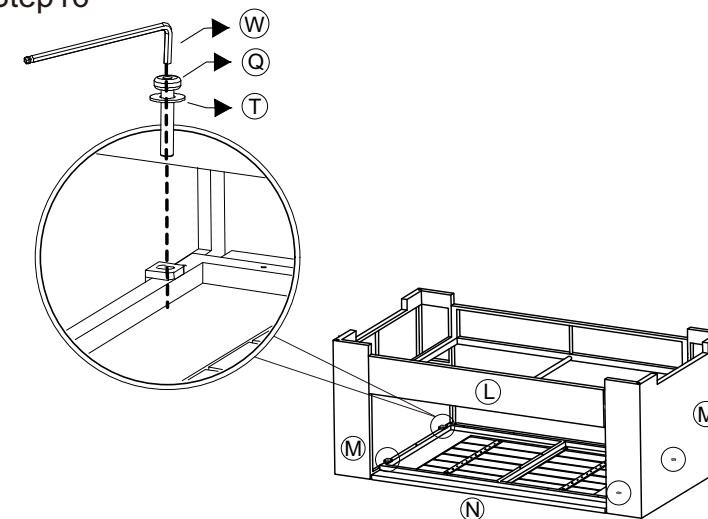

Step 15

Table Assembly:

Place Table Side Panels (M) on their side on a soft dry surface and align the bolt holes on Bottom Panel (L) with those on the side panels. Add Washer (T) to Long Bolt (S) and insert through the bolt holes as shown in the diagram. Add another Washer (T) and then Nut (U) and finger tighten. Use the provided Wrench (V) and Allen Wrench (W) to tighten all bolts completely. Make sure the panels are aligned properly, but do not tighten completely.

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D320

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

Step 16-17

Table Assembly Continued:

Lay Table Top Panel (N) on a soft dry surface with the bottom facing up. Turn assembled parts (L&M) upside down with legs facing up and add to the Table Top Panel (N) aligning the bolt holes. Add Washer (T) to Short Bolt (Q) and insert through the bolt holes as shown in the diagram. Make sure the panels are aligned properly, and use Allen Wrench (W) to tighten completely. Add levelers (X) by inserting into the legs and turning clockwise. Turn the table right side up.

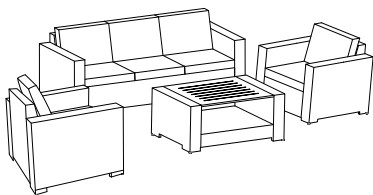


Step 18

Place the assembled furniture in your desired location and add Seat Cushions (O) and Back Cushions (P).

Enjoy!

Step17

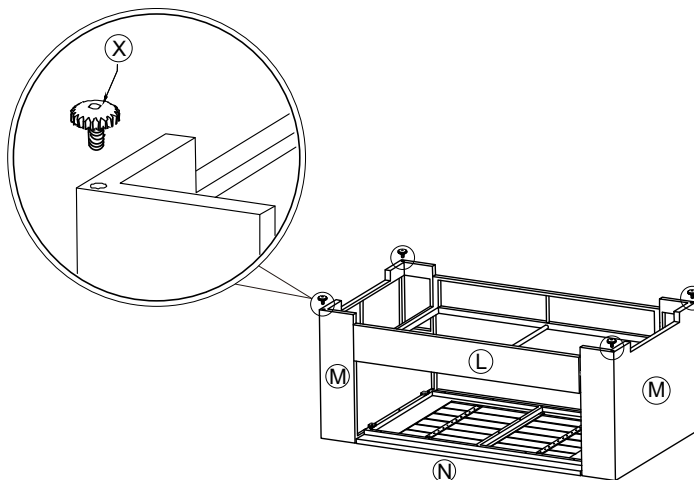

Step18

