



ASSEMBLY INSTRUCTION

ITEM # : 1913-106SHQR QN BKCS HDBD-DAKOTA GRAY

NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

PARTS LIST

NO.		DESCRIPTION	QTY
A		HEADBOARD BOOKCASE	1
B		LEG (R)	1
C		LEG (L)	1
D		FRONT STRETCHER	1
E		REAR STRETCHER	1


TOOLS REQUIRED (NOT PROVIDED)

PHILIP SCREW DRIVER 1 PC


HARDWARE LIST

NO.		DESCRIPTION	QTY
1		BOLT M6 x 35	12
2		SPRING WASHER M6	12
3		FLAT WASHER M6 x 19	12
4		ALLEN KEY M4	1
5		PANHEAD M4 x 32	4
6		STRAIGHT ALLEN KEY M4	1

STEP 1

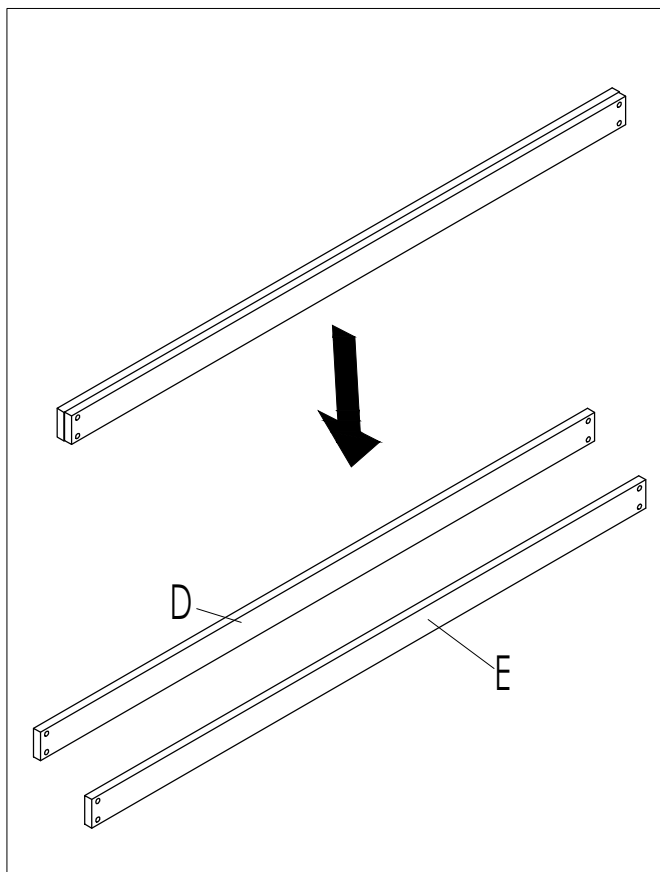

STEP 2

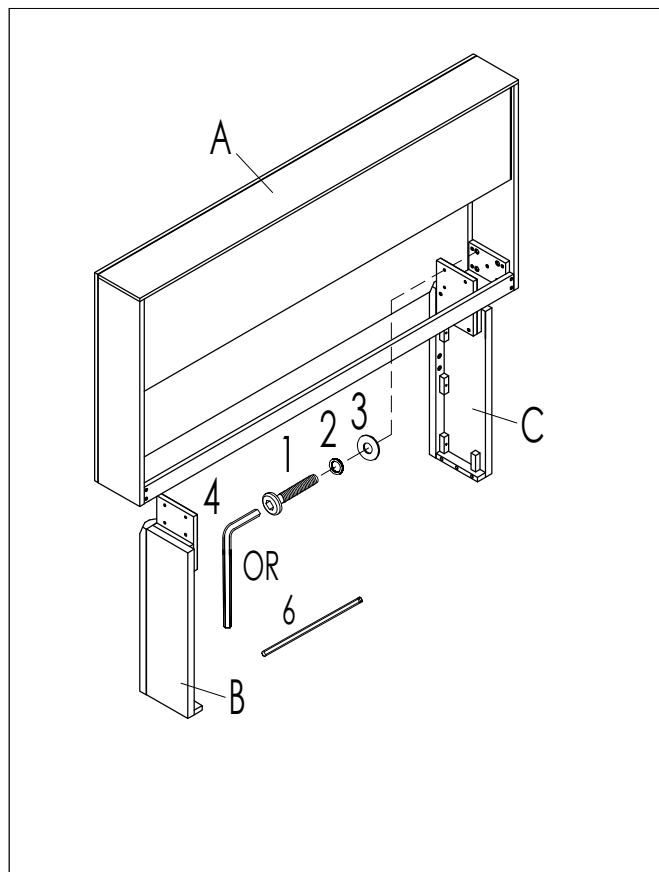




ASSEMBLY INSTRUCTION



ITEM # : 1913-106SHQR QN BKCS HBDB-DAKOTA GRAY

NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

STEP 3

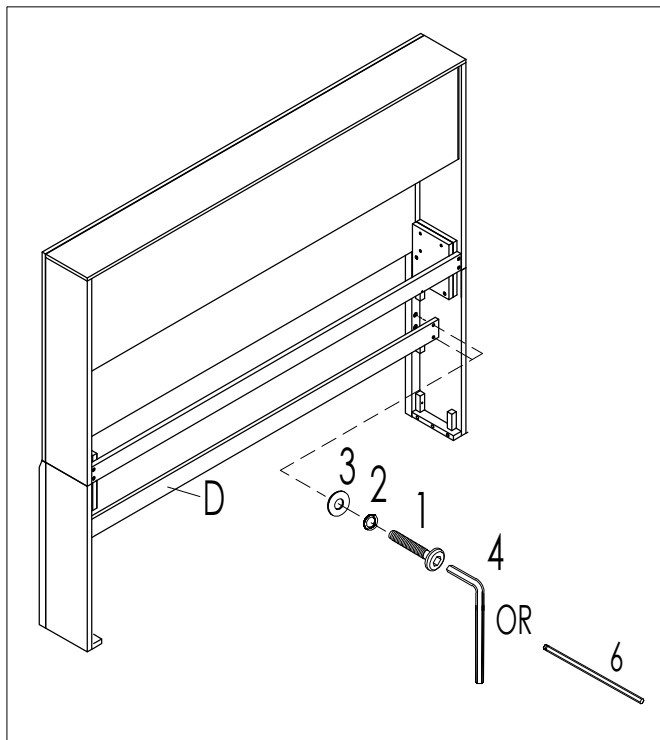

STEP 4

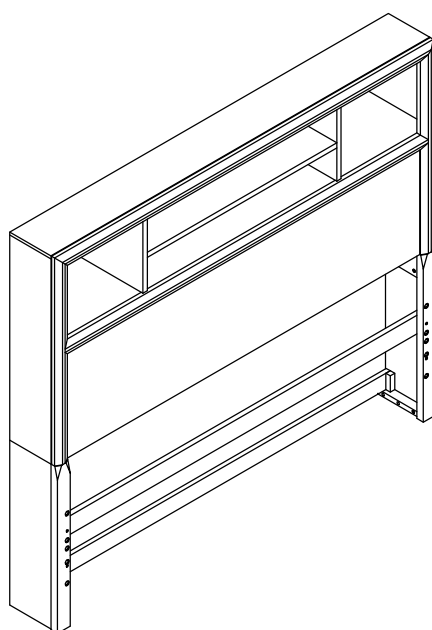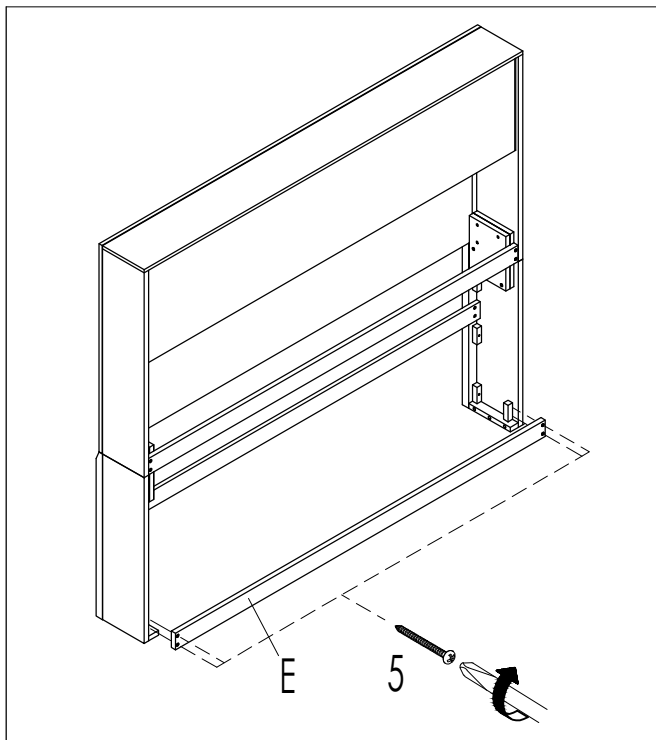



ASSEMBLY INSTRUCTION

ITEM # : 1913-106SHQR QN BKCS HBDB-DAKOTA GRAY
 ITEM # : 1913-106SFQR QN STG FTBD & SLTS-DAKOTA GRAY
 ITEM # : 1913-106DRWR 1 SD DRW+1 FTBD DRW-DAKOTA GRAY
 ITEM # : 1913-106RLR QN/KG STRG RAILS-DAKOTA GRAY

**NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
 KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED**


DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

PARTS LIST			
NO.		DESCRIPTION	QTY
A		HEADBOARD	1
B		FOOTBOARD	1
C		SIDE RAIL	2
D		FOOTBOARD DRAWER BASE FRAME	1
E		SLAT ROLL (1540 x 42 x 17mm)	1
F		VERTICAL LEG - 1 (447 x 29 x 29mm)	6
G		VERTICAL LEG - 2 (356 x 29 x 29mm)	2
H		VERTICAL LEG - 3 (339 x 29 x 29mm)	2
I		VERTICAL LEG - 4 (112 x 29 x 29mm)	6
J		SIDE RAIL DRAWER BASE FRAME	2
K		CTR. SUPPORT	2
L		FOOTBOARD DRAWER	2
M		SIDE RAIL DRAWER	2

TOOLS REQUIRED (NOT PROVIDED)	
PHILIP SCREW DRIVER	1 PC

HARDWARE LIST			
NO.		DESCRIPTION	QTY
1		BOLT M6 x 35	20
2		SPRING WASHER M6	24
3		FLAT WASHER M6 x 19	20
4		FLAT WASHER M6 x 13	4
5		ALLEN KEY M4	1
6		BOLT M6 x 45	4
7		PANHEAD M4 x 32	26
8		WOOD DOWEL Ø8 x 30	11
9		STRAIGHT ALLEN KEY M4	1

STEP 1

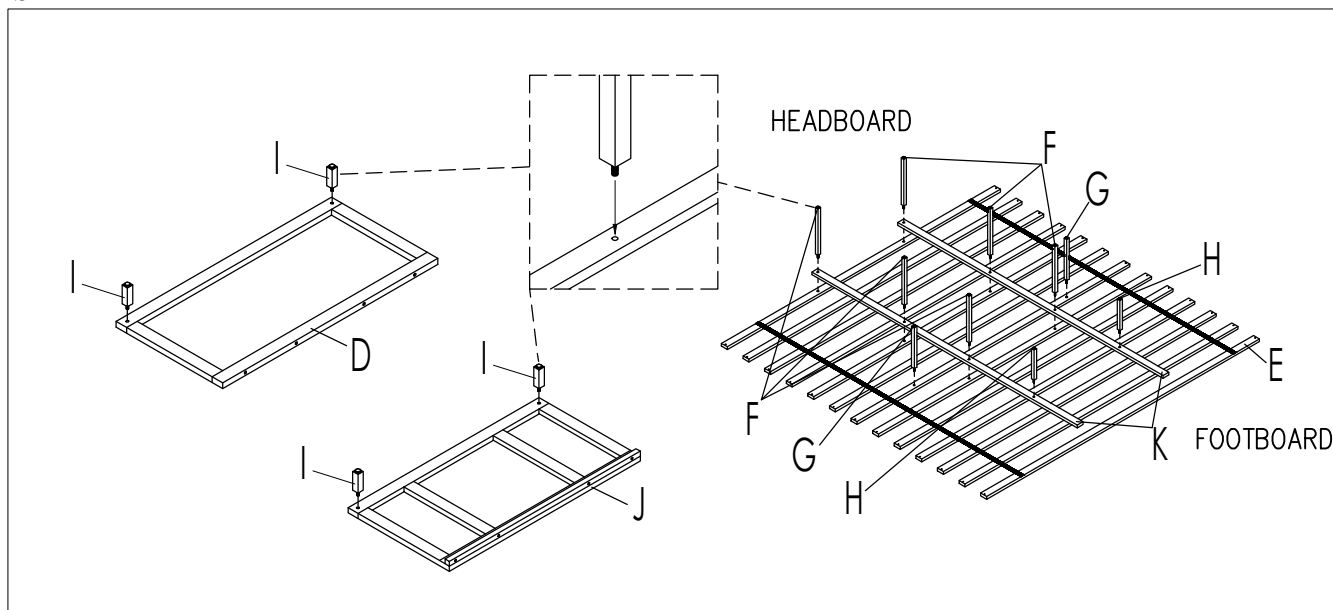




ASSEMBLY INSTRUCTION

ITEM # : 1913-106SHQR QN BKCS HBDB-DAKOTA GRAY
 ITEM # : 1913-106SFQR QN STG FTBD & SLTS-DAKOTA GRAY
 ITEM # : 1913-106DRWR 1 SD DRW+1 FTBD DRW-DAKOTA GRAY
 ITEM # : 1913-106RLR QN/KG STRG RAILS-DAKOTA GRAY


NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
 KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

STEP 2

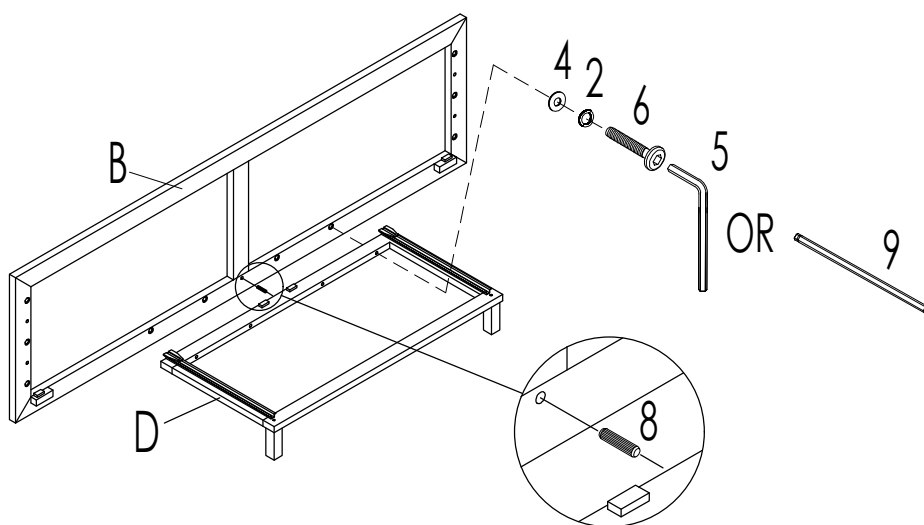

STEP 3

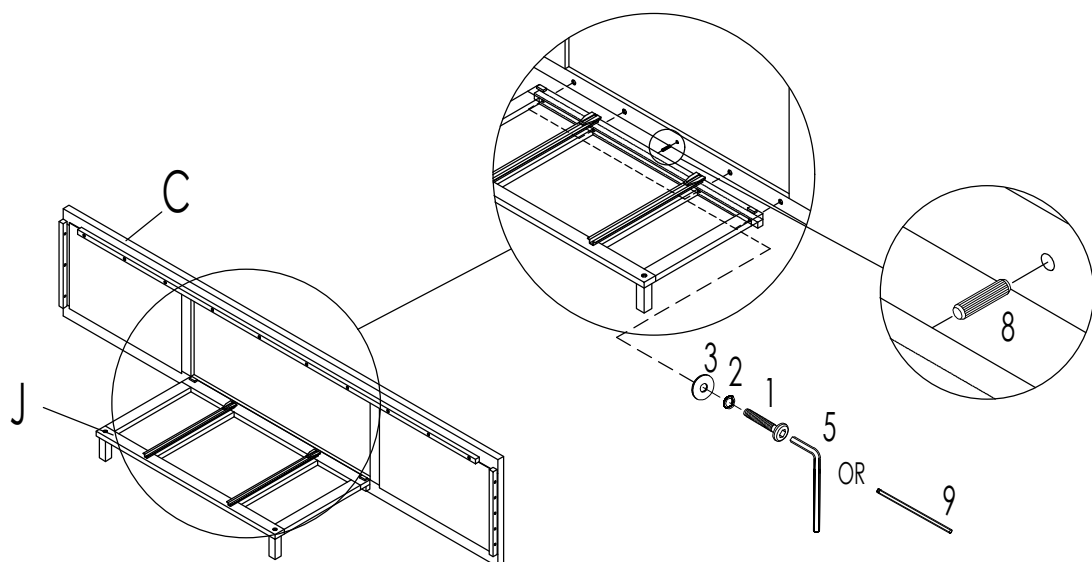

*** Repeat step 2 on the other side Side Rail.**




ASSEMBLY INSTRUCTION

ITEM # : 1913-106SHQR QN BKCS HBDB-DAKOTA GRAY
 ITEM # : 1913-106SFQR QN STG FTBD & SLTS-DAKOTA GRAY
 ITEM # : 1913-106DRWR 1 SD DRW+1 FTBD DRW-DAKOTA GRAY
 ITEM # : 1913-106RLR QN/KG STRG RAILS-DAKOTA GRAY


NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
 KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

STEP 4

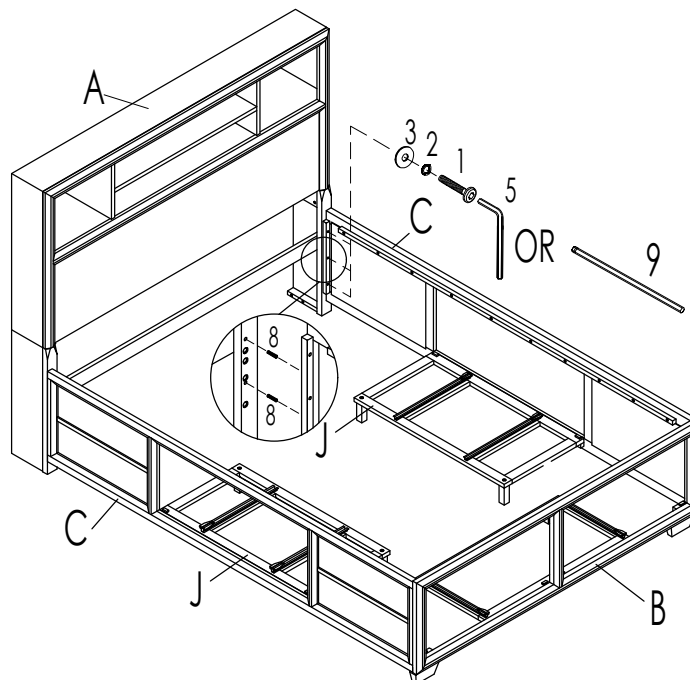

STEP 5

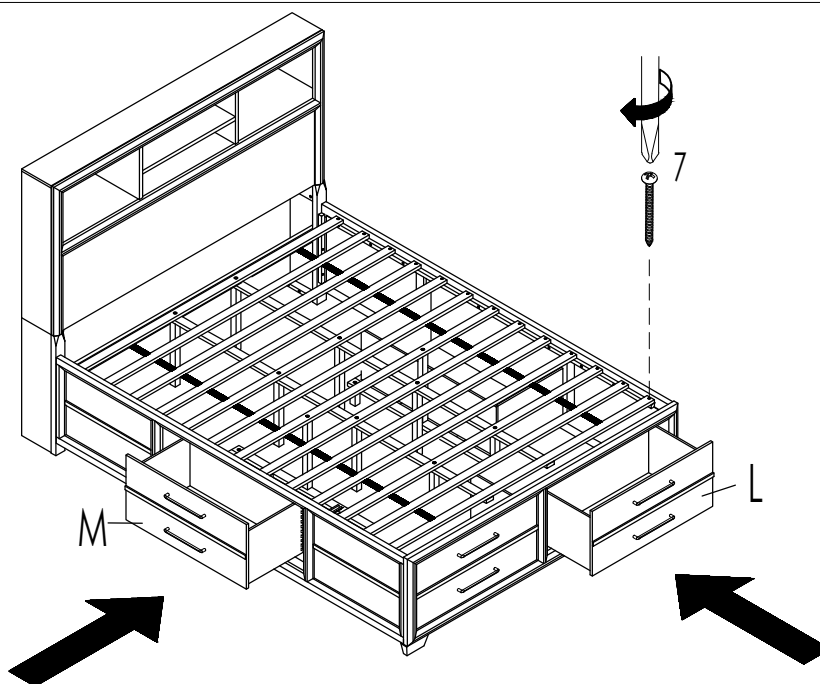



ASSEMBLY INSTRUCTION

ITEM # : 1913-120R 2 DRWR NIGHTSTAND-DAKOTA GRAY

NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

PARTS LIST

NO.		DESCRIPTION	QTY
A		NIGHT STAND	1
B		FRONT LEG	2
C		BACK LEG	2


TOOLS REQUIRED (NOT PROVIDED)

PHILIP SCREW DRIVER	1 PC
---------------------	------

HARDWARE LIST


NO.		DESCRIPTION	QTY
1		BOLT M6 x 35	8
2		SPRING WASHER M8	8
3		FLAT WASHER M8 x 18	8
4		ALLEN KEY M4	1
5		TIPPING RESTRAINT	1
6		STRAIGHT ALLEN KEY M4	1

STEP 2

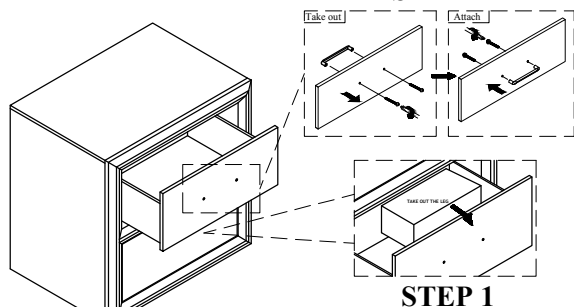


STEP 1


STEP 3

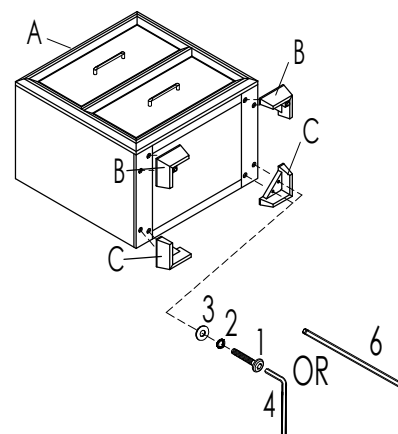

STEP 5

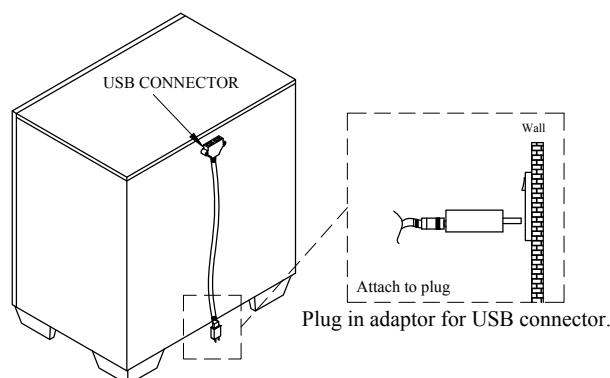

STEP 4

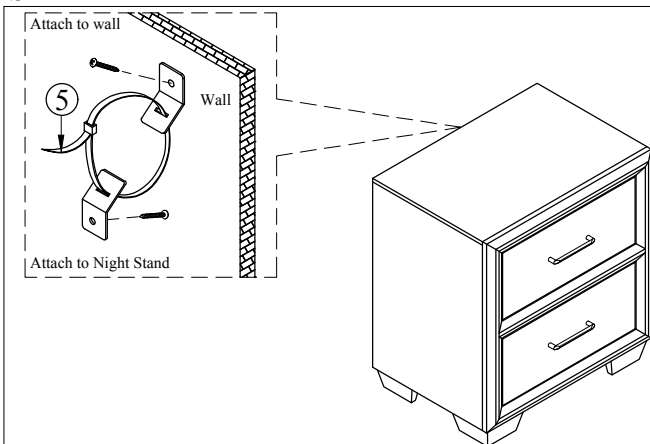



ASSEMBLY INSTRUCTION

ITEM # : 1913-150R 5 DRAWER CHEST-DAKOTA GRAY

NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!

PARTS LIST


NO.		DESCRIPTION	QTY
A		CHEST	1
B		FRONT LEG	2
C		BACK LEG	2

TOOLS REQUIRED (NOT PROVIDED)


PHILIP SCREW DRIVER	1 PC
---------------------	------

HARDWARE LIST


NO.		DESCRIPTION	QTY
1		BOLT M6 x 35	8
2		SPRING WASHER M8	8
3		FLAT WASHER M8 x 18	8
4		ALLEN KEY M4	1
5		TIPPING RESTRAINT	1
6		STRAIGHT ALLEN KEY M4	1

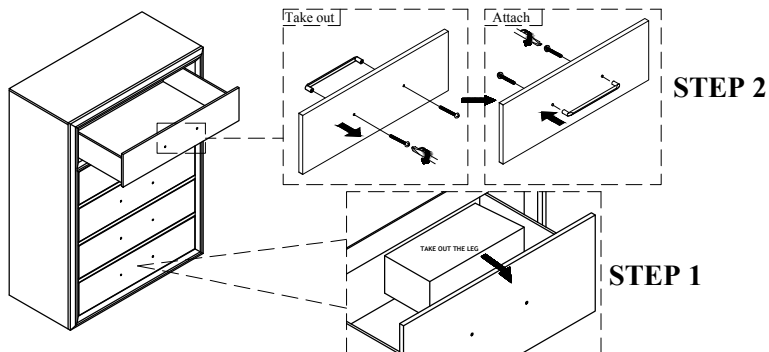

STEP 3

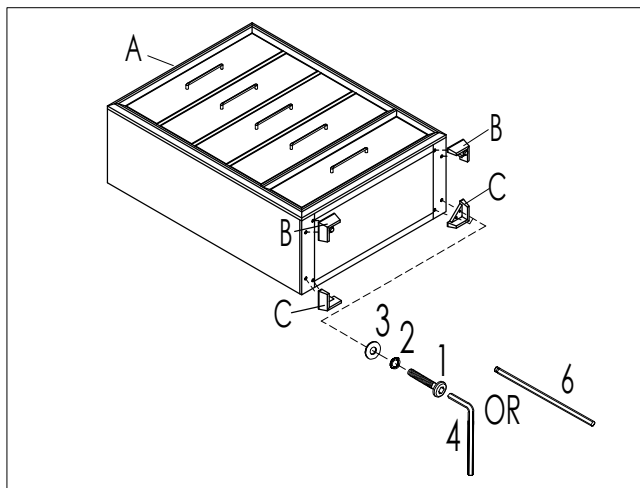

STEP 4

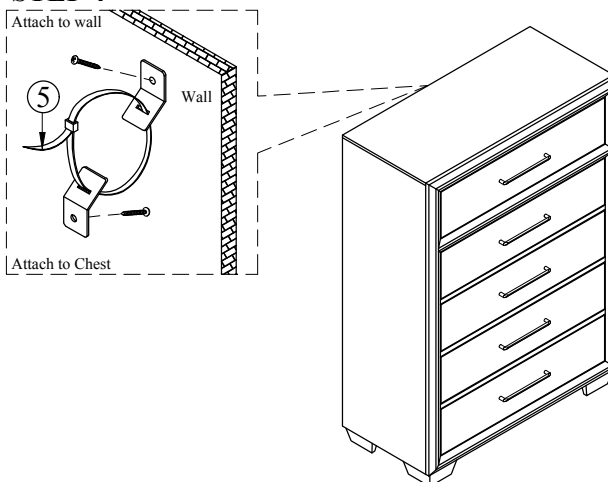



ASSEMBLY INSTRUCTION

ITEM # : 1913-140R MIRROR-DAKOTA GRAY
ITEM # : 1913-130R 9 DRAWER DRESSER-DAKOTA GRAY

NOTE : THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !!


PARTS LIST

NO.		DESCRIPTION	QTY
A		MIRROR	1
B		MIRROR SUPPORT	2
C		DRESSER	1


HARDWARE LIST

NO.		DESCRIPTION	QTY
1		BOLT M6 x 35	8
2		SPRING WASHER M8	8
3		FLAT WASHER M8 x 18	8
4		ALLEN KEY M4	1
5		TIPPING RESTRAINT	1
6		STRAIGHT ALLEN KEY M4	1

STEP 1

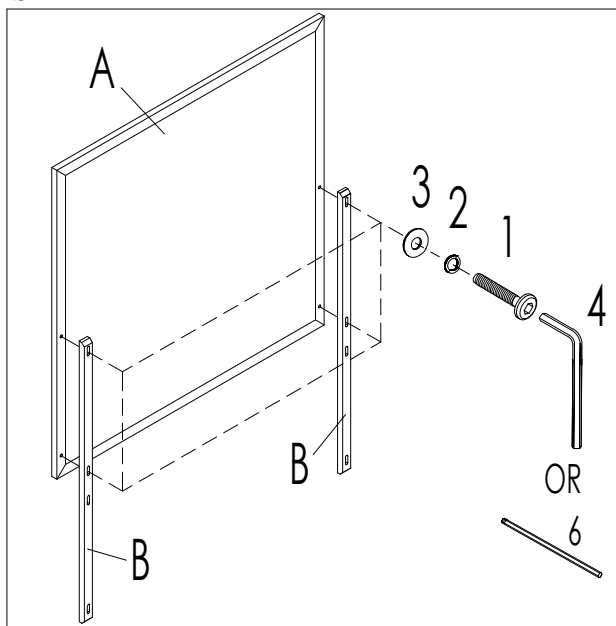

STEP 2

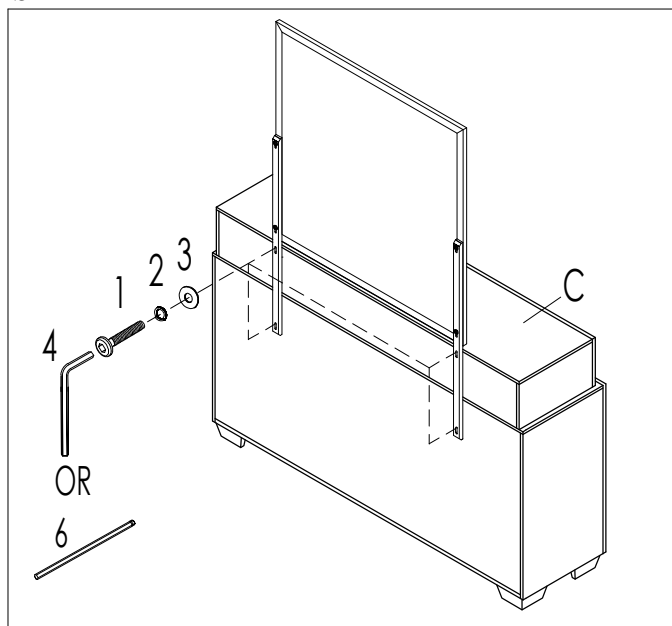

STEP 3

