

ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-530 / 531 / 401/ 640

DESCRIPTION: 3/3 PANEL BED & 3/3 CANOPY
FLORENCE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PARTS LIST HEADBOARD

No.	Description	Sketch	Quantity
1	Headboard Panel		1 Pc
2	Left Leg Headboard		1 Pc
3	Right Leg Headboard		1 Pc
4	Bottom Rail		1 Pc
5	Footboard		1 Pc
6	Slat (986 x 75 x 18mm)		4 Pcs
7	Slat Support (186 x 28 x 28mm)		4 Pcs
8	Bed Rails		2 Pcs
9	Right Post Canopy		1 Pc
10	Left Post Canopy		1 Pc
11	Short Stretcher		2 Pcs
12	Long Stretcher		2 Pcs
13	Top Frame Canopy		1 Pc

HARDWARE LIST OF HEADBOARD:

No.	Description	Sketch	Size	Q.ty
A	Bolt		Ø1/4 x 1*9/16"	14 Pcs
B	Spring Washer		Ø1/4	14 Pcs
C	Flat Washer		Ø1/4 x19mm	14 Pcs
D	Allen Wrench		M4	1 Pc
E	Straight Allen Key		M4 x 100mm	1 Pc

HARDWARE LIST OF FOOTBOARD


F	Screw		M4 x 25mm	8 Pcs
---	-------	--	-----------	-------

HARDWARE LIST OF CANOPY


G	Bolt		Ø1/4 x 2*1/3"	10 Pcs
H	Bolt		Ø1/4 x 3"	6 Pcs
B	Spring Washer		Ø1/4	18 Pcs
C	Flat Washer		Ø1/4 x19mm	18 Pcs
D	Allen Wrench		M4	1 Pc
E	Straight Allen Key		M4 x 100mm	1 Pc
K	Bolt		Ø1/4 x 3/4"	8 Pcs
M	Bracket		100 x 25 x 3mm	4 Pcs

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

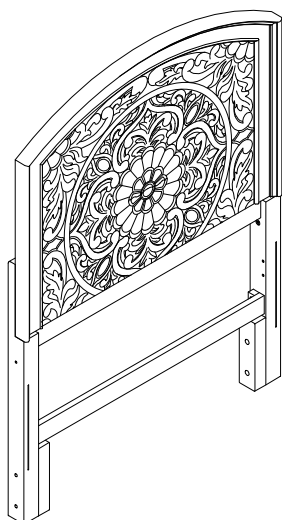


STEP 2

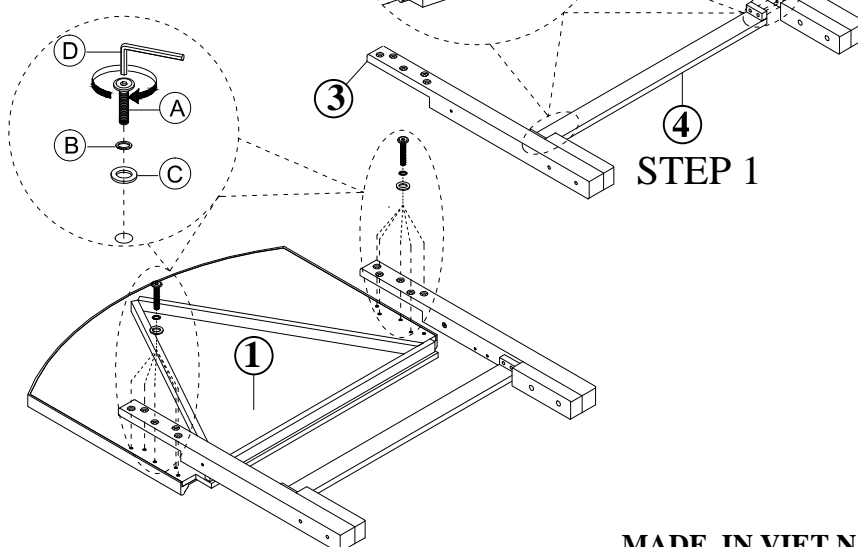


ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-530 / 531 / 401/ 640


DESCRIPTION: 3/3 PANEL BED & 3/3 CANOPY
FLORENCE

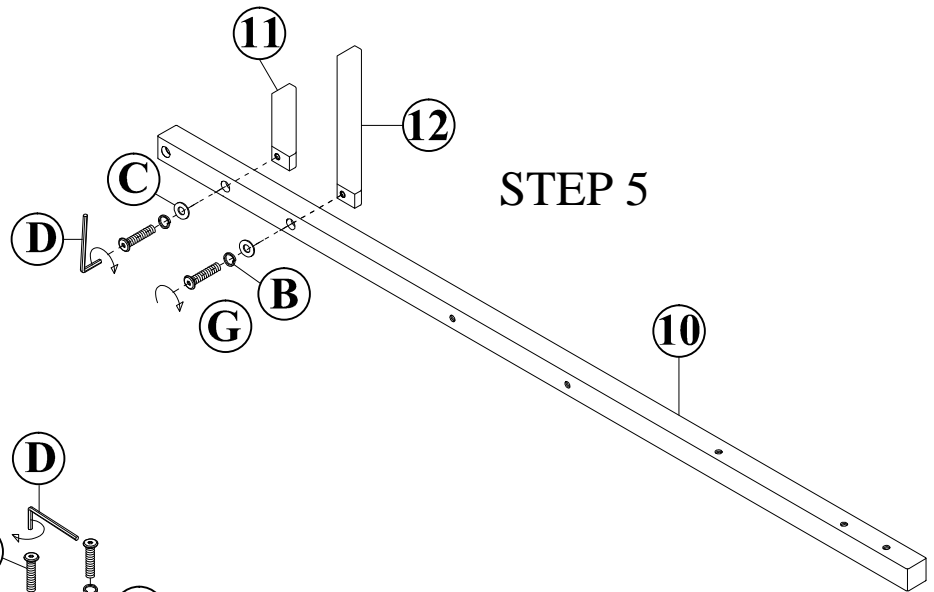

STEP 5

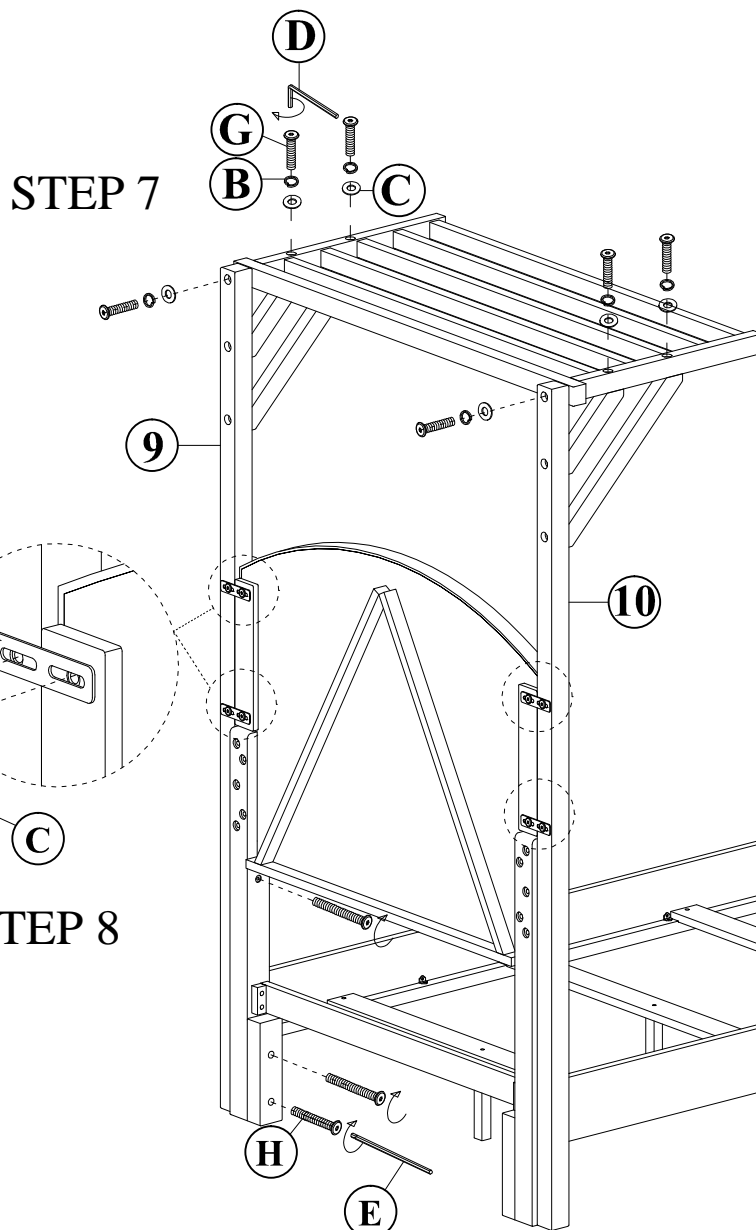

STEP 7

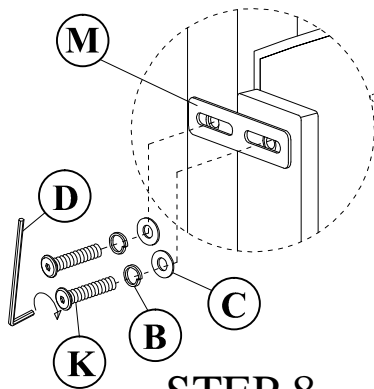

STEP 8

STEP 6

ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-532 / 533 / 401/ 641

DESCRIPTION: 4/6 PANEL BED & 4/6 CANOPY
FLORENCE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PARTS LIST HEADBOARD

No.	Description	Sketch	Quantity
1	Headboard Panel		1 Pc
2	Left Leg Headboard		1 Pc
3	Right Leg Headboard		1 Pc
4	Bottom Rail		1 Pc
5	Footboard		1 Pc
6	Slat (1402 x 75 x 18 mm)		4 Pcs
7	Slat Support (186 x 28 x 28 mm)		4 Pcs
8	Bed Rails		2 Pcs
9	Right Post Canopy		1 Pc
10	Left Post Canopy		1 Pc
11	Short Stretcher		2 Pcs
12	Long Stretcher		2 Pcs
13	Top Frame Canopy		1 Pc

HARDWARE LIST OF HEADBOARD:

No.	Description	Sketch	Size	Q.ty
A	Bolt		Ø1/4 x 1*9/16"	14 Pcs
B	Spring Washer		Ø1/4	14 Pcs
C	Flat Washer		Ø1/4 x 19mm	14 Pcs
D	Allen Wrench		M4	1 Pc
E	Straight Allen Key		M4 x 100mm	1 Pc

HARDWARE LIST OF FOOTBOARD



F	Screw		M4 x 25mm	8 Pcs
---	-------	--	-----------	-------

HARDWARE LIST OF CANOPY

G	Bolt		Ø1/4 x 2*1/3"	10 Pcs
H	Bolt		Ø1/4 x 3"	6 Pcs
B	Spring Washer		Ø1/4	18 Pcs
C	Flat Washer		Ø1/4 x 19mm	18 Pcs
D	Allen Wrench		M4	1 Pc
E	Straight Allen Key		M4 x 100mm	1 Pc
K	Bolt		Ø1/4 x 3/4"	8 Pcs
M	Bracket		100 x 25 x 3mm	4 Pcs

TOOLS REQUIRED (NOT PROVIDED)





PHILLIPS SCREWDRIVER

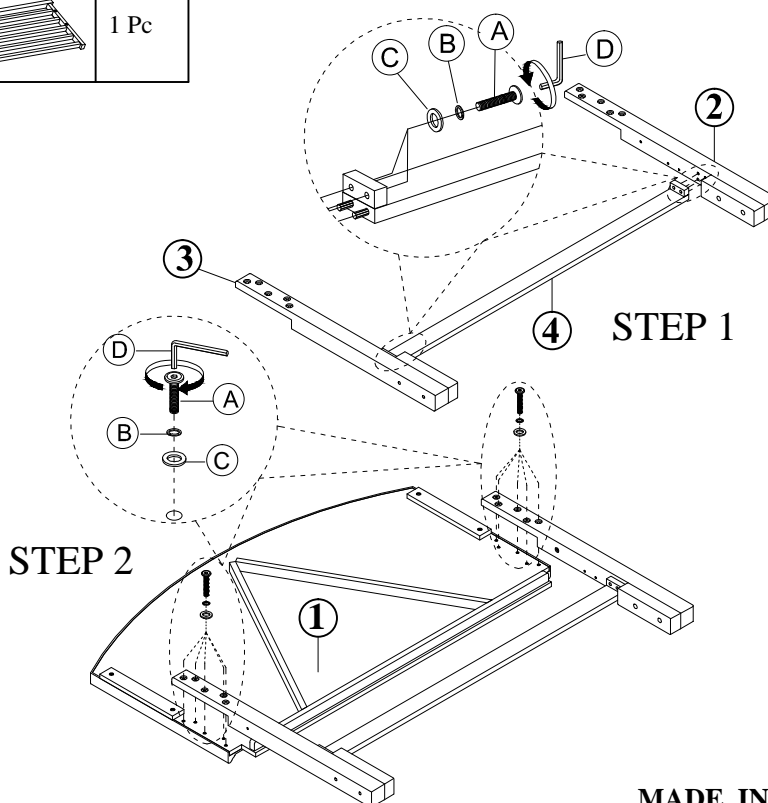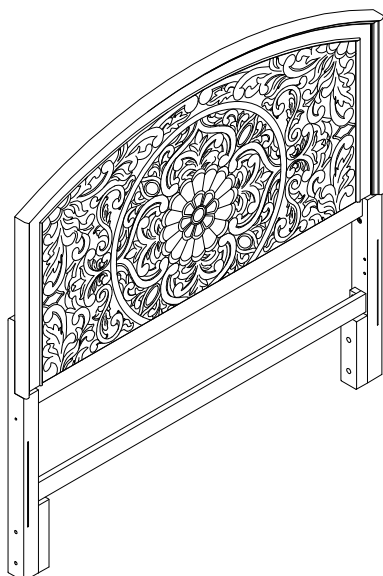

ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-532 / 533 / 401/ 641

DESCRIPTION: 4/6 PANEL BED & 4/6 CANOPY
FLORENCE

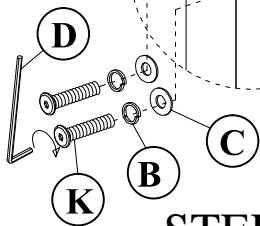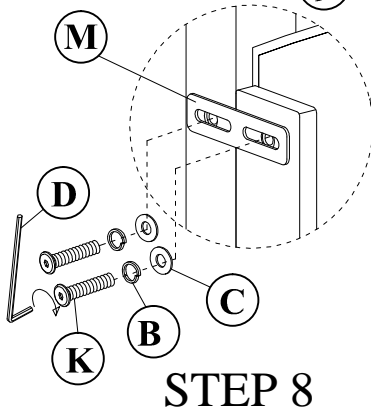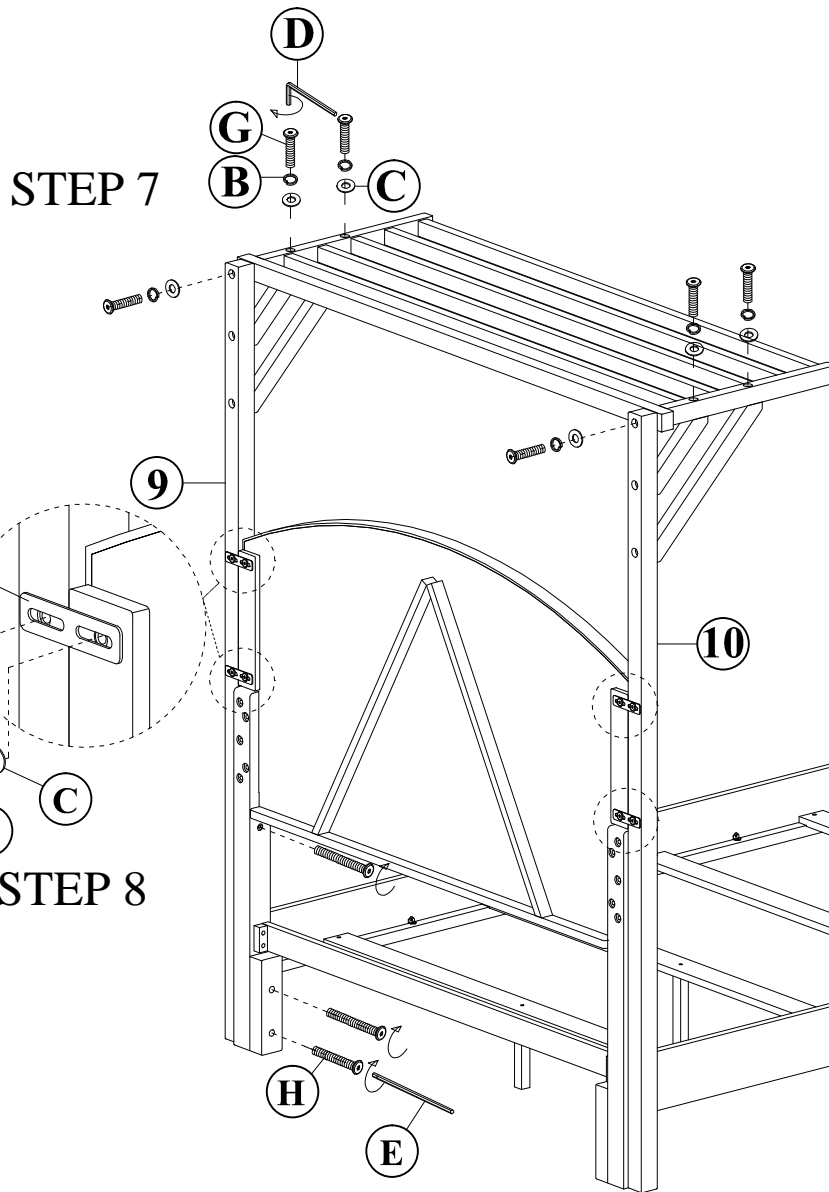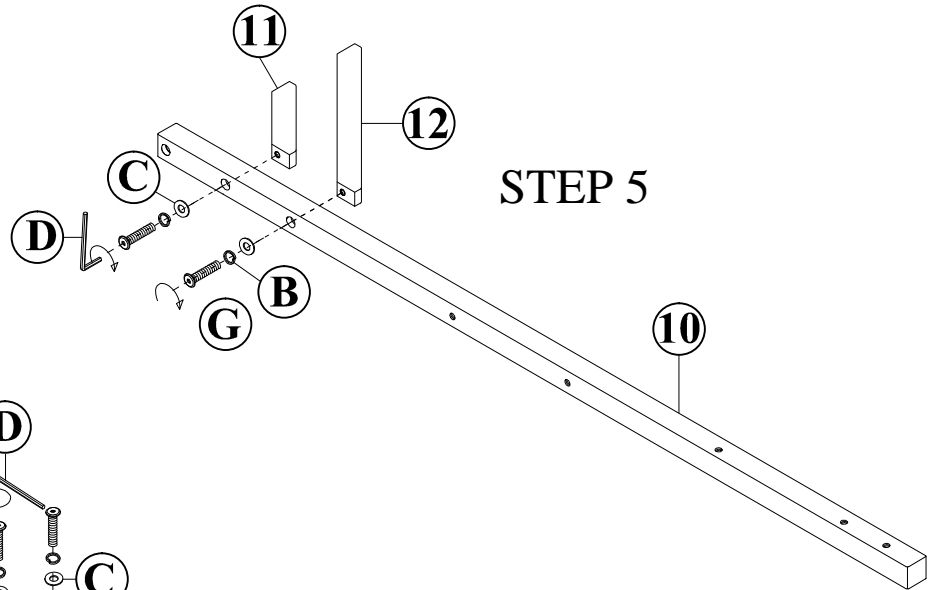







ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-801

DESCRIPTION: TRUNDLE
FLORENCE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.





PARTS LIST:


No.	Description	Sketch	Quantity
1	Front Panel		1 Pc
2	Back Panel		1 Pc
3	Side Panel		2 Pcs
4	Metal Bar		1 Pc
5	Divider Panel		1 Pc
6	Bottom Panel		2 Pcs

TOOLS REQUIRED (NOT PROVIDED)



PHILLIPS SCREWDRIVER 

HARDWARE LIST:


No.	Description	Sketch		Q.ty
A	Bolt Handle		Ø5/32 " x 12mm	6 Pcs
B	Handle			3 Pcs
C	Screw		M4 x 45mm	4 Pcs
D	Screw		M4 x 25mm	4 Pcs

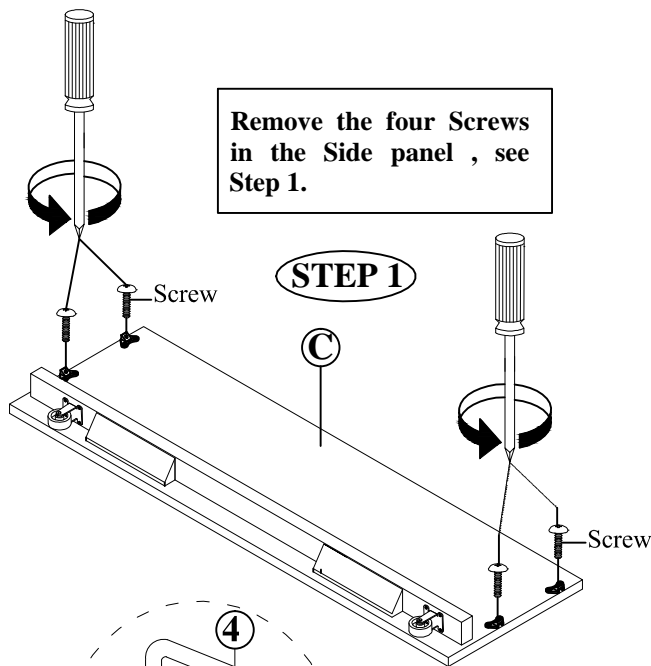

Attach the Back panel and Side Panel then reinstall the four Screws.

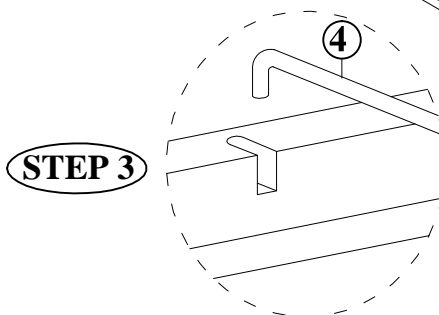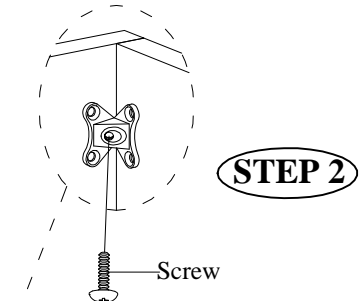


NOTE !!
Push Front Panel and Back Panel inside and insert Metal Bar into hole (See Step 3).

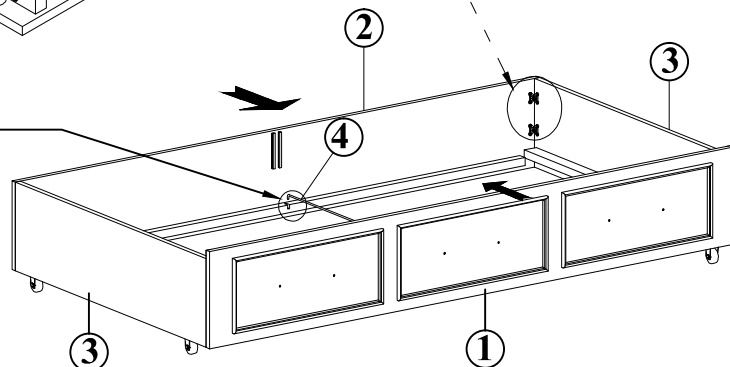

ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-801

DESCRIPTION: TRUNDLE
FLORENCE

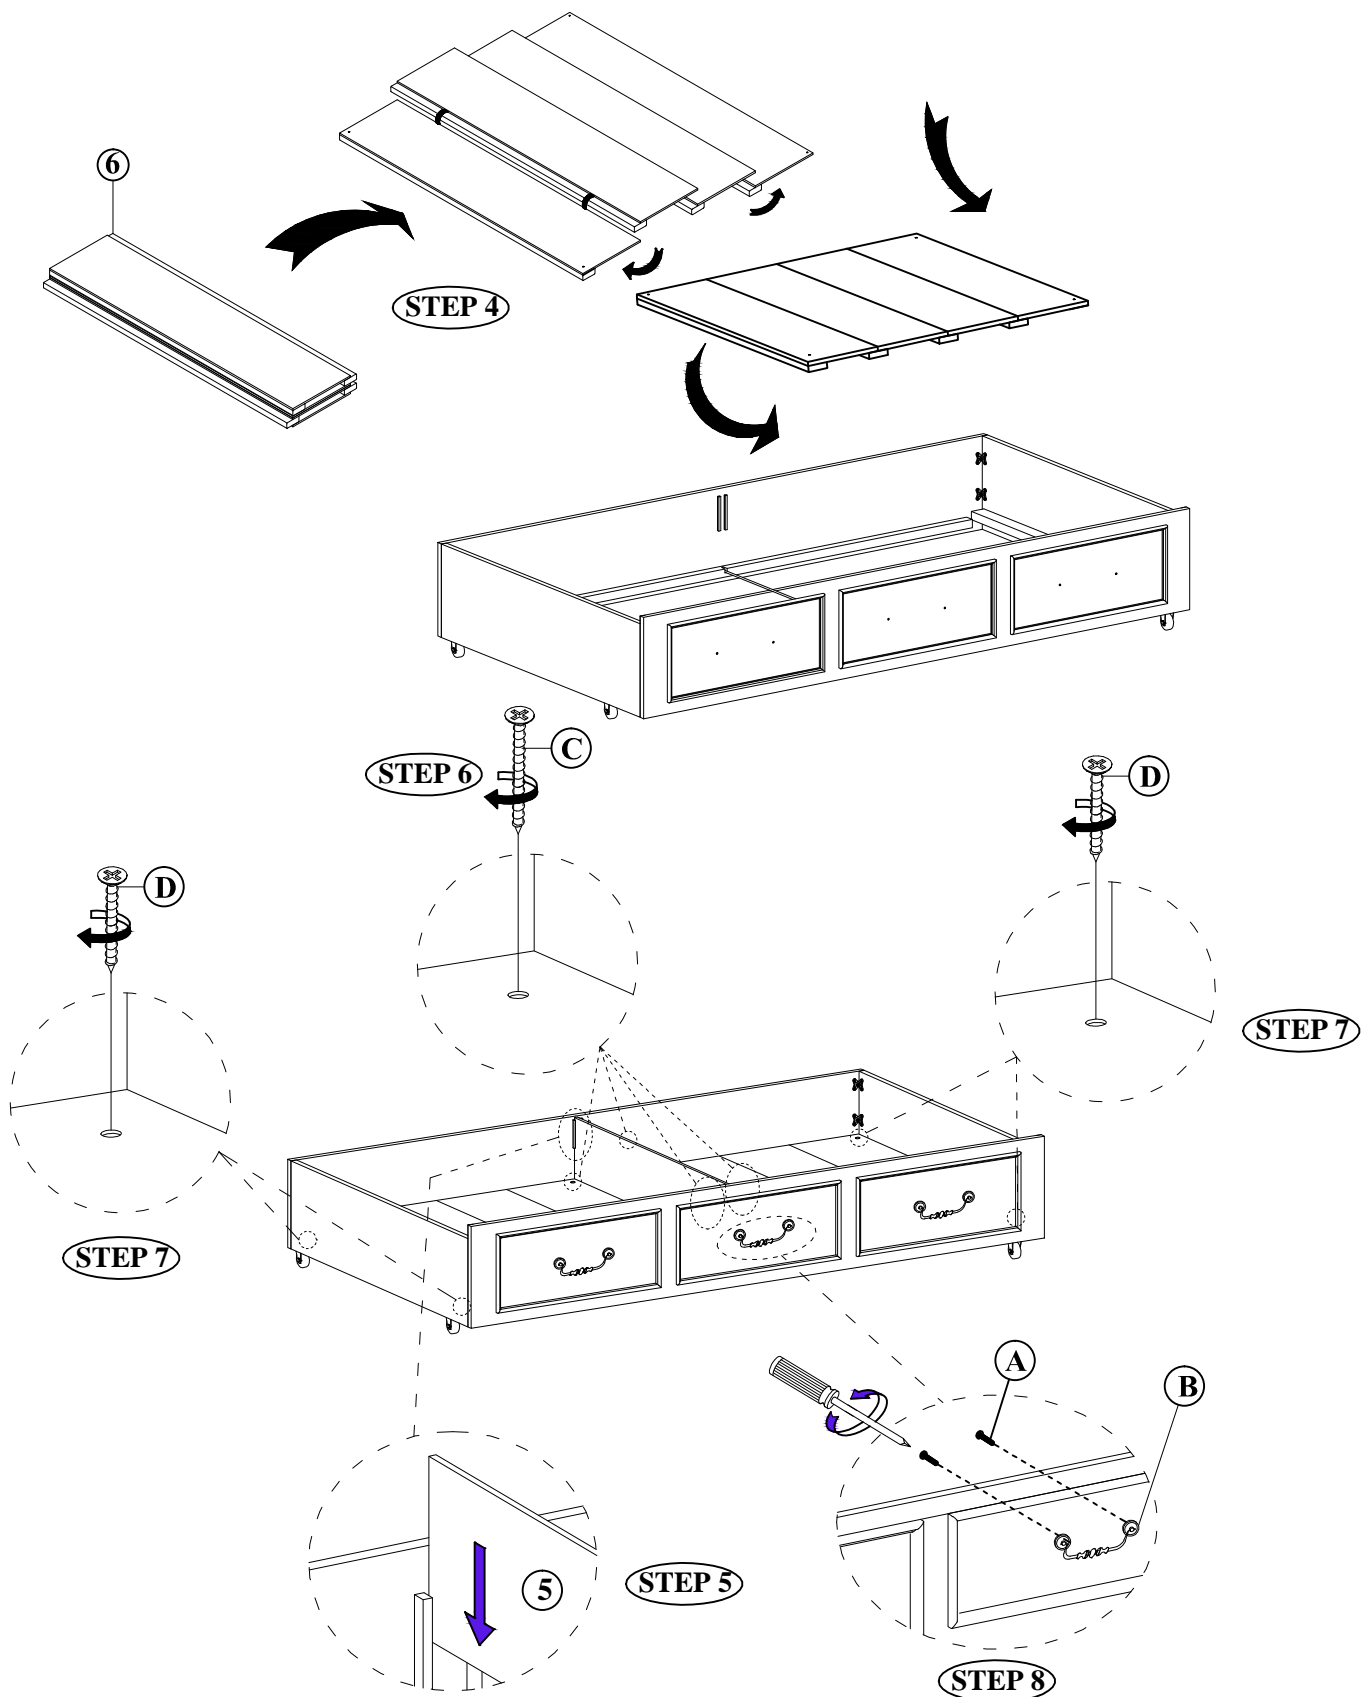


ASSEMBLY INSTRUCTIONS

ITEM NO: 195-S318-801


DESCRIPTION: TRUNDLE
FLORENCE

OPTIONAL TRUNDLE BED ASSEMBLY

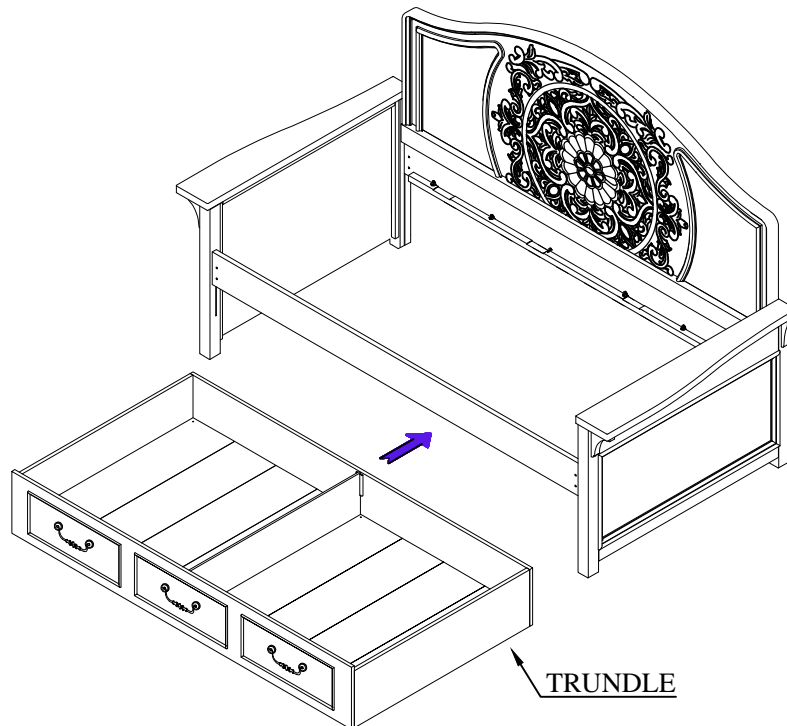

3/3 DAY BED & TRUNDLE

3/3 PANEL BED - CANOPY & TRUNDLE

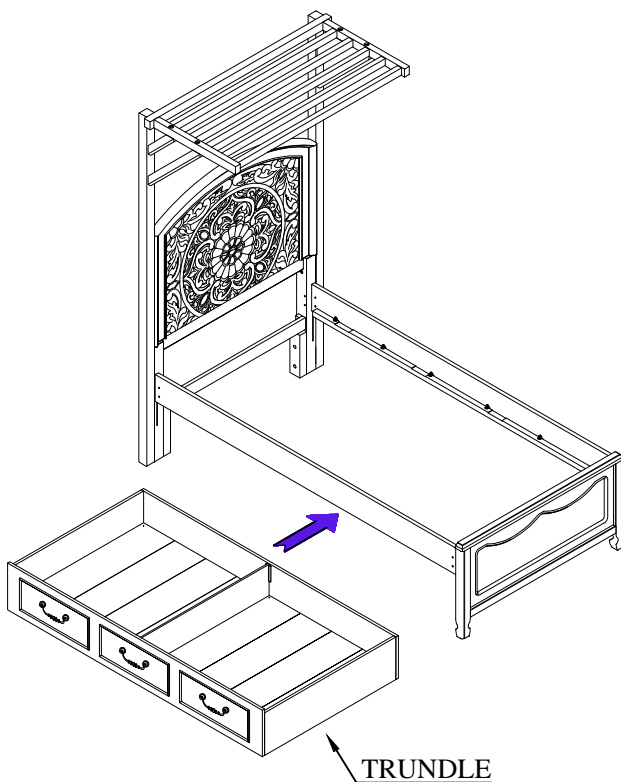

4/6 PANEL BED - CANOPY & TRUNDLE

