


ASSEMBLY INSTRUCTIONS ITEM NO: 195-S318-750 / 751 DESCRIPTION: 3/3 DAY BED FLORENCE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

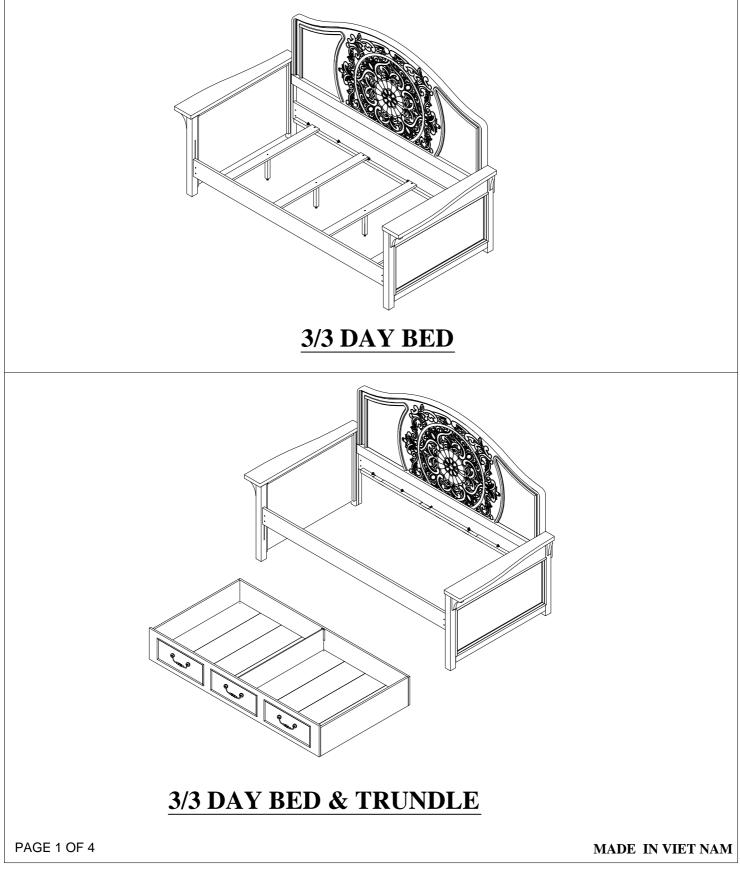








ASSEMBLY INSTRUCTIONS ITEM NO: 195-S318-750 / 751 DESCRIPTION: 3/3 DAY BED FLORENCE

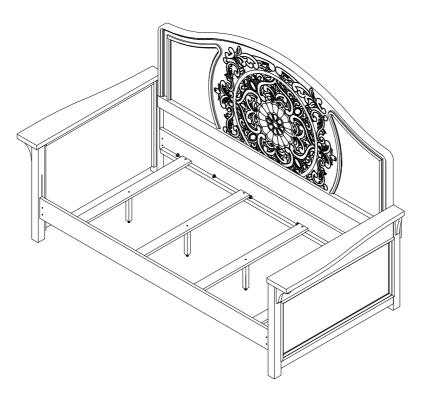

HA	RDWARE LIS'	T (For 195-S318-751 Day	bed back)	
No.	Drawing	Descriptions	Size	Qty.
1	0	Bolt	5/16" x 1*3/8"	12 PCS
2	Ø	Lock washer	5/16"	12 PCS
3	0	Flat washer	5/16" x 19mm	12 PCS
4	4	Allen Key	M4	1 PC
5		Straight Allen Key	M4 x 100mm	1 PC
6	G annana-	Screw	M4 x 25mm	8 PCS

PART LIST						
No.	Drawing	Descriptions	Qty.			
A		3/3 Day bed ends)	2 PCS			
в		3/3 Day bed back	1 PC			
С		Wood Block	2 PCS			
D	Ŵ	Side Rails	2 PCS			
Е		Slats (986 x 75 x 28mm)	4 PCS			
F	Ũ	Support legs (186 x 28 x 28mm)	4 PCS			


PAGE 2 OF 4


MADE IN VIET NAM





ASSEMBLY INSTRUCTIONS ITEM NO: 195-S318-750 / 751 DESCRIPTION: 3/3 DAY BED FLORENCE

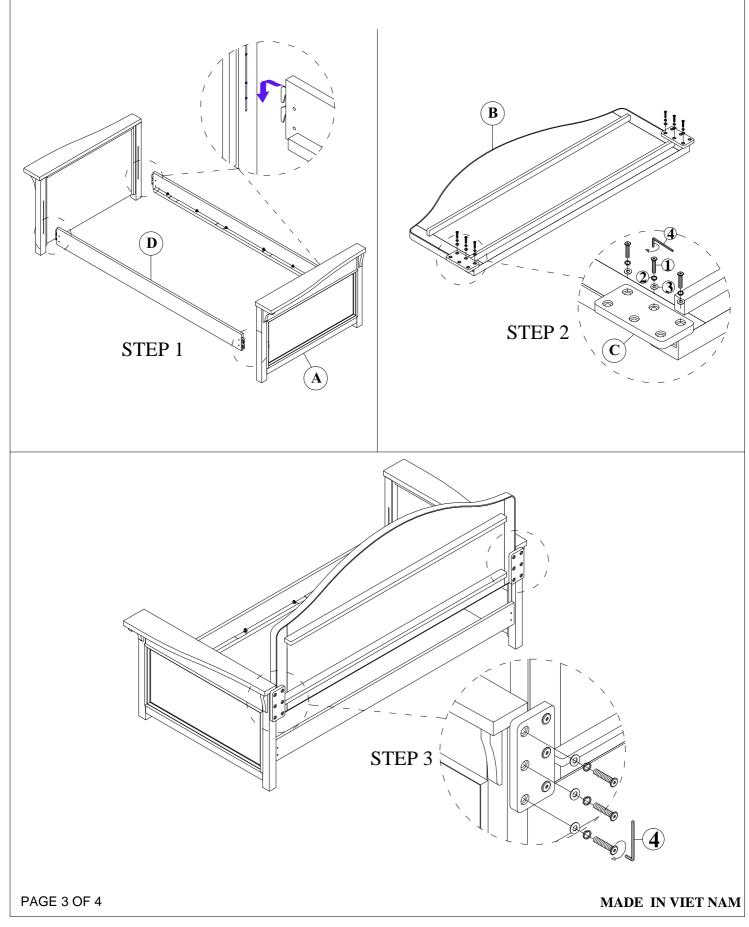

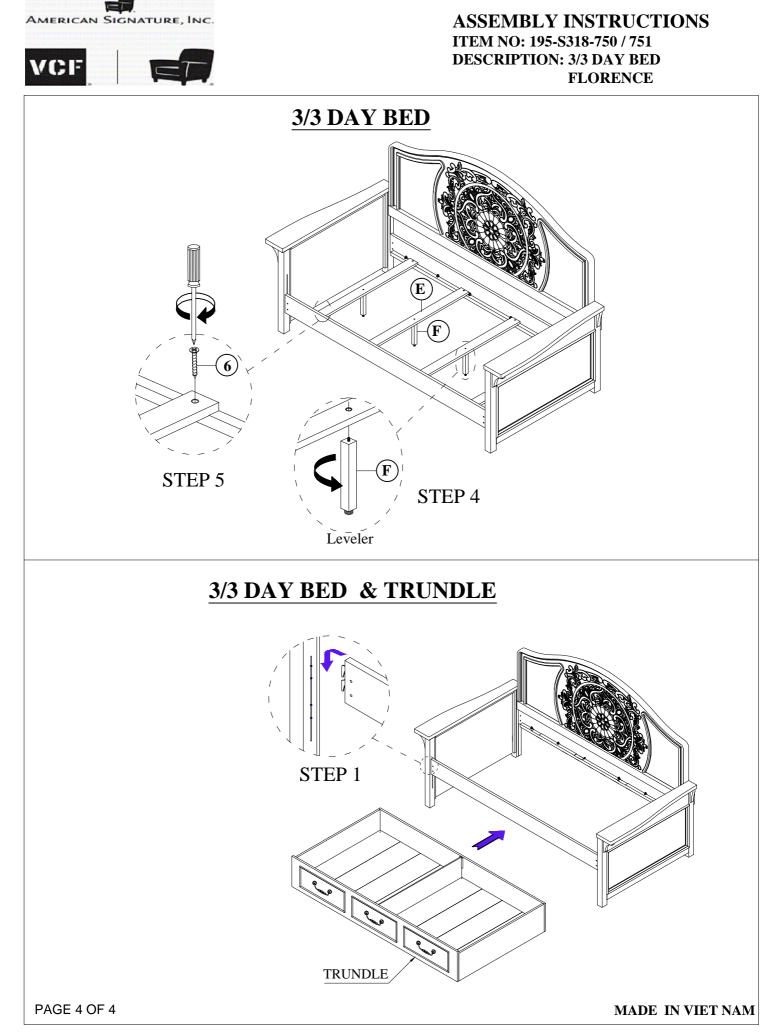








ASSEMBLY INSTRUCTIONS ITEM NO: 195-S318-801 DESCRIPTION: TRUNDLE FLORENCE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART	S LIST:				TOOLS REQUIRE	D (NOT PROV	IDED)	
No.	Description	Sketch	Quantity	PHILLIPS SCREWDRIVER				
1	Front Panel		1 Pc					
2	Back Panel	i de la	1 Pc	No.	HARDWARE LIS	ST: Sketch		Q.ty
3	Side Panel		2 Pcs	A	Bolt Handle		Ø5/32 " x 12mm	6 Pcs
4	Metal Bar		1 Pc	В	Handle	Que		3 Pcs
5	Divider Panel		1 Pc	C	Screw	(f) and a set of the s	M4 x 45mm	4 Pcs
6	Bottom Panel		2 Pcs	D	Screw	()) ()) ()) ()) ()) ()) ()) ())	M4 x 25mm	4 Pcs
Remove the four Screws in the Side panel , see Step 1.					8	Attach the l and Side I reinstall the fo	Panel then	
	J S	crew STEP						

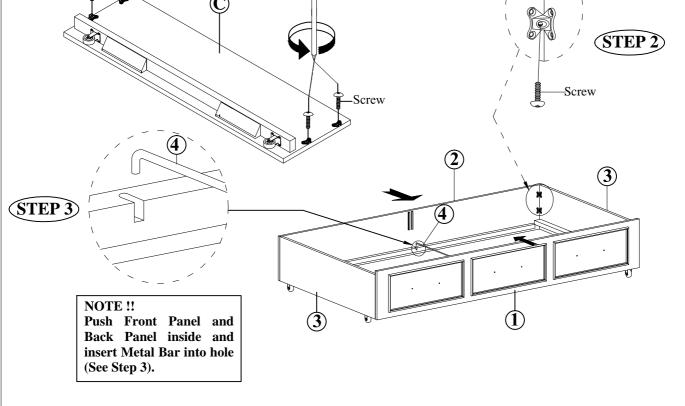

PAGE 1 OF 3

MADE IN VIET NAM



ASSEMBLY INSTRUCTIONS ITEM NO: 195-S318-801 DESCRIPTION: TRUNDLE FLORENCE

