



COVERING YOUR ROLL ARM SIDE

1 Prep Your Cover

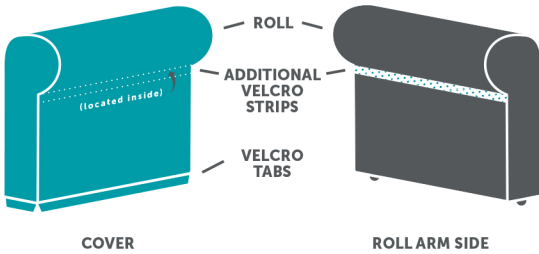

Before you begin, get familiar with the inside of your cover and your Roll Arm Side. The cover has an additional velcro strip on the end of the roll that will properly secure the cover to the Roll Arm Side


2 Unzip and Pull Over

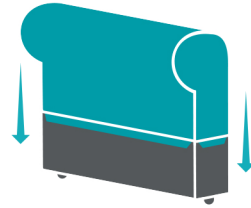

The cover will get tighter as you pull it down, so it helps to have two people, one on either end, to get the cover on smoothly.

Unzip the zippers on the Cover, then pull the Cover over the Roll Arm Side until the Cover reaches the floor. Make sure you align the edges on the Cover with the edges on the side to ensure the Cover goes on straight.


3 Secure The Top

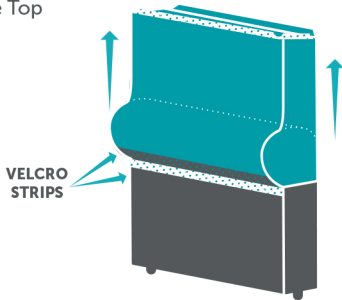

Take the time to align the seams on the covers with the edges of the insert.


Pull your Cover back up 3/4 of the way with your Cover inside out. Attach the inner velcro strip under the roll, and make sure the velcro on the Cover is secured to the Velcro on the Roll Arm Side in a smooth, straight line.

4 Pull Roll Arm Side Cover down

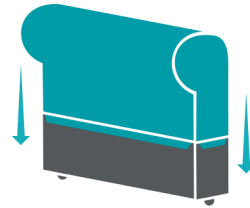

Once the top part of the Velcro strip is secure, pull the Cover back down. Make sure you smooth out all of the creases in the Cover when you are doing this.

5 Zip it and Velcro the Roll Arm Side Cover

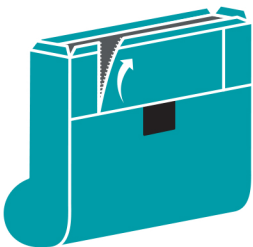

Once the Cover is all the way on, flip it over and zip up the bottom flaps. Then pull the bottom tabs of the Velcro and secure them to the bottom of the Roll Arm Side. Now your Roll Arm Side is ready to be connected with the rest of your Sactional!

6 Set up with one Roll Arm on each side

