


LAXseries


by: VASHstudios

Wall Mounted Desk
Assembly Instructions

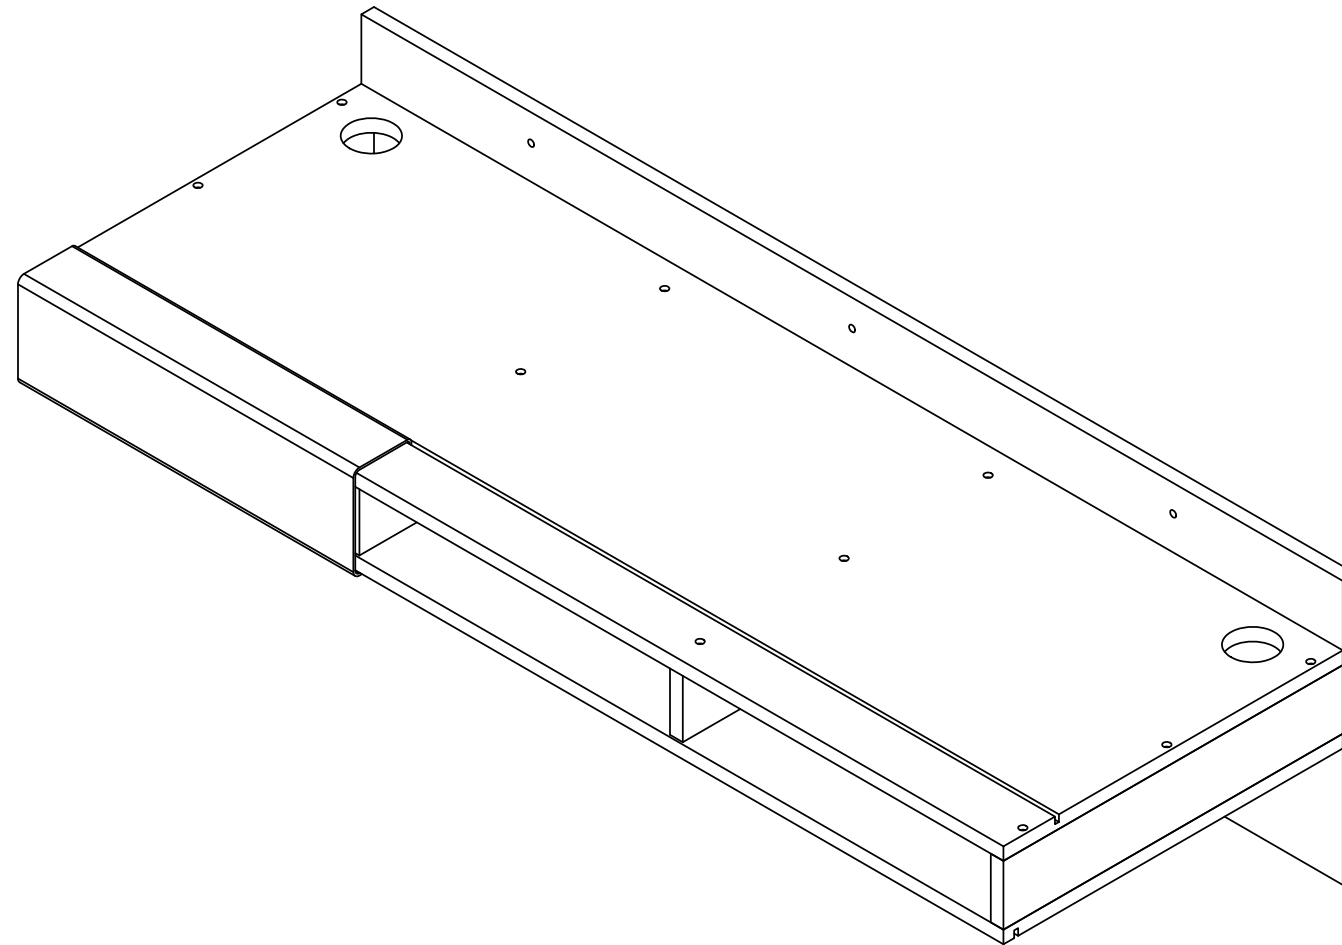



LAXseries

by: VASHstudios
Wall Mounted Desk
Parts List

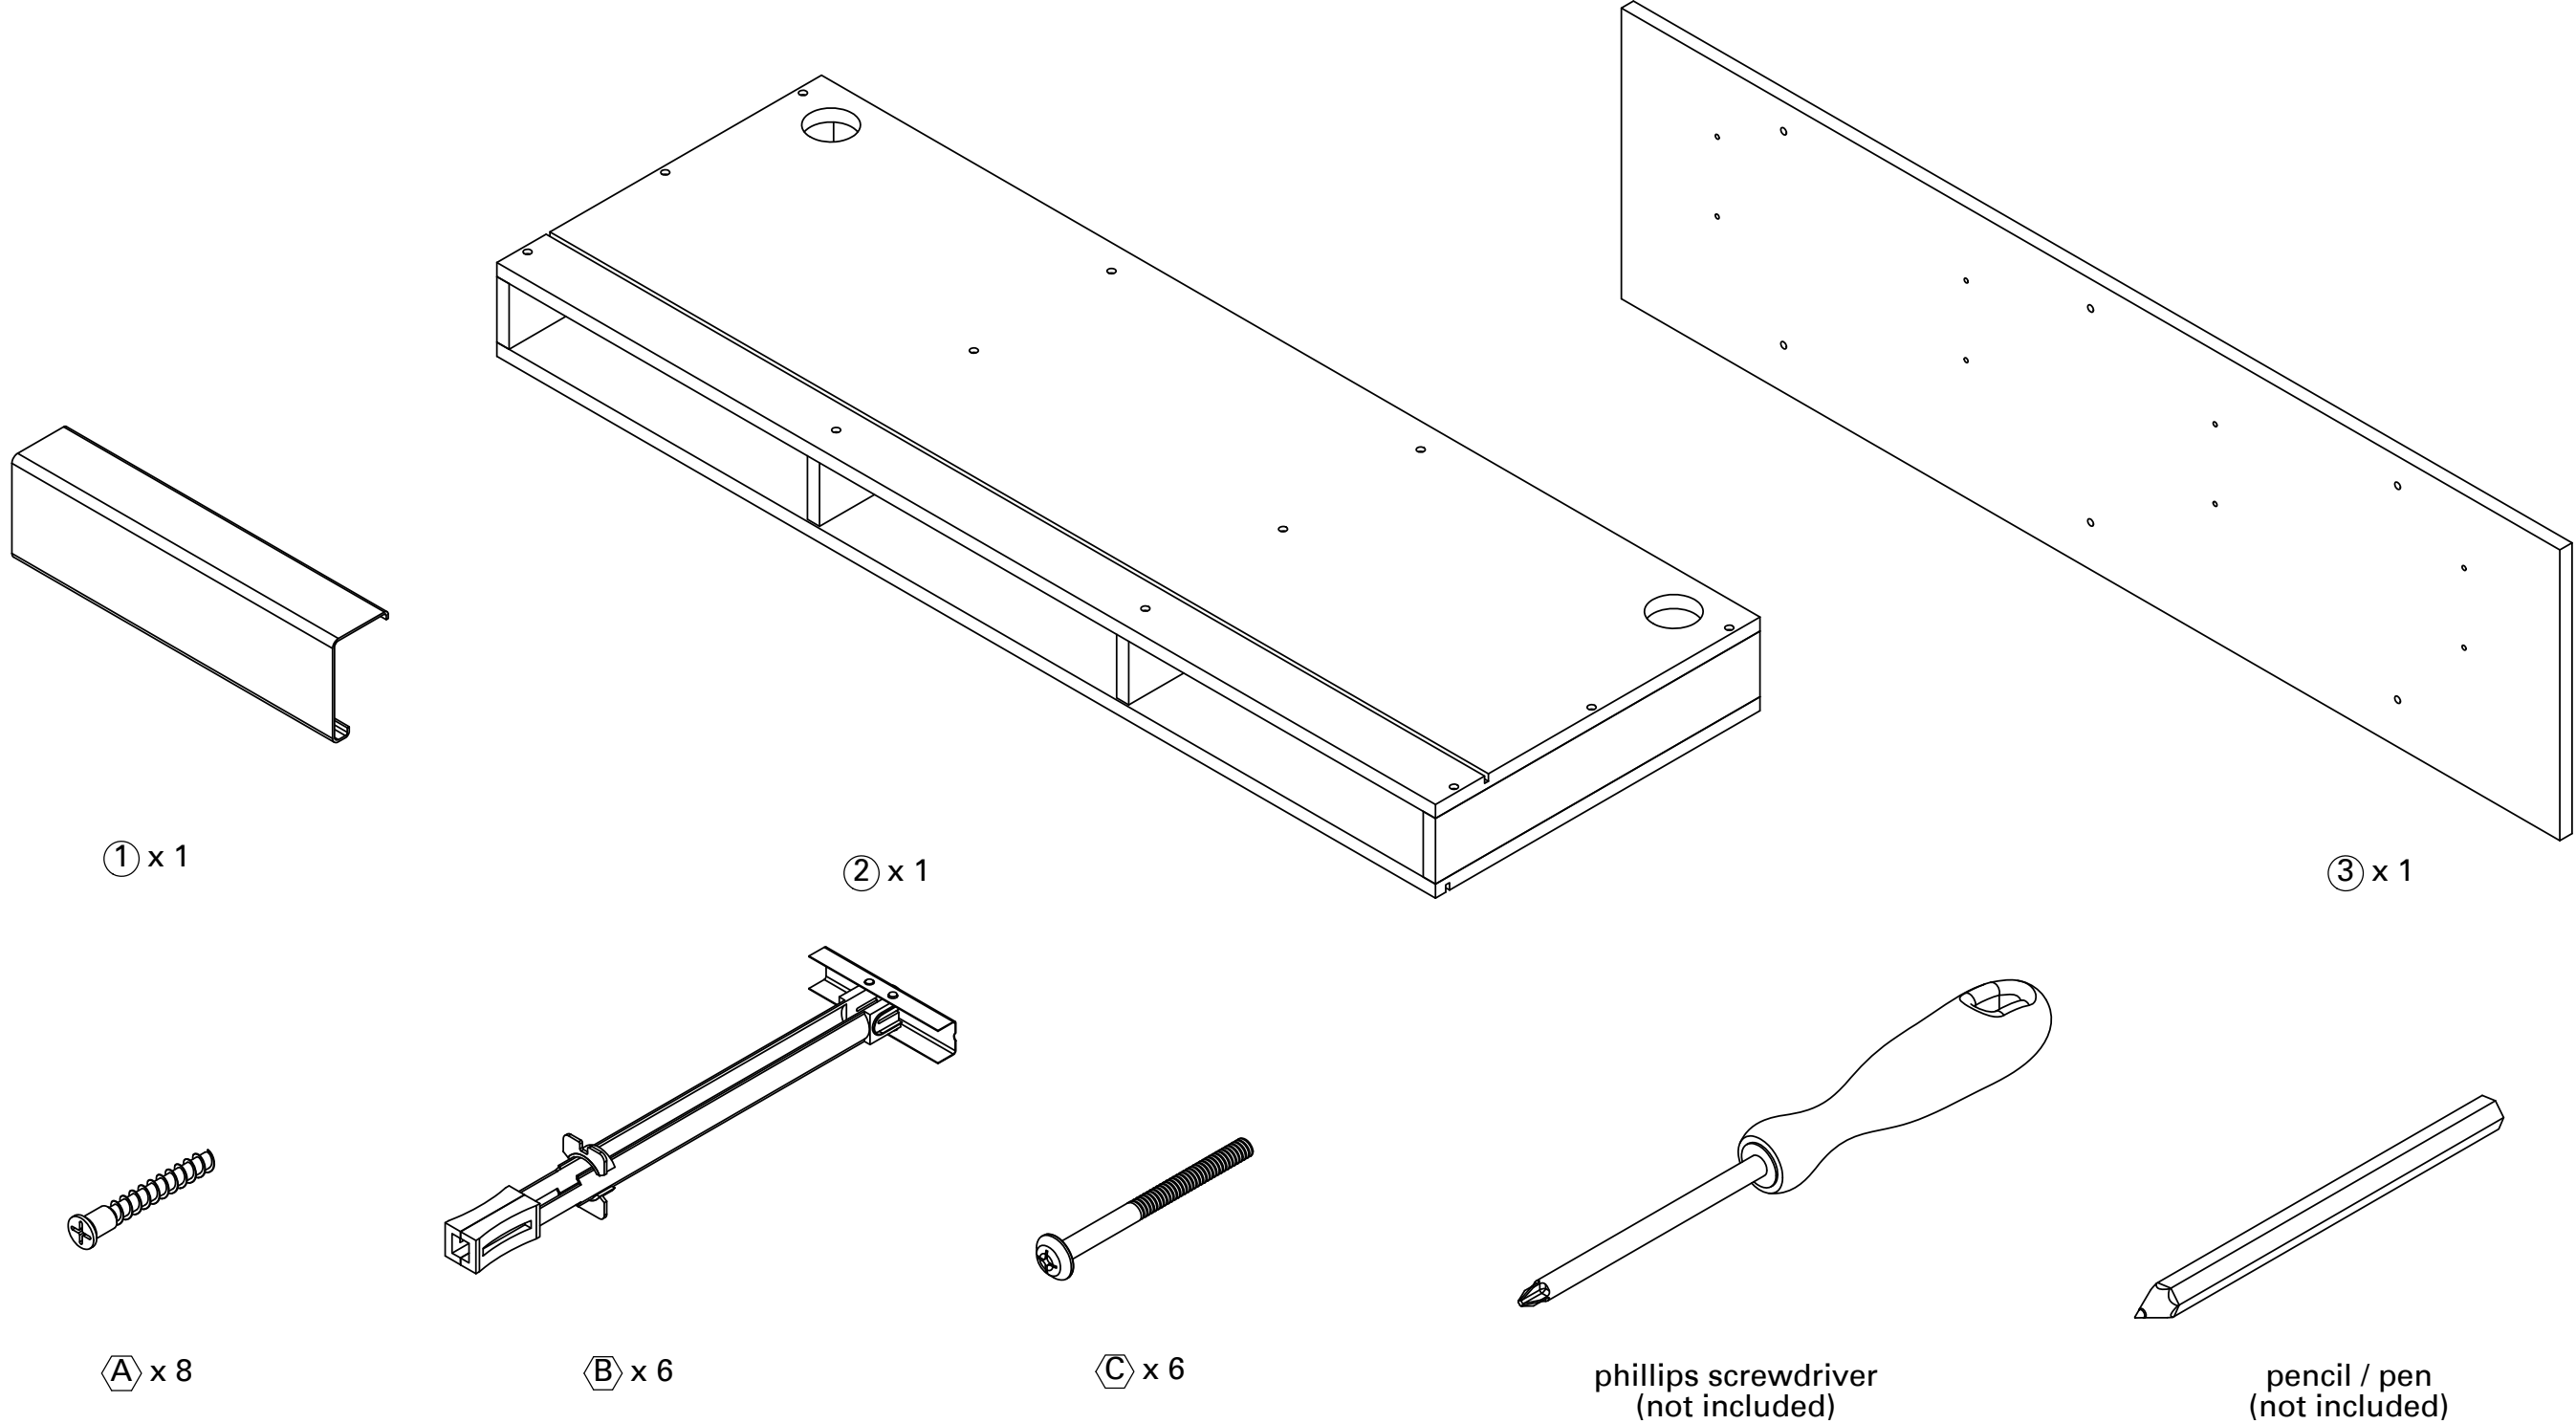




STEP 1

Use part ③ to locate placement of the Wall Mounted Desk. Check to ensure part is level. Mark with pencil the location of six holes to be drilled. Drill a 1/2" hole at the six shown locations on the next page.

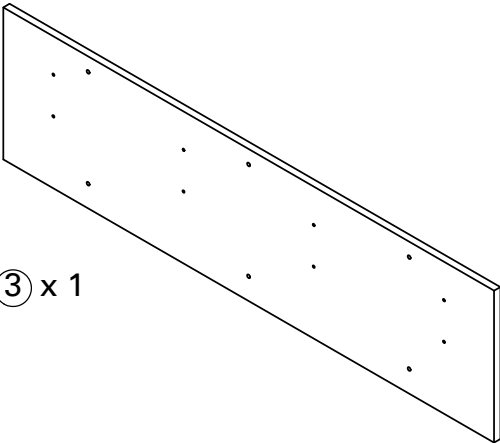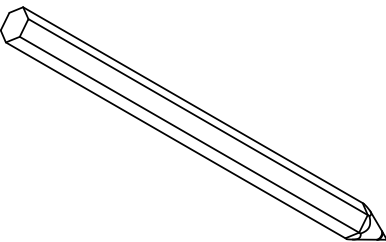


③ x 1

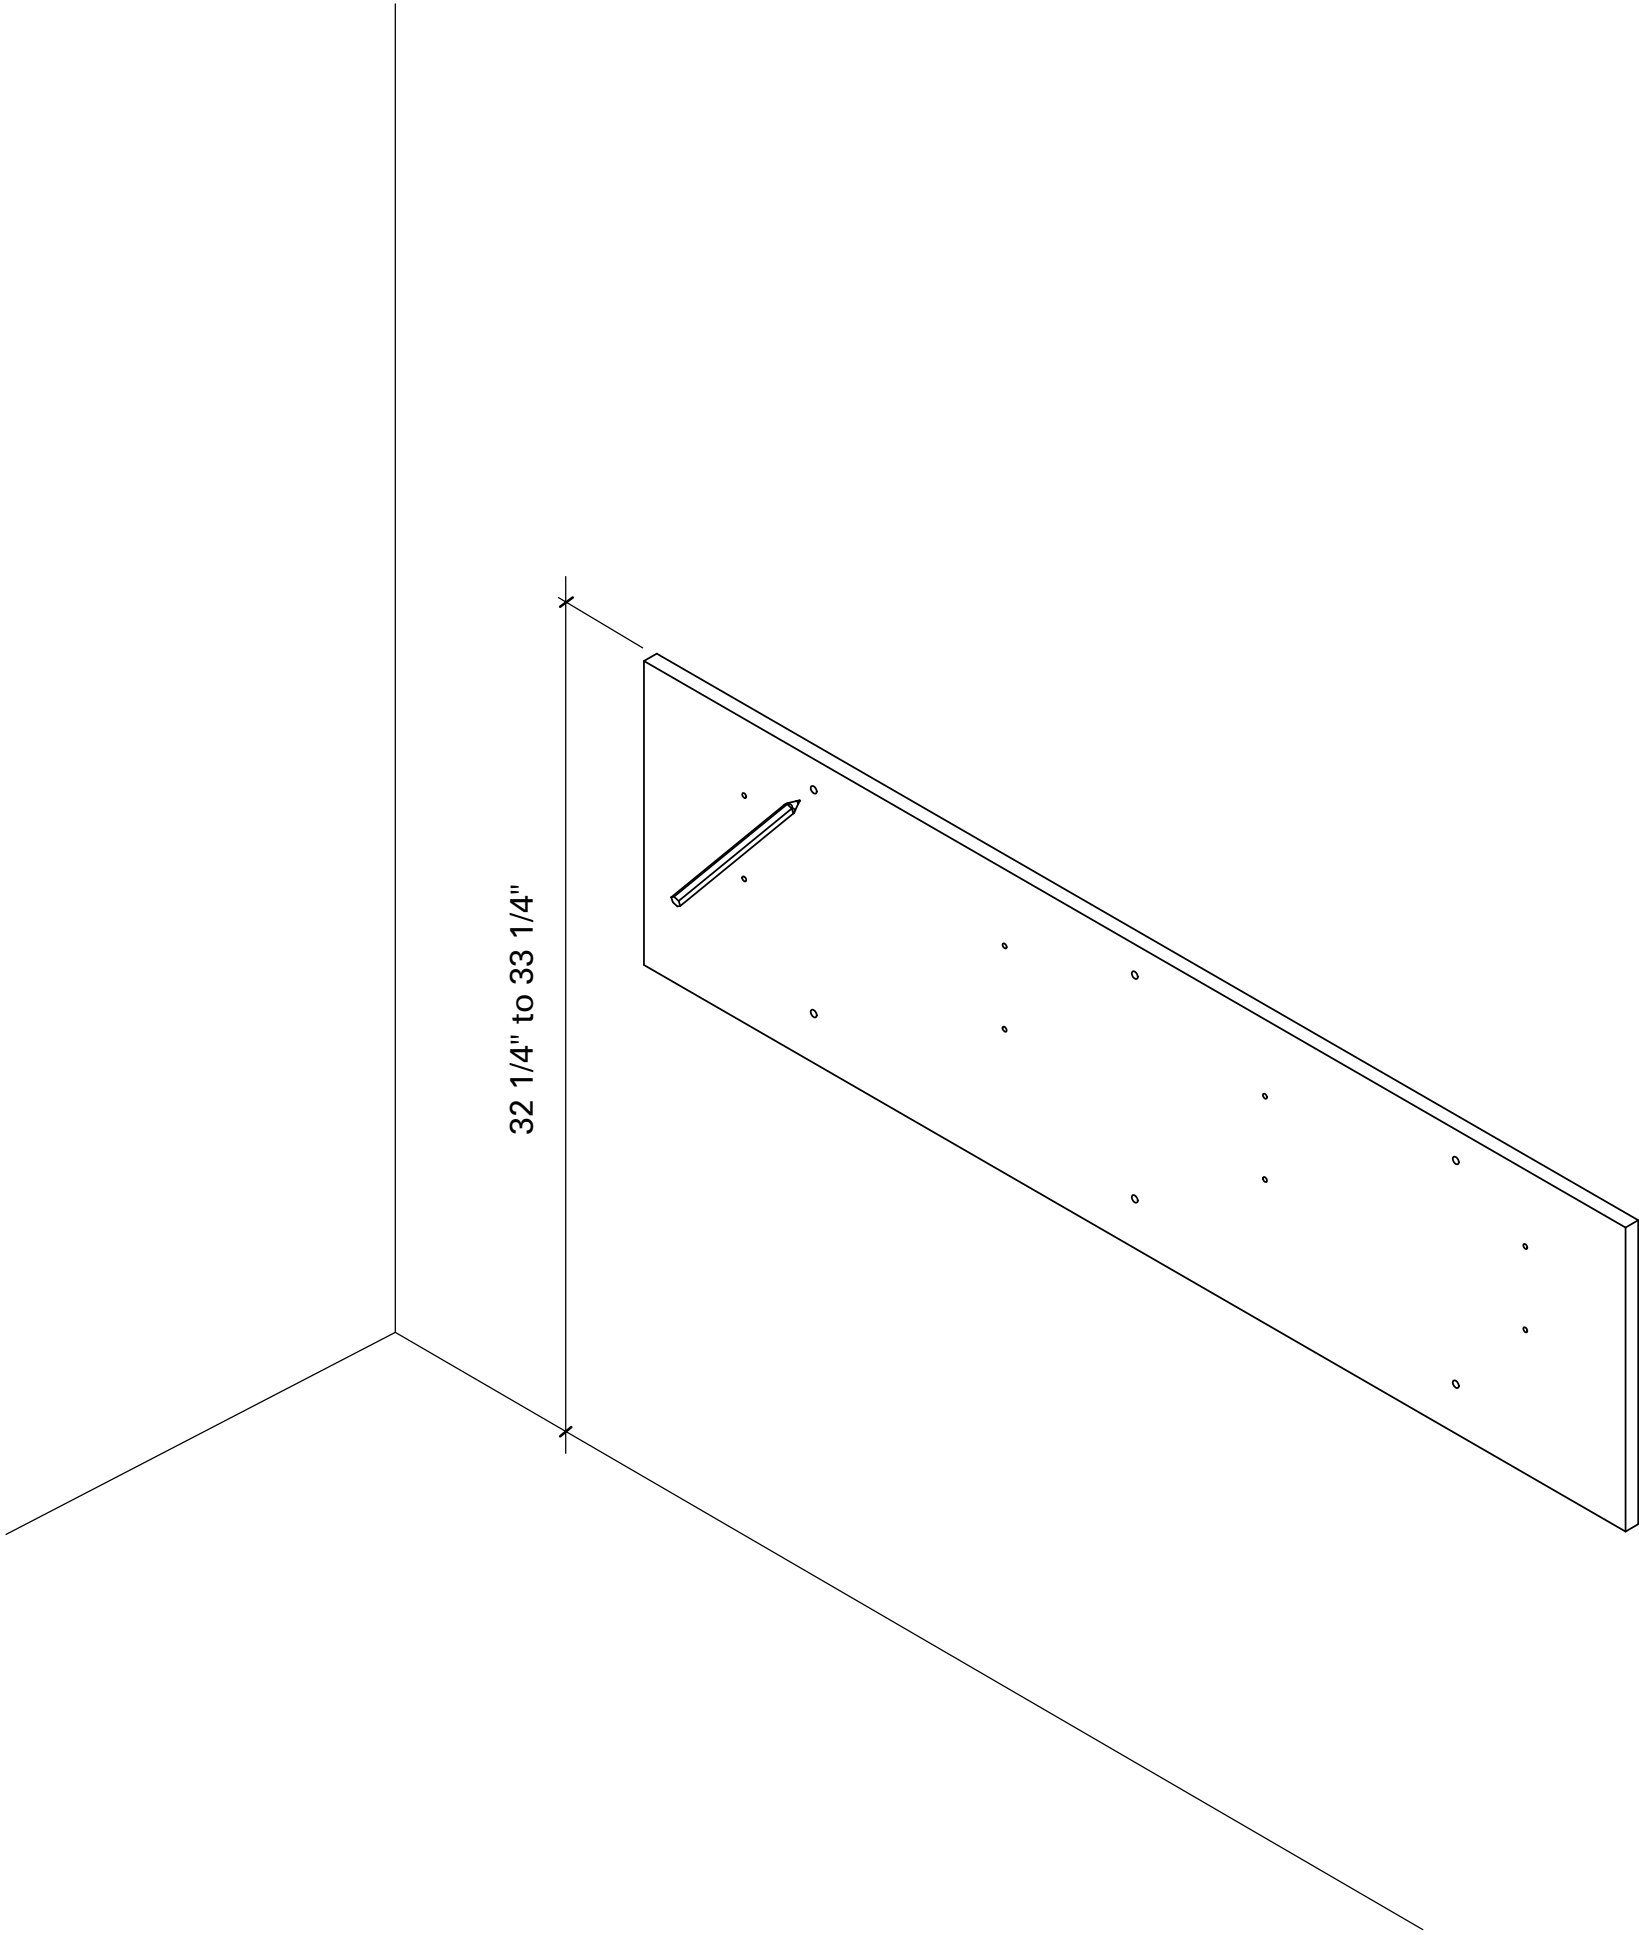


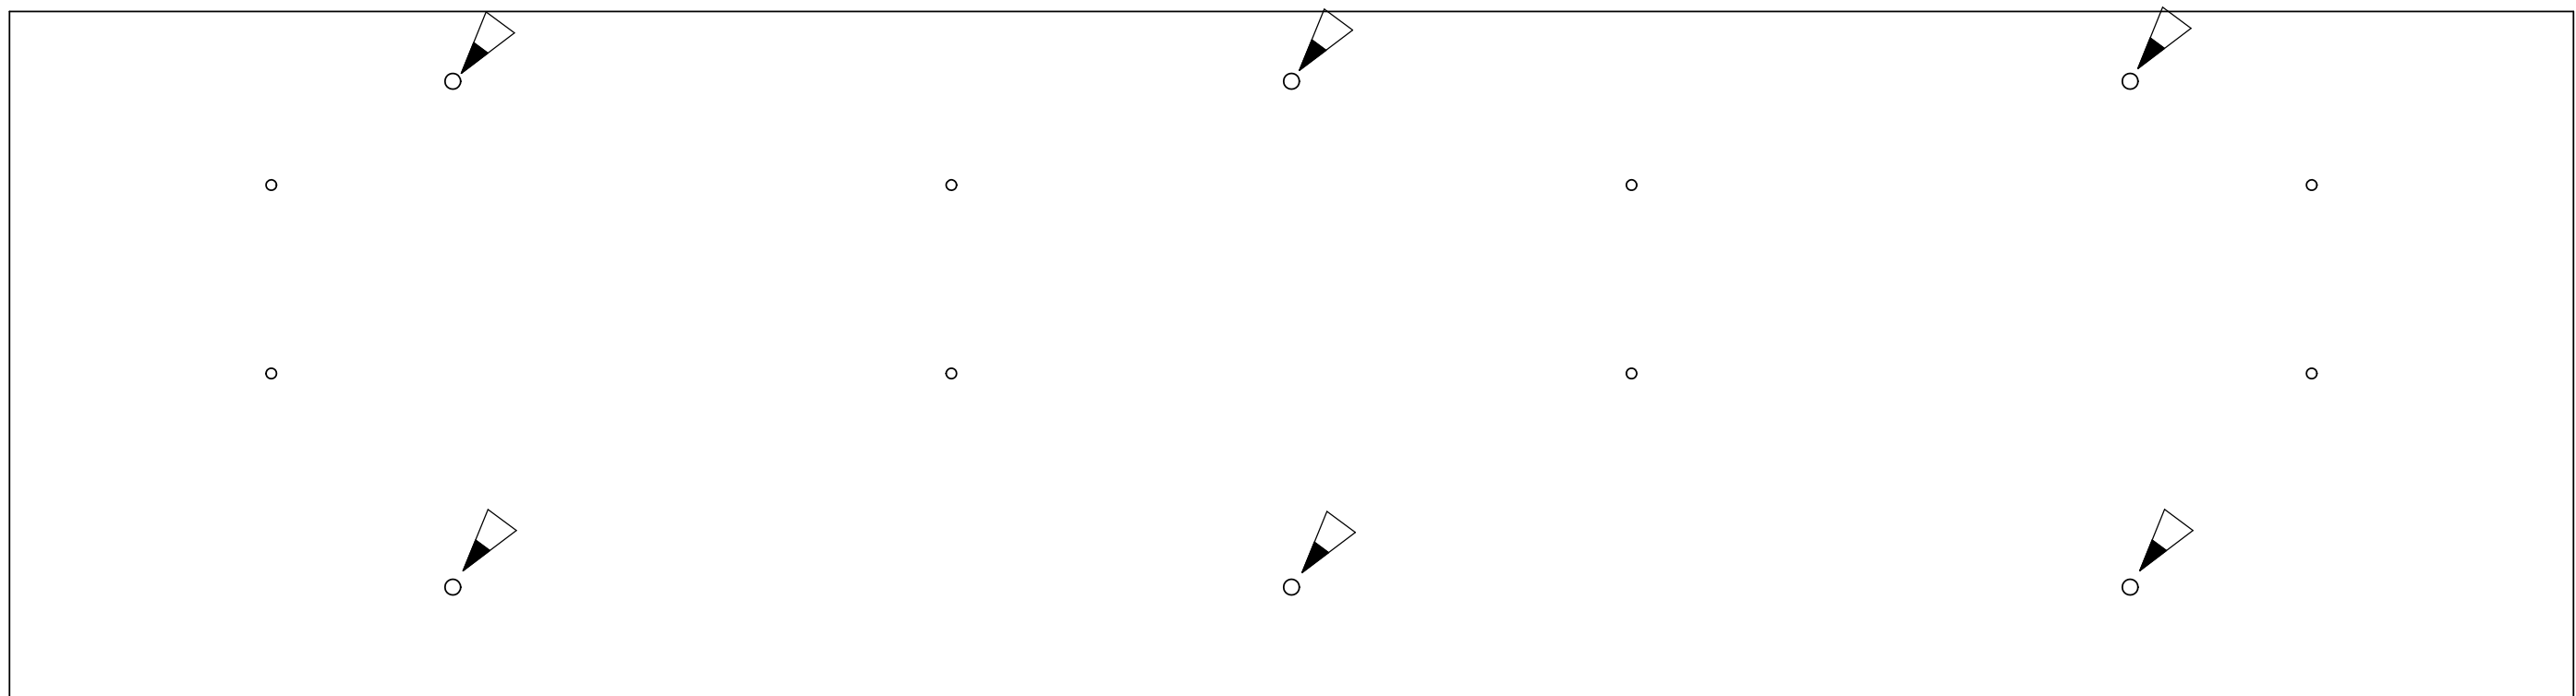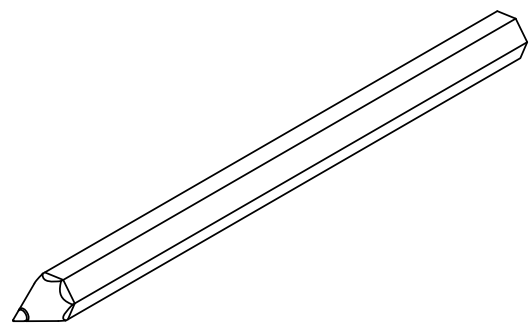


STEP 2

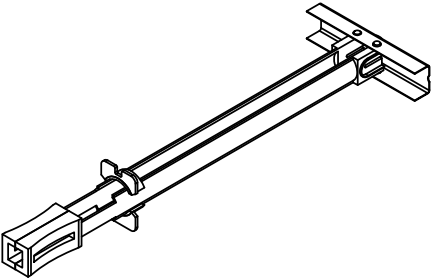


Ⓟ x 6

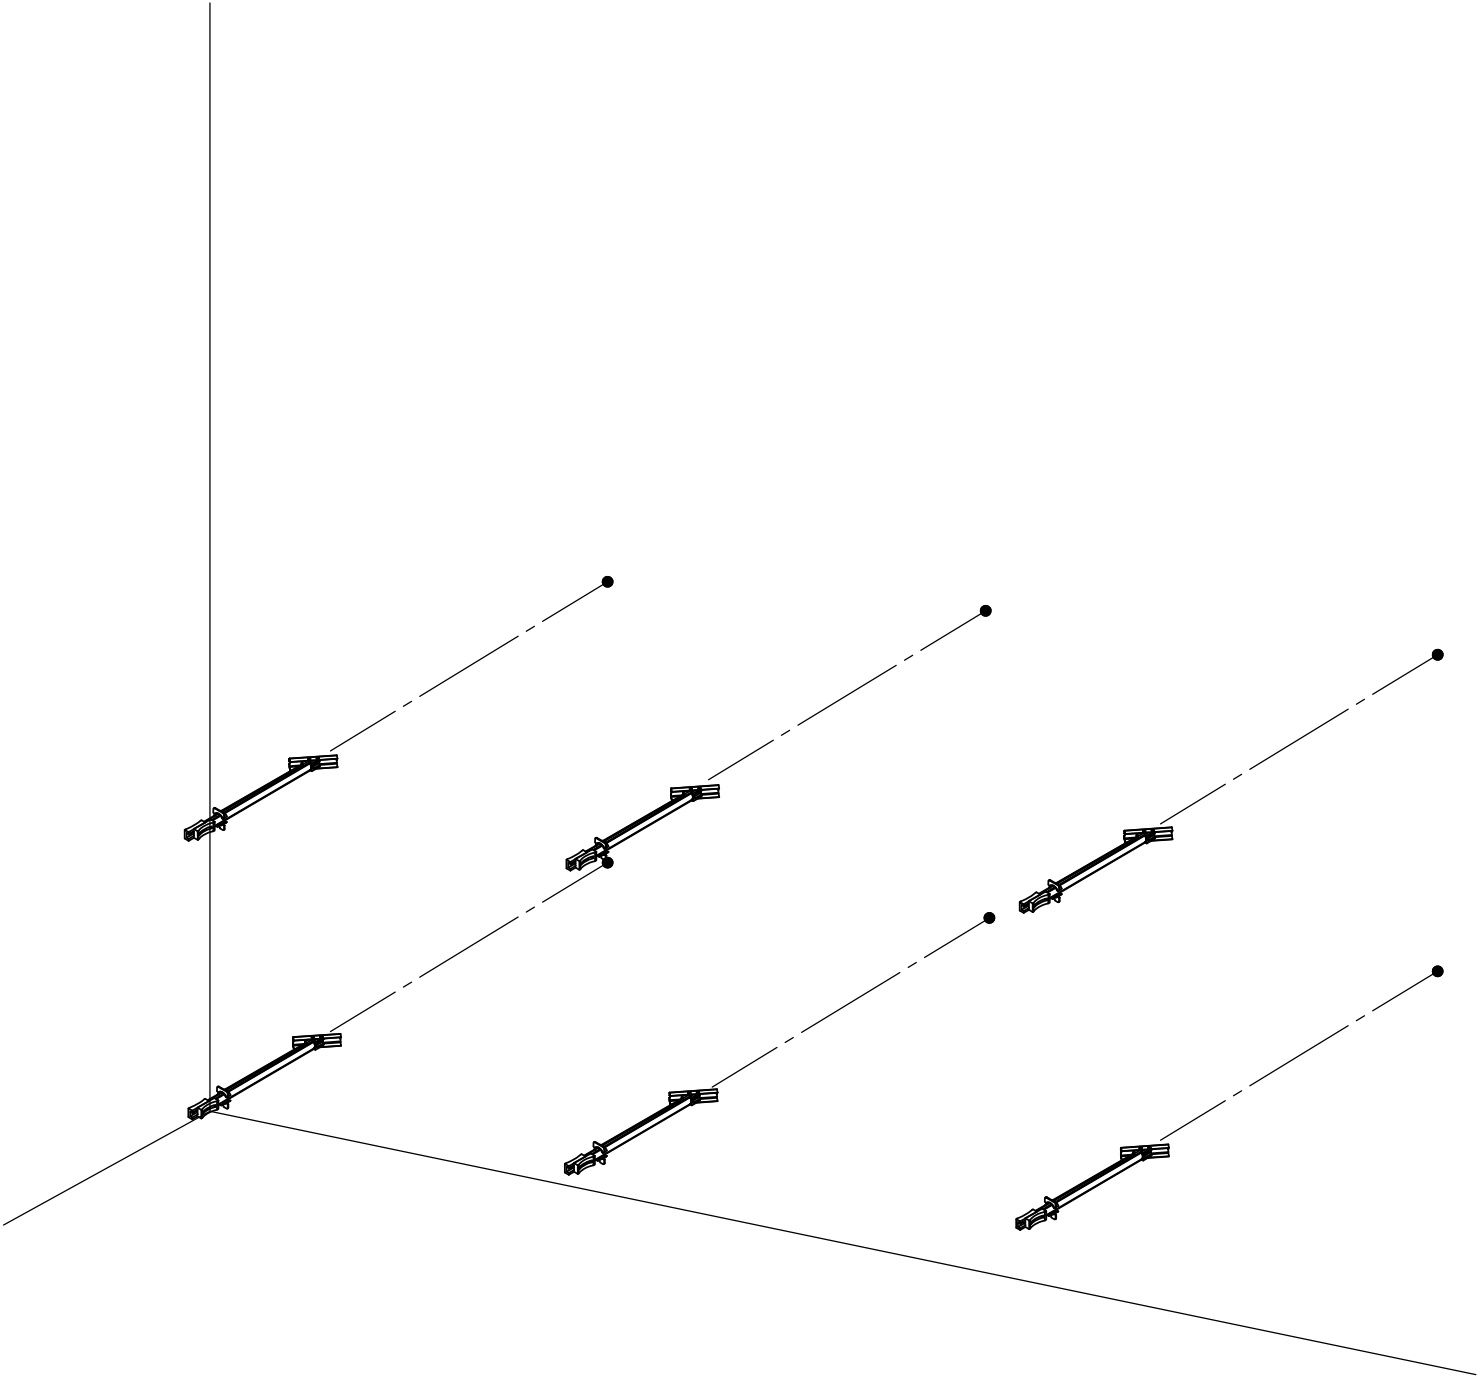


rotate toggle,
push through drilled holes

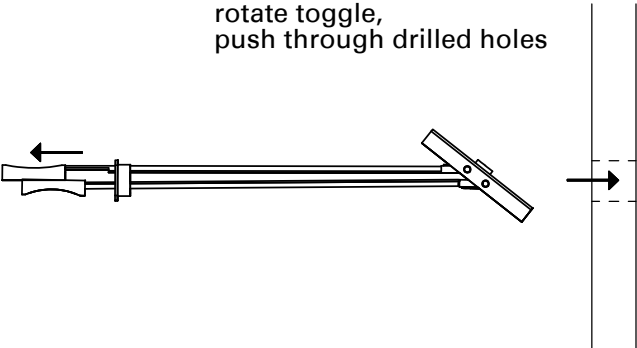


rotate back, pull tight
against wall

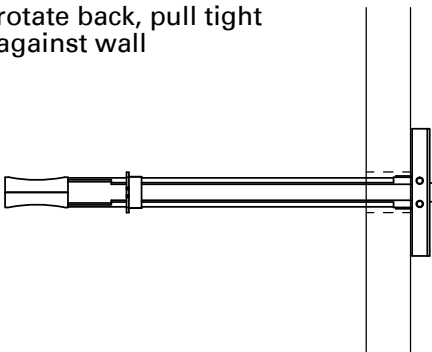


slide cap against wall

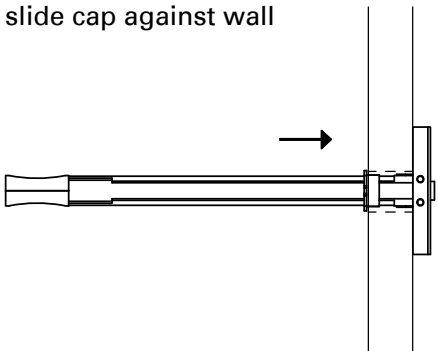


bend back and forth,
break off ends

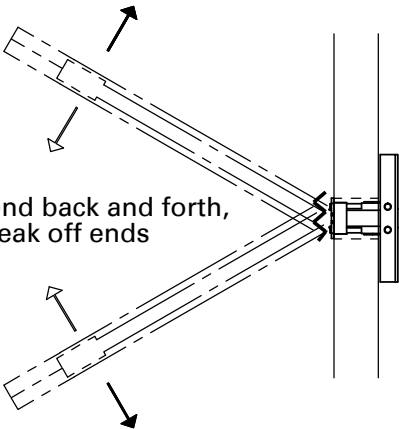


STEP 3

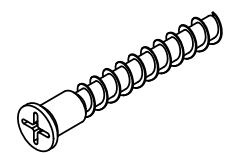

A x 8

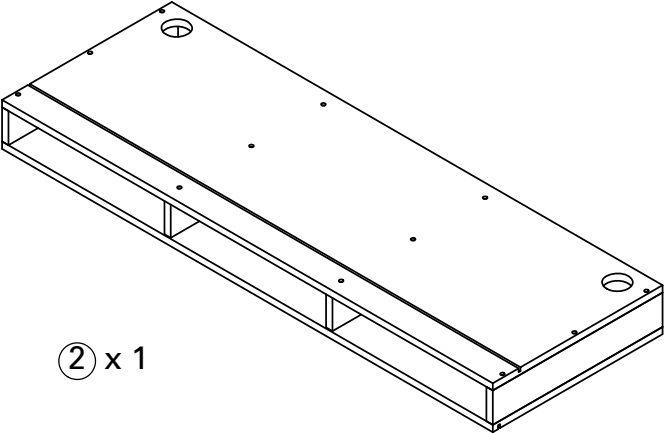


2 x 1

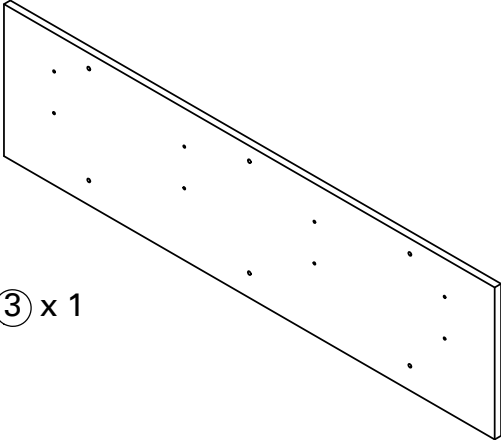


3 x 1


correct orientation

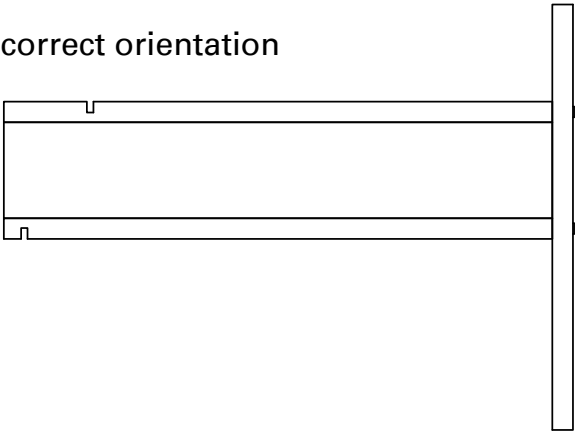


This side to wall.


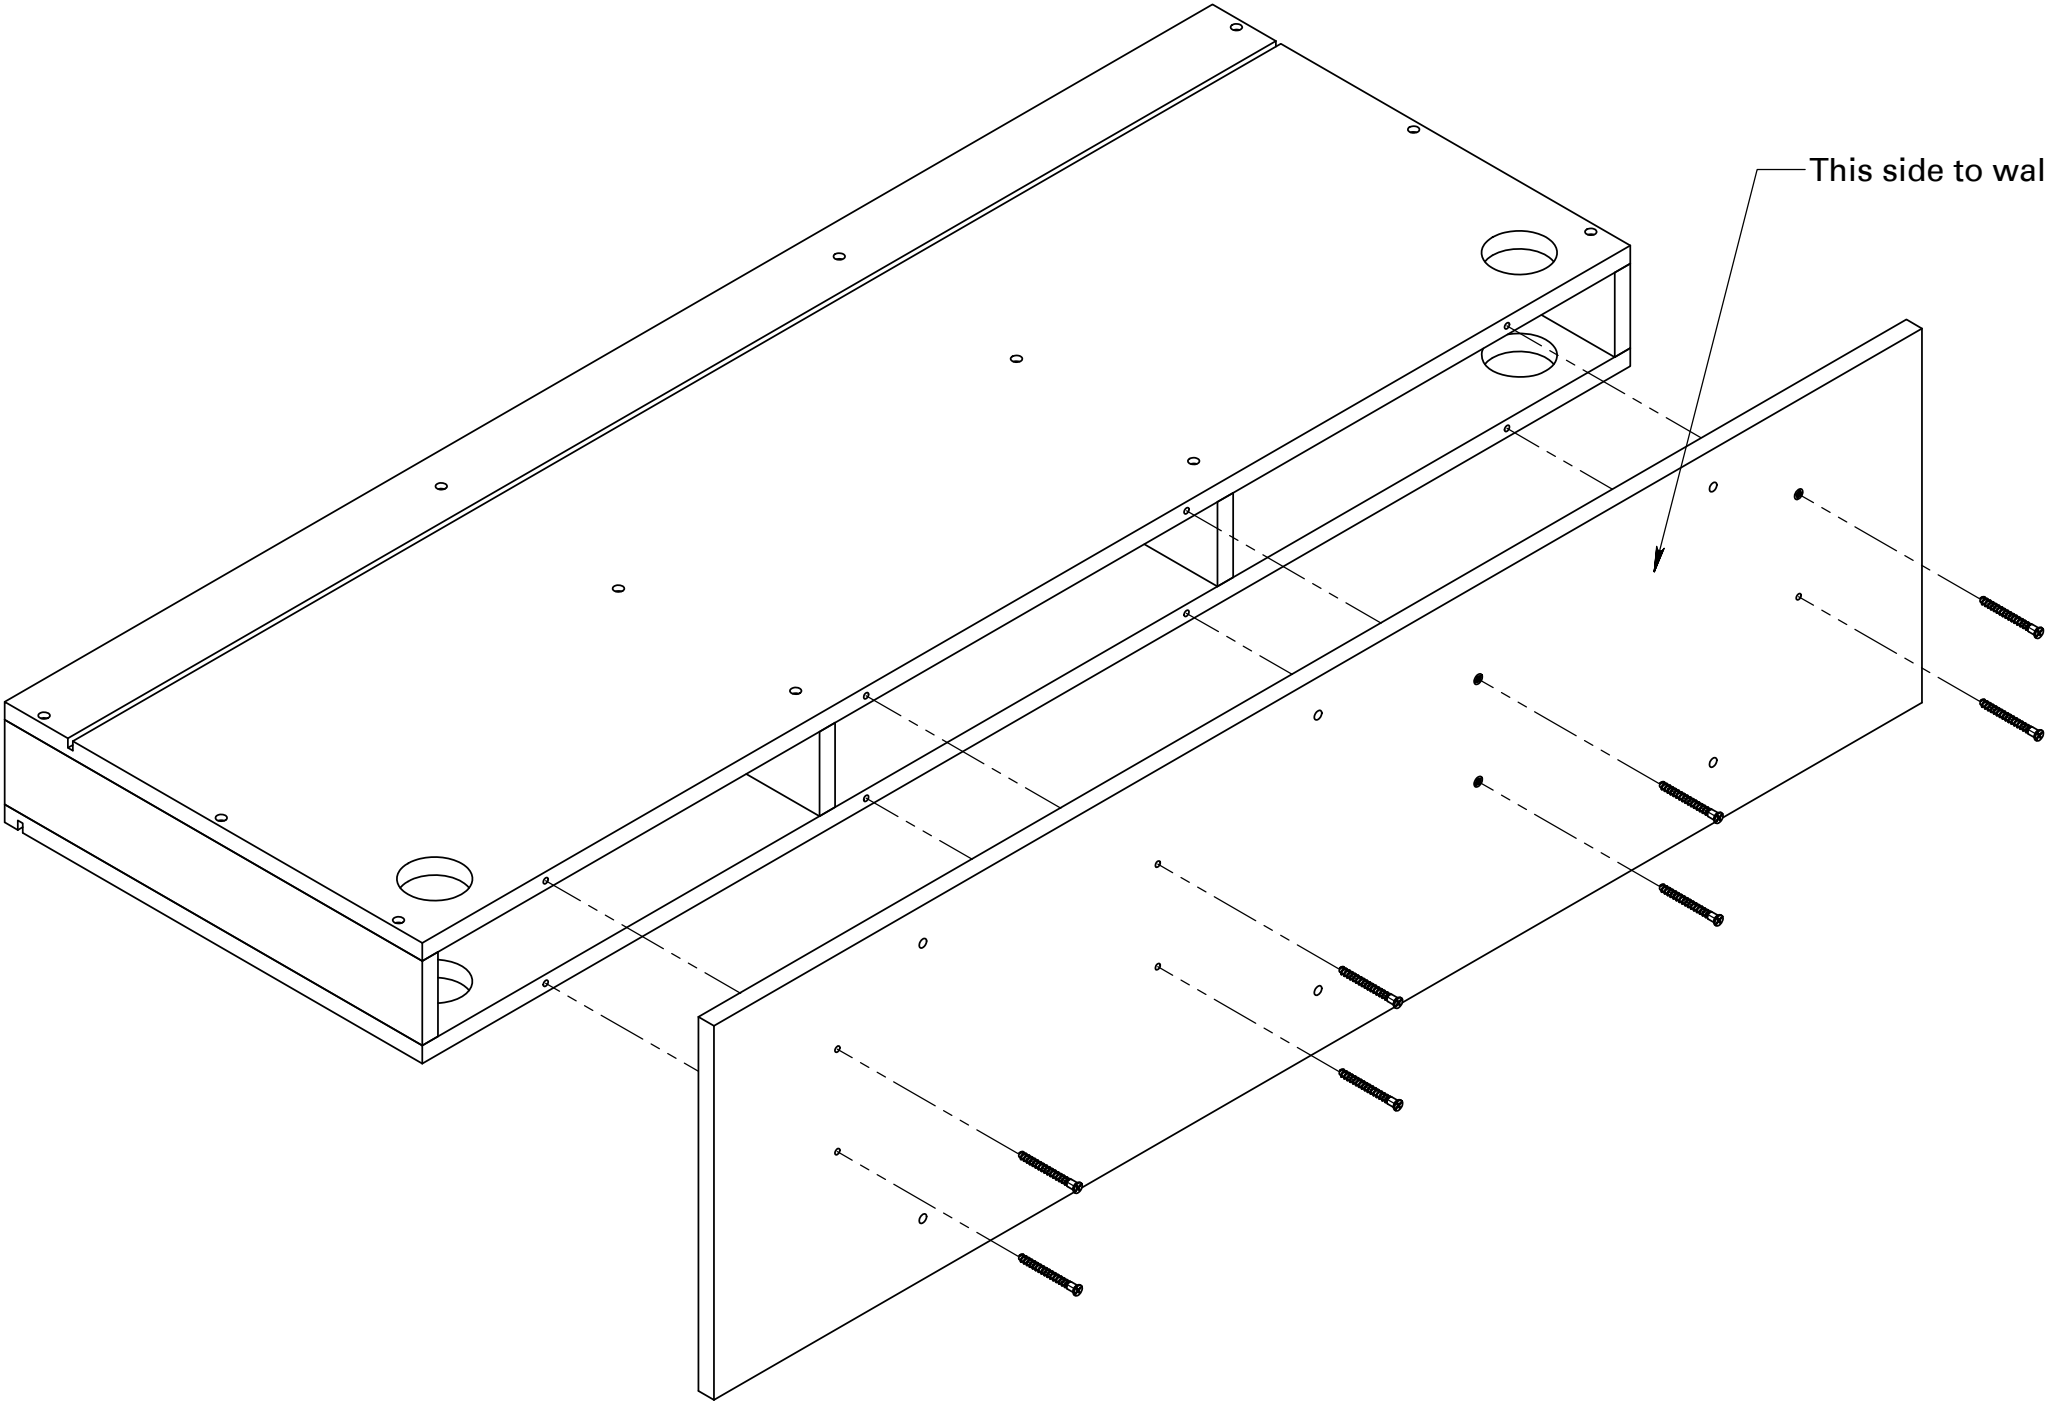


STEP 4

Have someone hold the desk
in place while the six  toggle bolts
are installed.

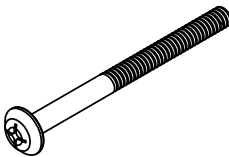

 x 6

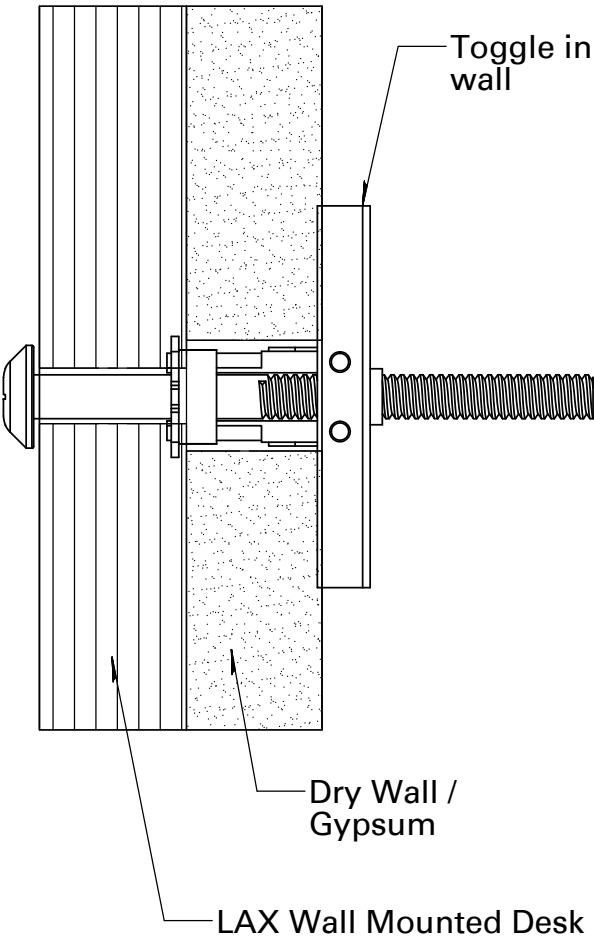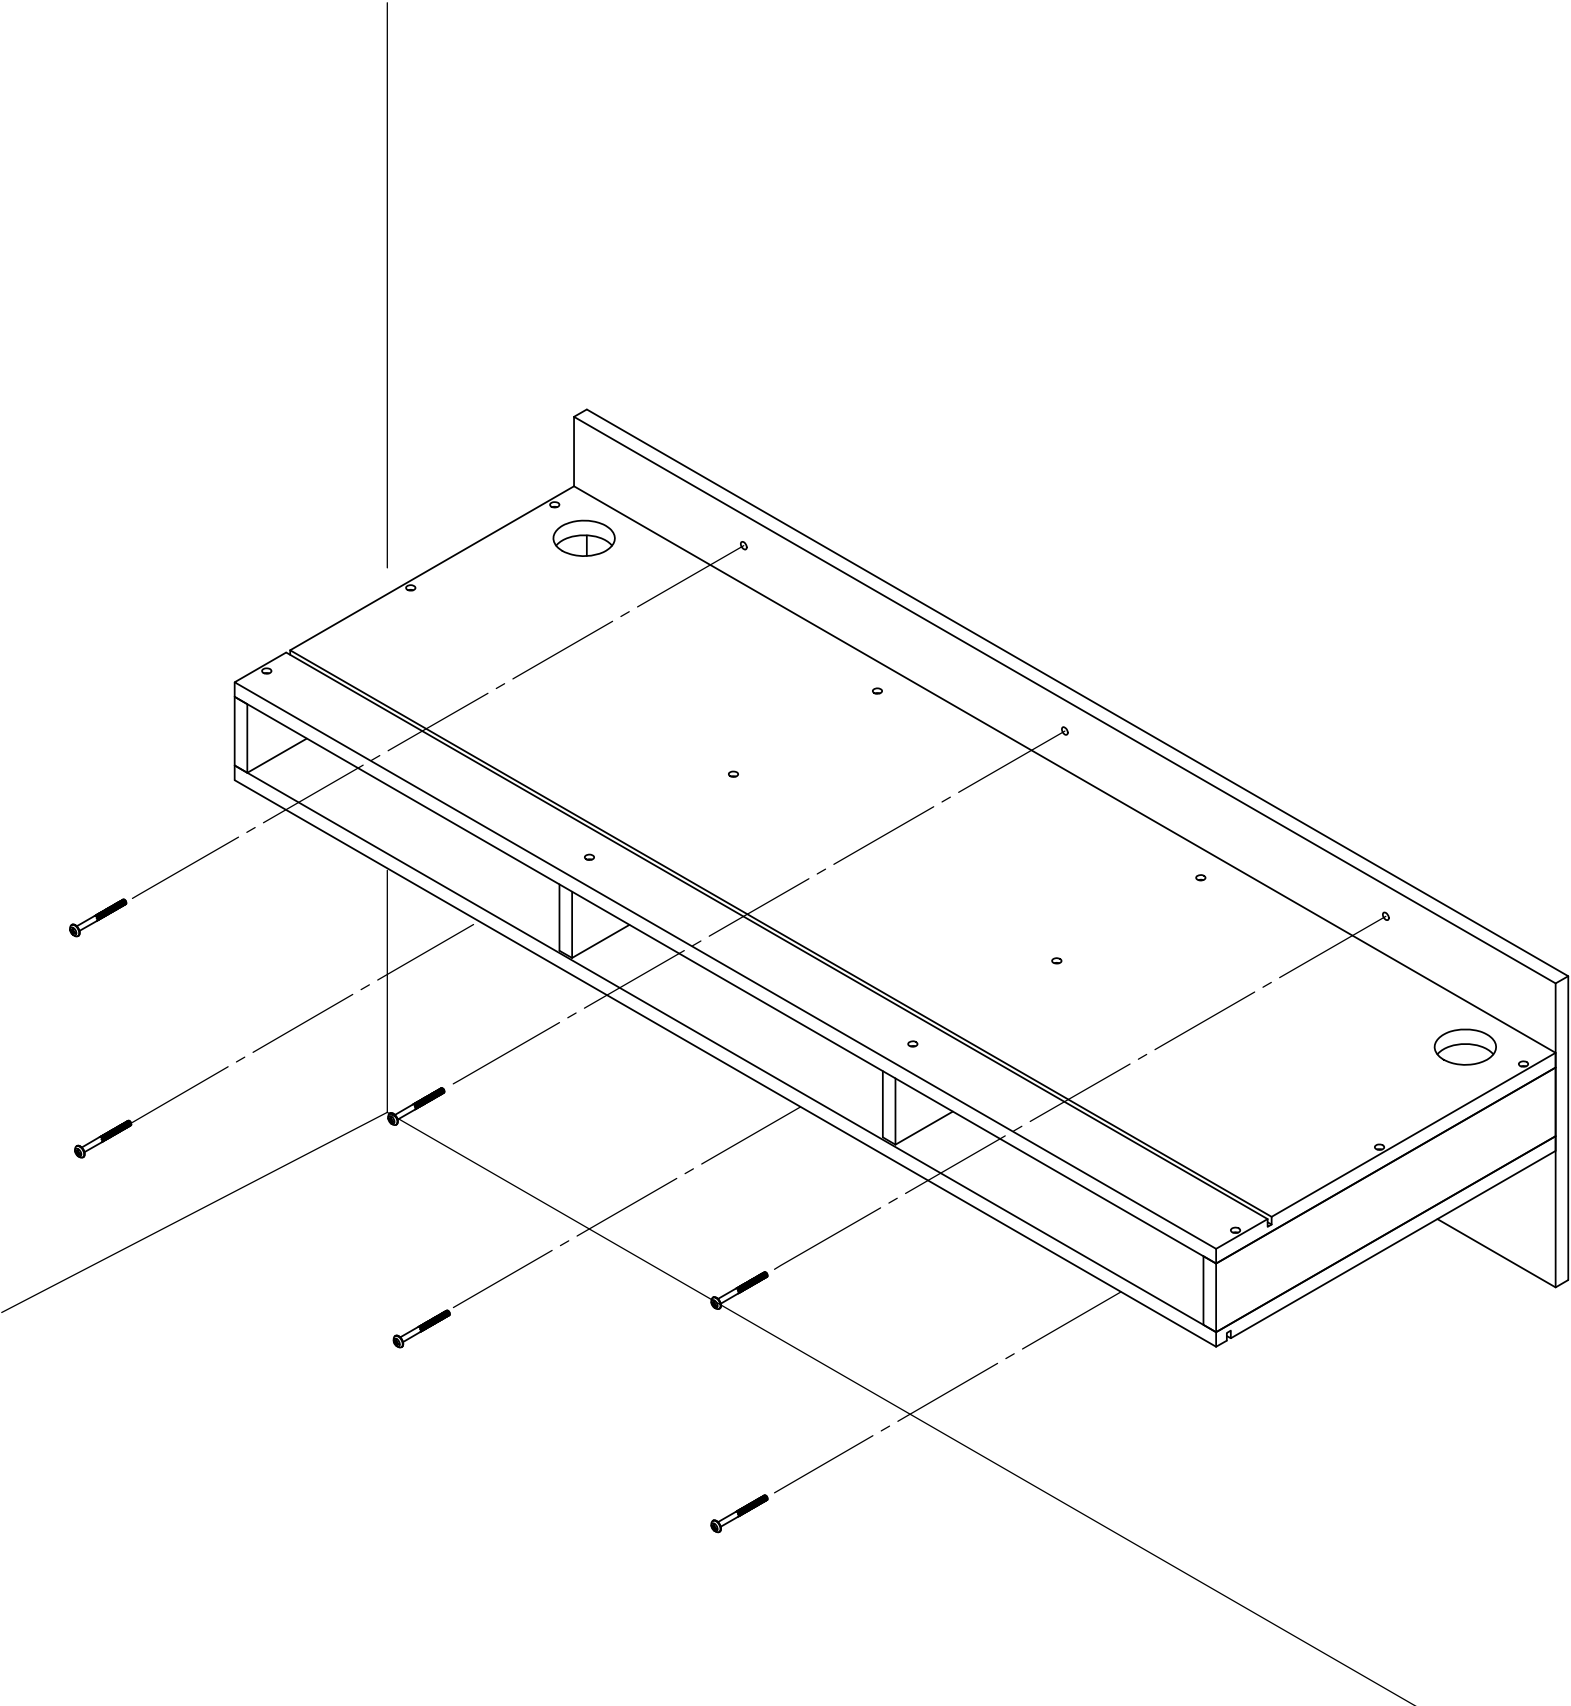

STEP 5

