

Assembly Instructions









COUNTER SIDE CHAIR

DMT700CSC


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


| PART LIST FOR COUNTER SIDE CHAIR | | | |
|----------------------------------|--|----------------|------|
| No. | PART DESC | CODE. | Q'TY |
| A | COUNTER SIDE CHAIR - BACK FRAME | PDMT700CSCBFR | 1 |
| B | COUNTER SIDE CHAIR - SEAT FRAME WITH CUSHION | PDMT700CSCSEA | 1 |
| C | COUNTER SIDE CHAIR - FRONT LEG L / R | PDMT700CSLEG | 2 |
| D | COUNTER SIDE CHAIR - SIDE STRETCHER L / R | PDMT700CSCSTR | 2 |
| E | COUNTER SIDE CHAIR - FRONT STRETCHER | PDMT700CSCSTR1 | 1 |

| HARDWARE LIST PACKED INSIDE BOX | | | |
|---------------------------------|--|--------------|------|
| No. | HARDWARE DESC | CODE. | Q'TY |
| 1 |  ALLEN BOLT (1/4" x 40mm) | PDMT700CSCHW | 2 |
| 2 |  ALLEN BOLT (1/4" x 75mm) | | 4 |
| 3 |  NUT (5/16") | | 4 |
| 4 |  SPRING WASHER (5/16") | | 10 |
| 5 |  FLAT WASHER (5/16") | | 10 |
| 6 |  SCREWS (M4x38mm) | | 6 |
| 7 |  ALLEN KEY (M4) | | 1 |
| 8 |  WRENCH (5/16") | | 1 |

STEP:1

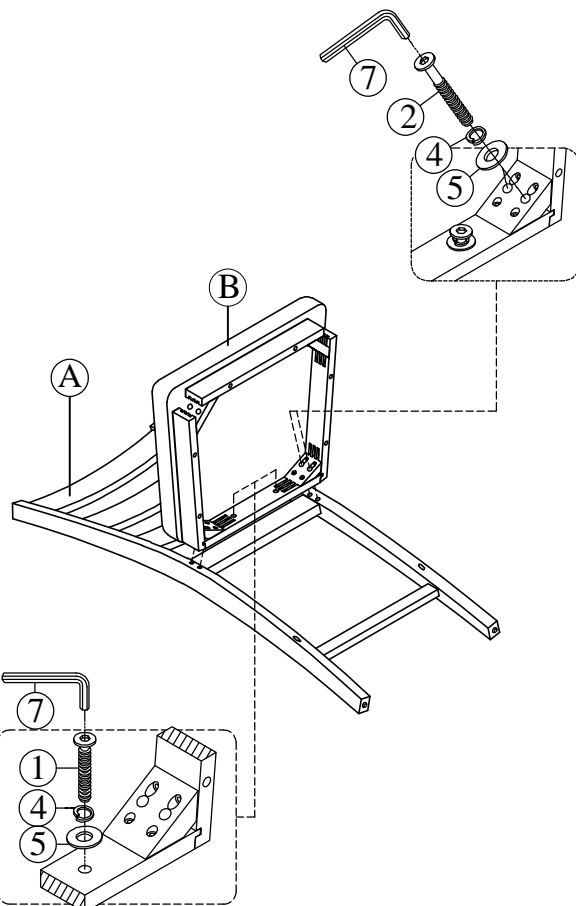

STEP:2

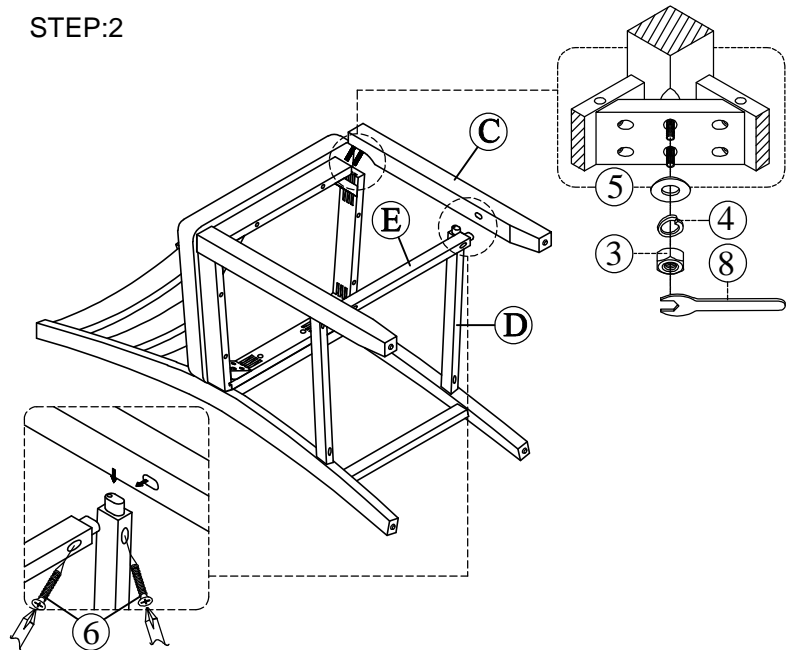

COMPLETED

