






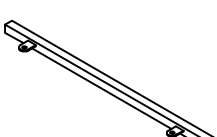
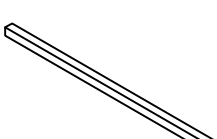

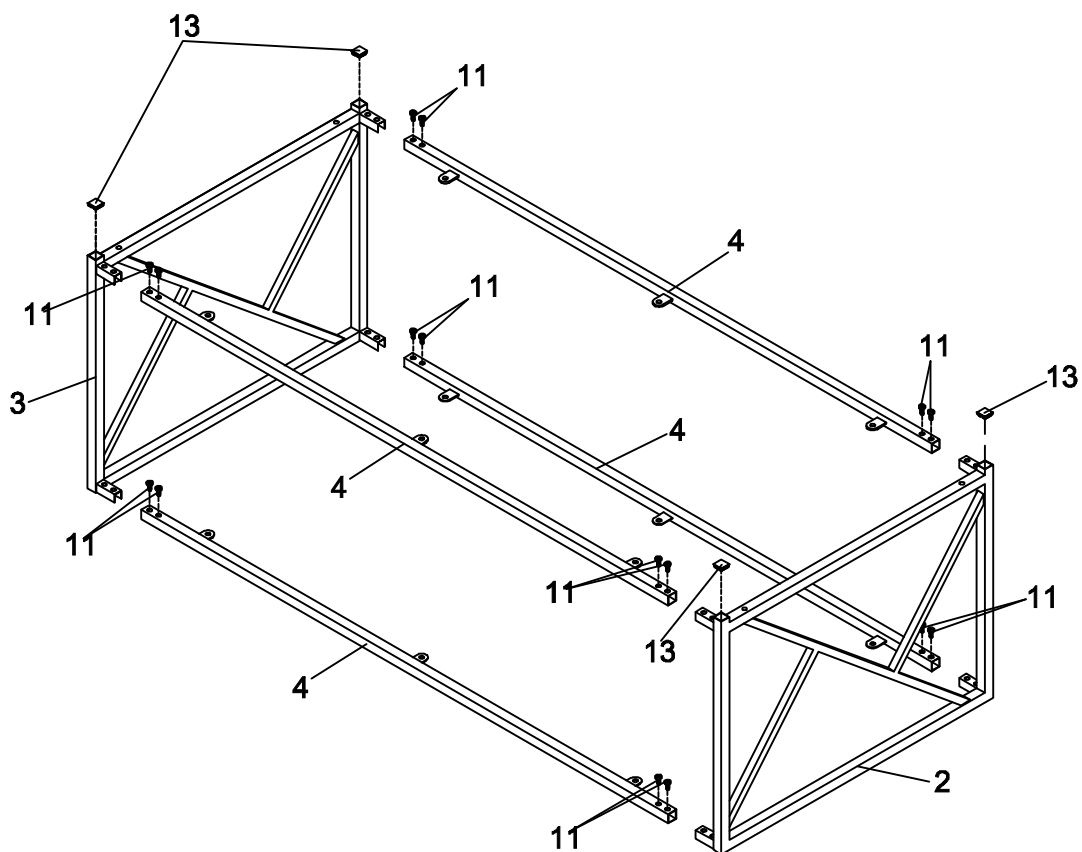


Item #: CBR100OT


Some parts may have become loose during transit.

PARTS LIST			
NO.	SKETCH	DESCRIPTION	QYT
1		MIRROR FOR COFFEE TABLE	2PCS
2		COFFEE LEFT FRAME	1PC
3		COFFEE RIGHT FRAME	1PC
4		LONG CROSSBAR	4PCS
5		MIRROR FOR END TABLE	2PCS
6		END LEFT FRAME	2PCS
7		END RIGHT FRAME	2PCS
8		SHORT TOP CROSSBAR	4PCS
9		SHORT BOTTOM CROSSBAR	4PCS
10		CASTER	4PCS


[illegible]

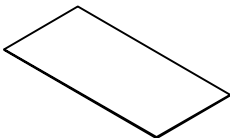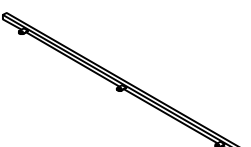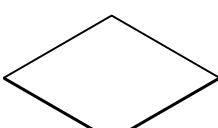


Step 1: 1. Insert Cap (13) into Coffee Left/Right Frame (2,3).
 2. Attach Long Crossbar (4) to Coffee Left/Right Frame (2,3) using Bolt (11).

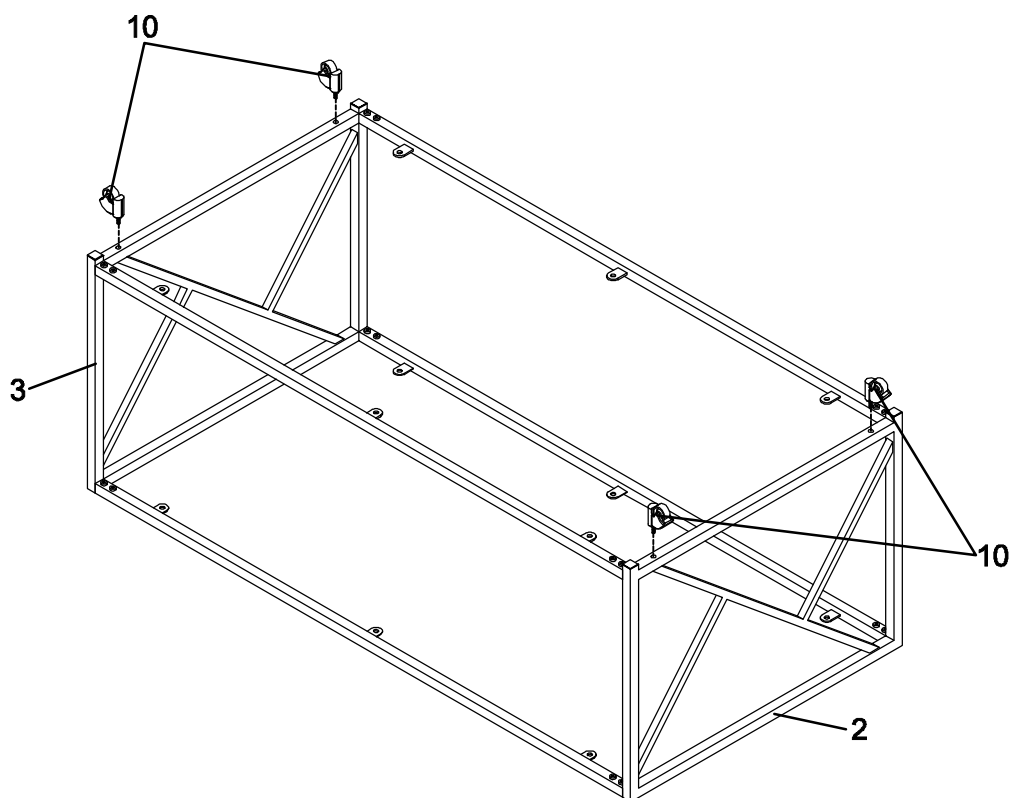

Step 2: Insert Caster (10) into Coffee Left/Right Frame (2,3).

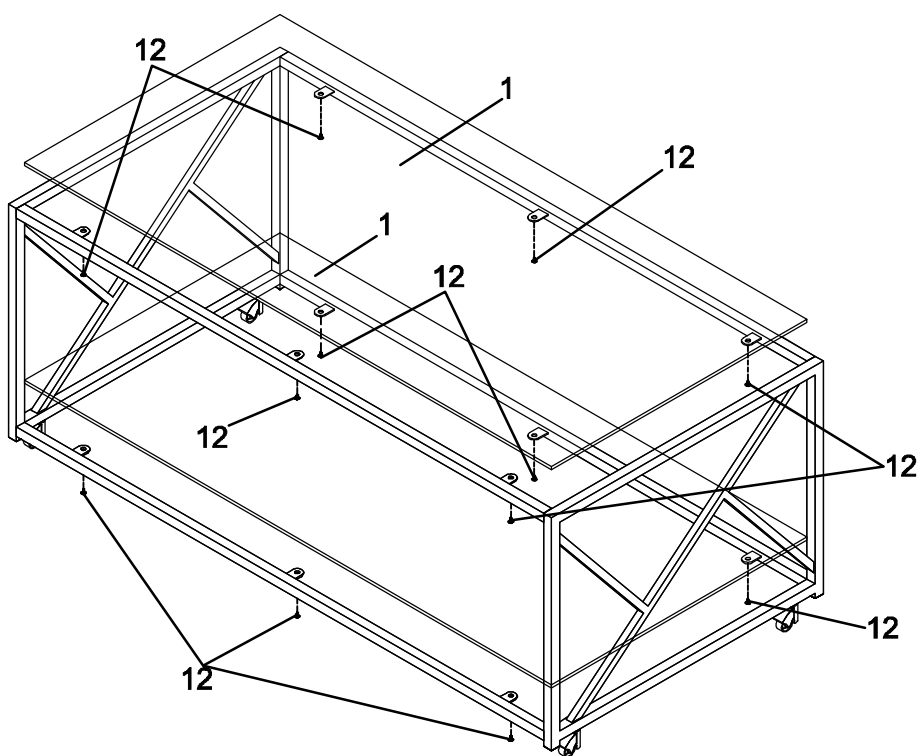


Step 3: Place Coffee Mirror (1) to the assemble in Step 2 using Screw (12).


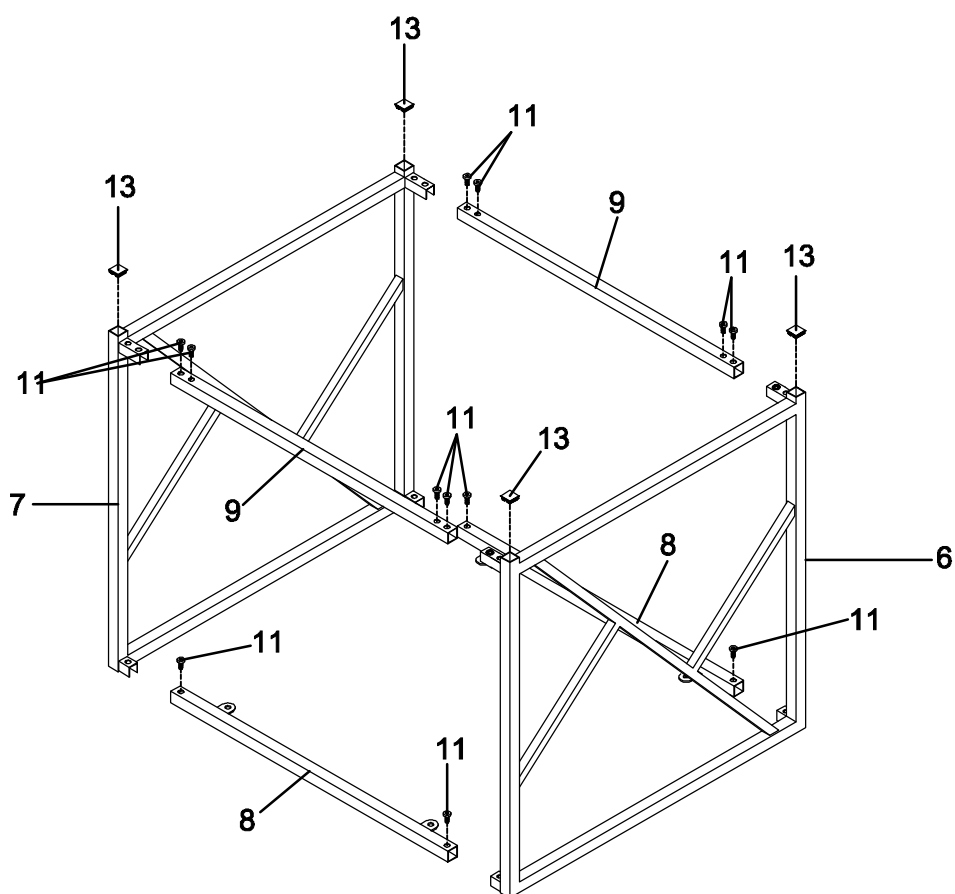


Step 4: 1. Insert Cap (13) into End Left/Right Frame (6,7).

2. Attach Short Top/Bottom Crossbar (8,9) to End Left/Right Frame (6,7) using Bolt (11).

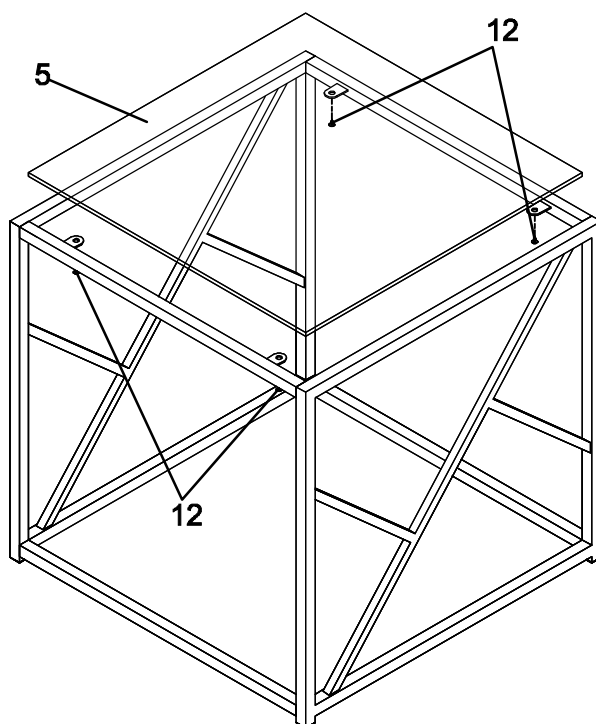

Step 5: Place End Mirror (5) to the assemble in Step 4 using Screw (12).

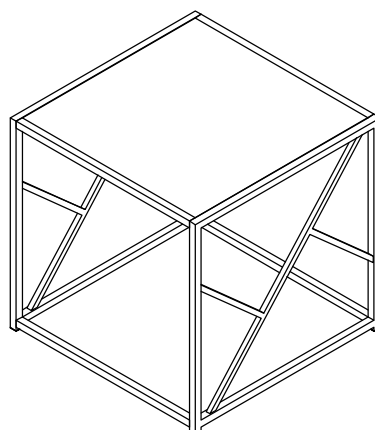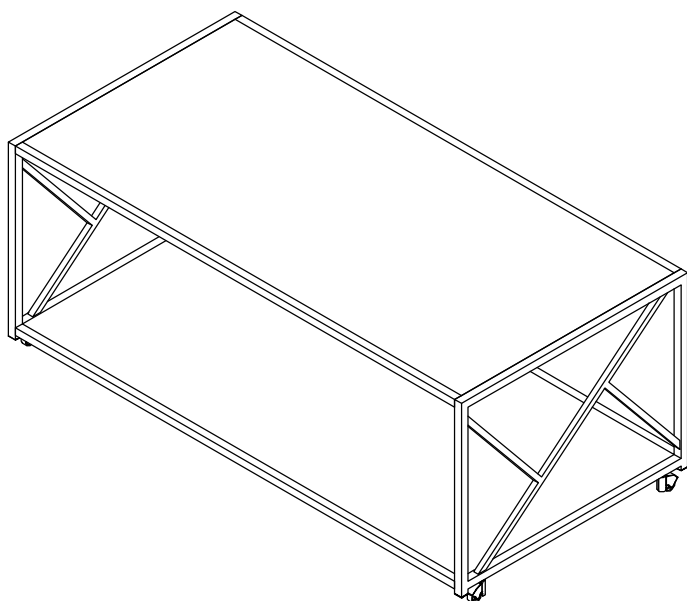

Complete. Congratulations on your assemble success.