






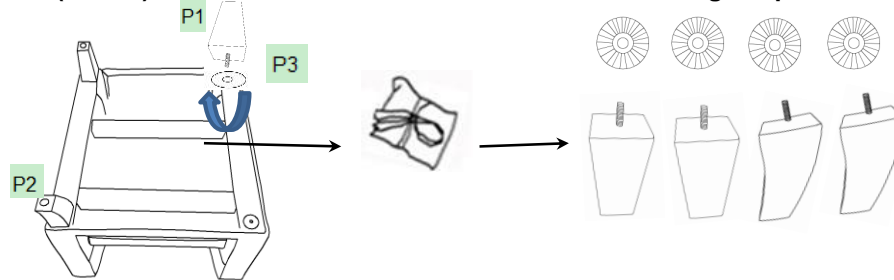
MADISON **PARK**

ASSEMBLY INSTRUCTION

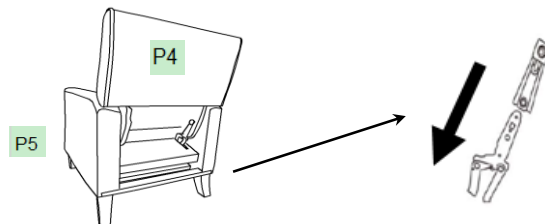
RECLINER

PARTS #	PARTS NAME	DRAWING	QTY
P1	Front Legs		2
P2	Back Legs		2
P3	Plastic washer		4
P4	Recliner Back		1
P5	Recliner Seat		1

1. Remove the non-woven cover at bottom of the chair and take out the legs, Screw in the feet (P1&P2) into the screw holes underneath the base using the plastic washers (P3)



2 Insert the small metal arms on the sides of the Chair **Back**(P4) into the prefabricated slide lock gadget on the Chair Seat(P5) as shown below.



3. **Put the chair upright on a level surface. Assemble is complete.**

