



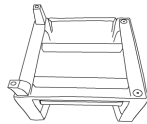
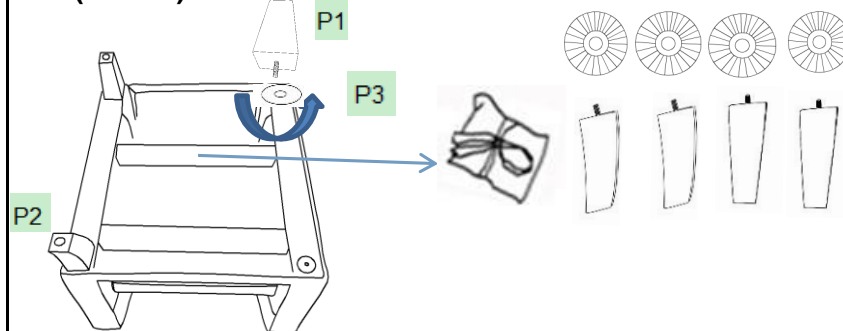


MADISON **PARK**

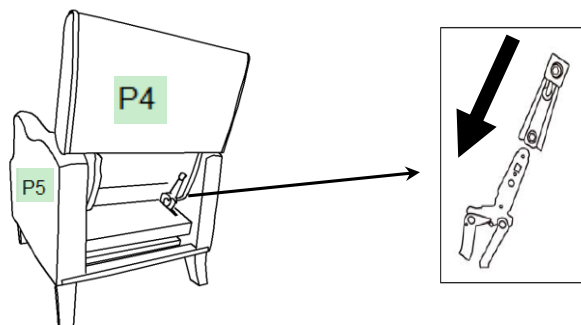
ASSEMBLY INSTRUCTION RECLINER

PARTS #	PARTS NAME	DRAWING	QTY
P1	Front Legs		2
P2	Back Legs		2
P3	Plastic washer		4
P4	Recliner Back		1
P5	Recliner Seat		1

1. Remove the non-woven cover at bottom of the chair and take out the legs, Screw in the feet (P1&P2) into the screw holes underneath the base using the plastic washers (P3)



2 Insert the small metal arms on the sides of the Chair Backrest(P4) into the prefabricated slide lock gadget onthe Chair Seat(P5) as shown below.



3. Level the chair and place the chair upright on a level surface.

