



MANHATTAN  
COMFORT

888-230-2225

*help@manhattancomfort.com*




***Mulberry***


*kit door Corner wardrobe*

# Included in the package


01 - Doors = 02 pieces




A = 24x



B = 04x


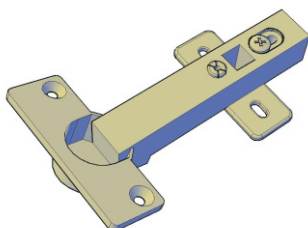


C = 06x

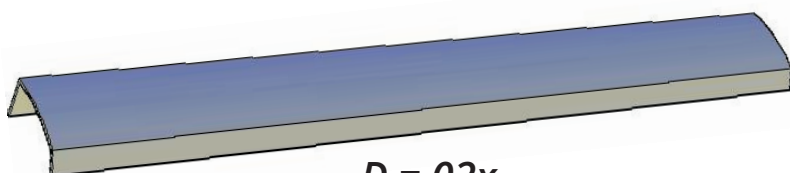

D = 02x

01

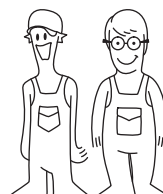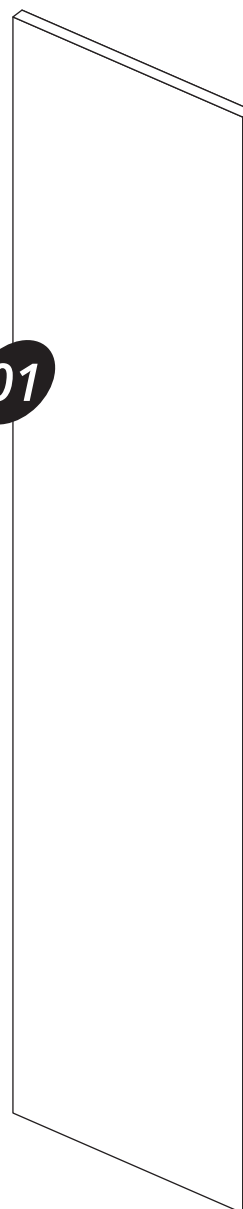

Tools needed  
(not included)




Phillips screw driver




Screw driver

## Step 01


Connect the hardware (C)  
into the part (01) with  
the hardware (A).

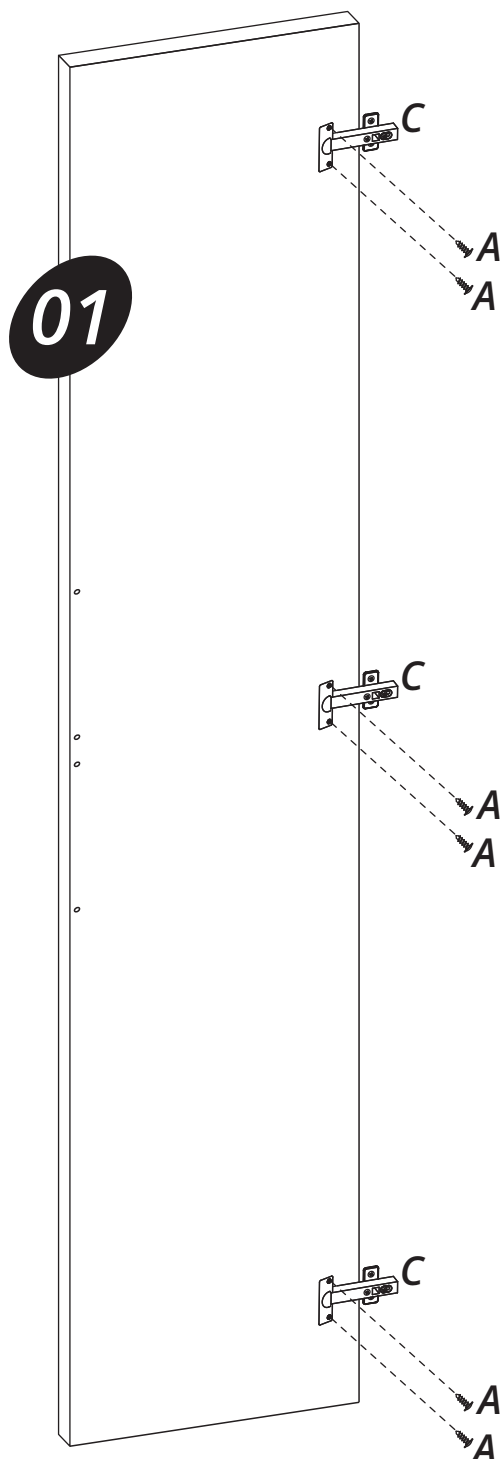

Connect the hardware (D)  
onto the part (01) with  
the hardware (B).

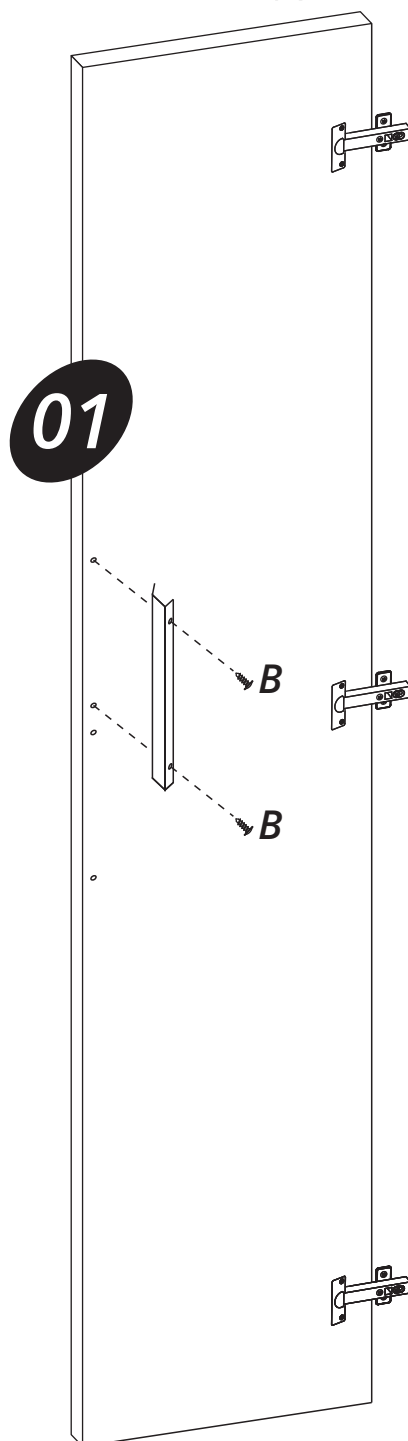

Attention to the position of  
the Handle (D) on  
the part (01).  
One up and  
one down.

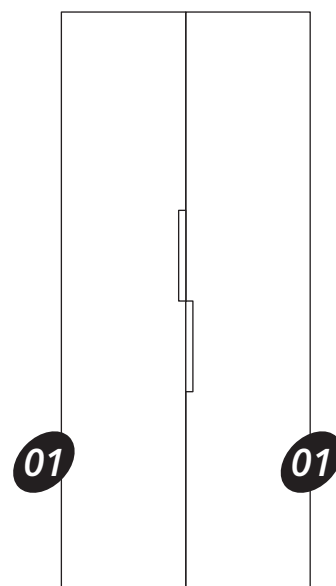

## Step 02

Connect the part (01)  
into the Side Panels of the  
Mulberry Corner Wardrobe with  
hardware (A).

Side Panels of the  
Mulberry Corner Wardrobe

