


MANHATTAN
COMFORT




Eldridge Wardrobe

Model # 34150, 34163, 34184

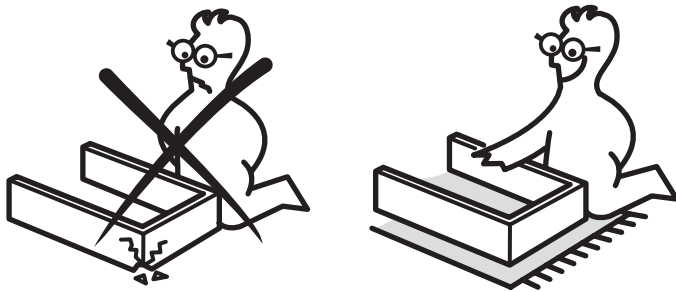


For Best Results


- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

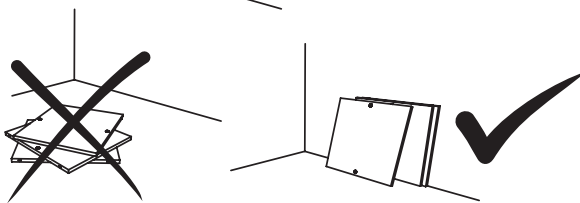

Tools Required

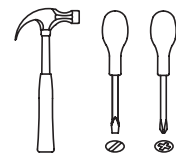

View our assembly video online
www.manhattancomfort.com

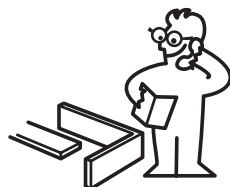


Stuck? Questions? We are here to help.

1-888-230-2225


help@manhattancomfort.com

Included in this Package

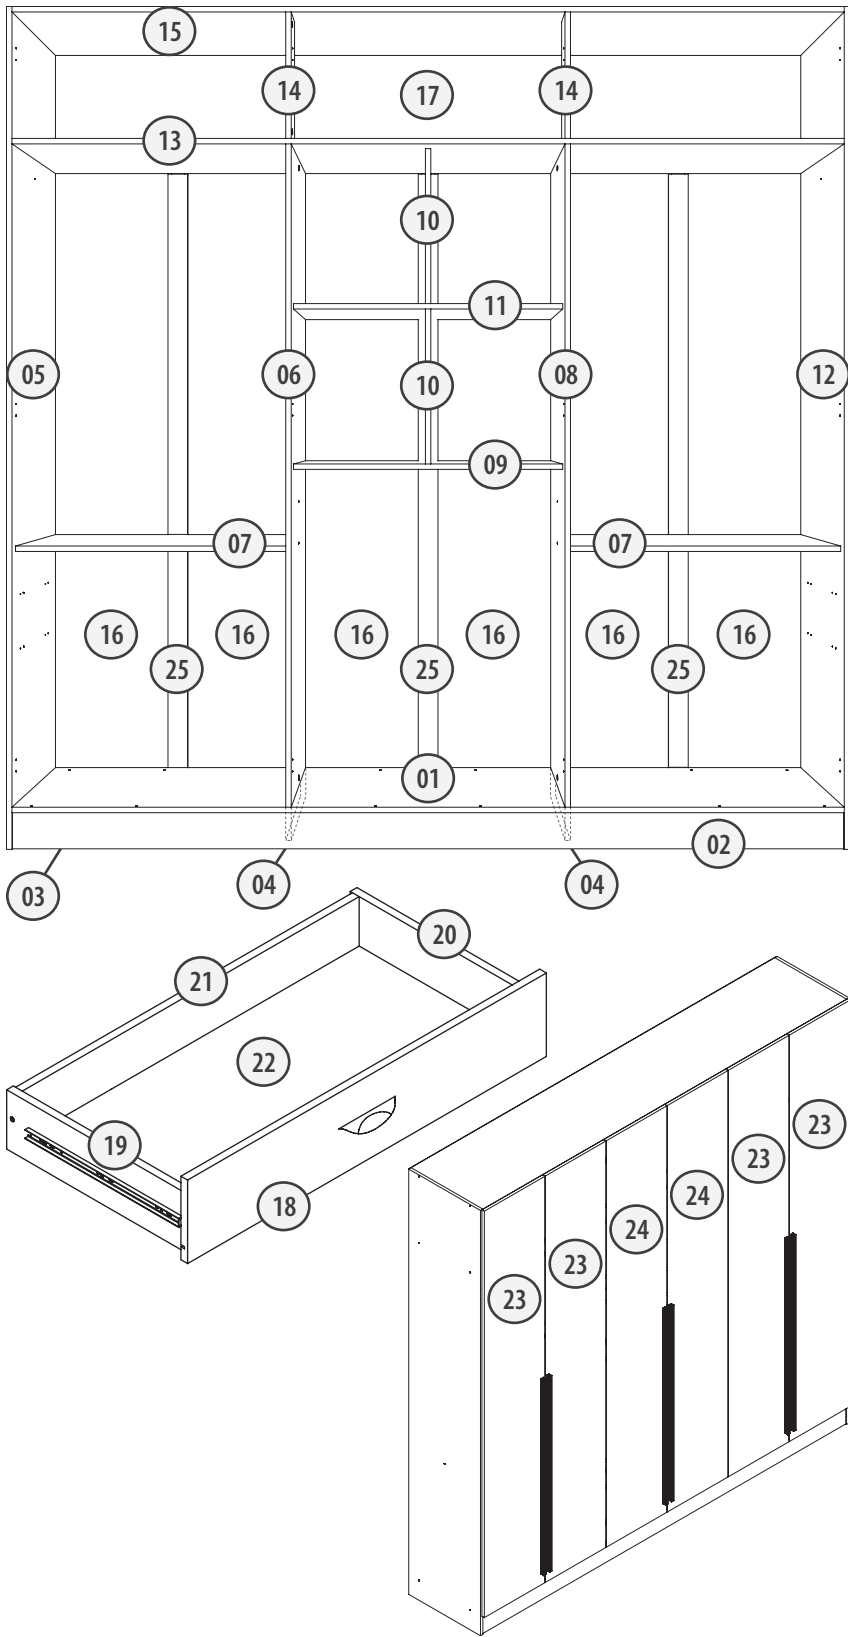

- | | |
|-----------------------------|----|
| 01. Baseboard | x1 |
| 02. Front of Baseboard | x1 |
| 03. Back of Baseboard | x1 |
| 04. Baseboard Support Beams | x2 |
| 05. Left Outer Side | x1 |
| 06. Left Inner Side | x1 |
| 07. Left and Right Shelves | x2 |
| 08. Right Inner Side | x1 |
| 09. Bottom Center Shelf | x1 |
| 10. Center Dividers | x2 |
| 11. Top Center Shelf | x1 |
| 12. Right Outer Side | x1 |
| 13. Top Shelf | x1 |
| 14. Top Dividers | x2 |
| 15. Wardrobe Top | x1 |
| 16. Vertical Backplates | x6 |
| 17. Horizontal Backplate | x1 |
| 18. Front of Drawer | x4 |
| 19. Side of Drawer - Left | x4 |
| 20. Side of Drawer - Right | x4 |
| 21. Back of Drawer | x4 |
| 22. Bottom of Drawer | x4 |
| 23. Outer Doors | x4 |
| 24. Inner Doors | x2 |
| 25. Support Beams | x3 |


Included in this Package

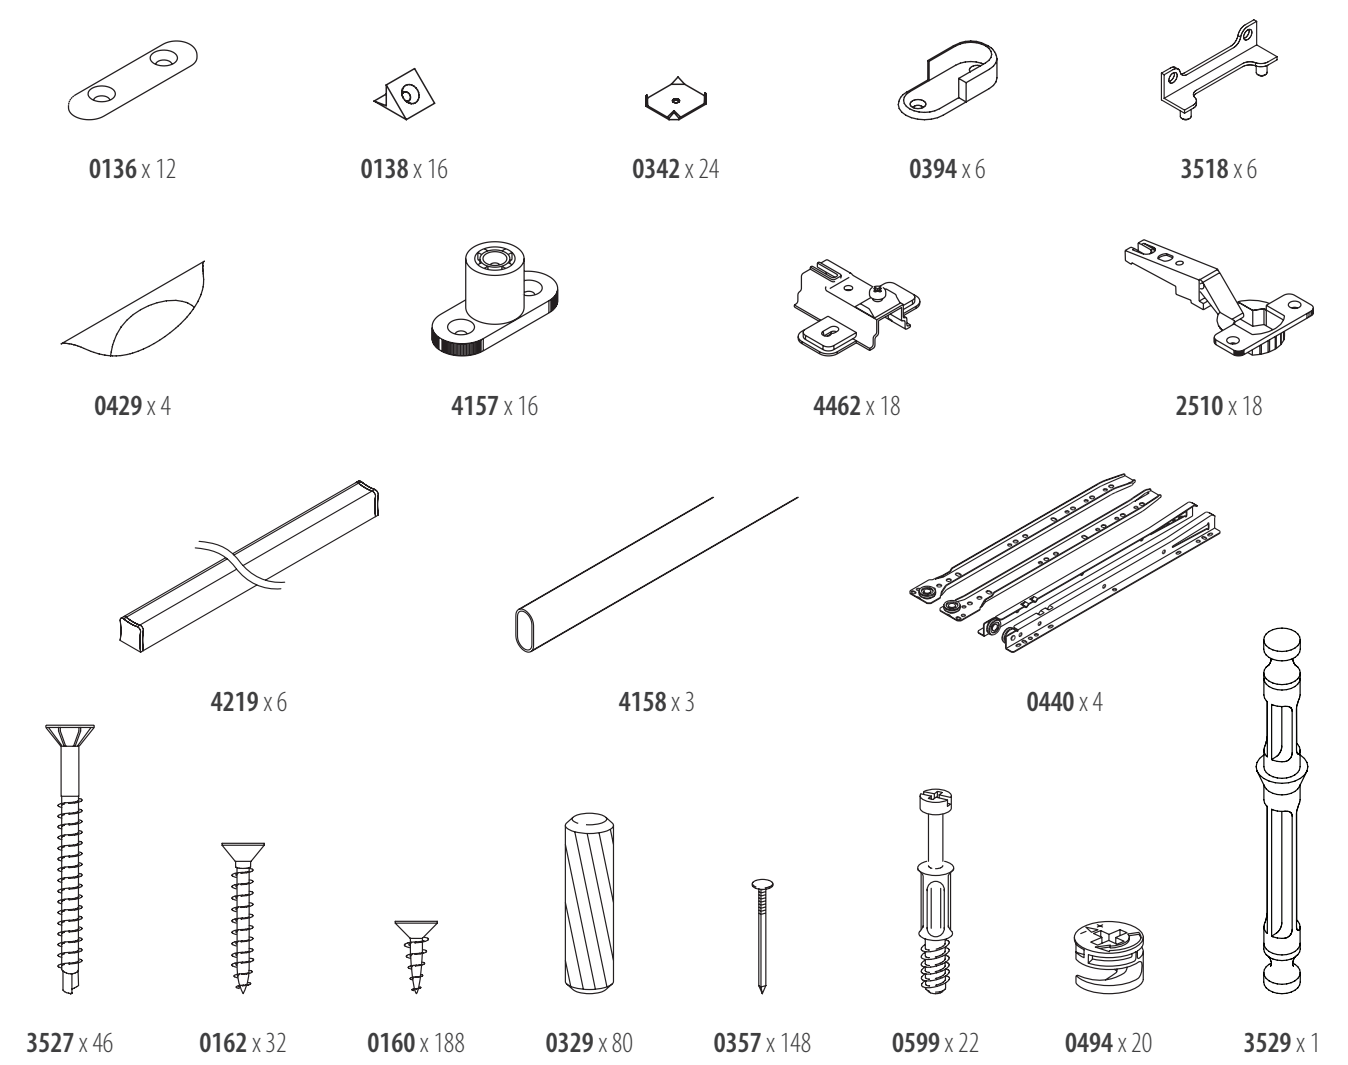

Where to find the items


Box 1	Box 2	Box 3		Box 4	Box 5	Box 6			
23	23	01	14	05	06	07	0136	0357	2510
	24	02	15	09	08	18	0138	0394	3518
		03	4158	10	16	19	0160	0429	3527
		04	4219	11	25	20	0162	0440	3529
		13		12		21	0329	0494	4157
				17		22	0342	0599	4462

Baseboard

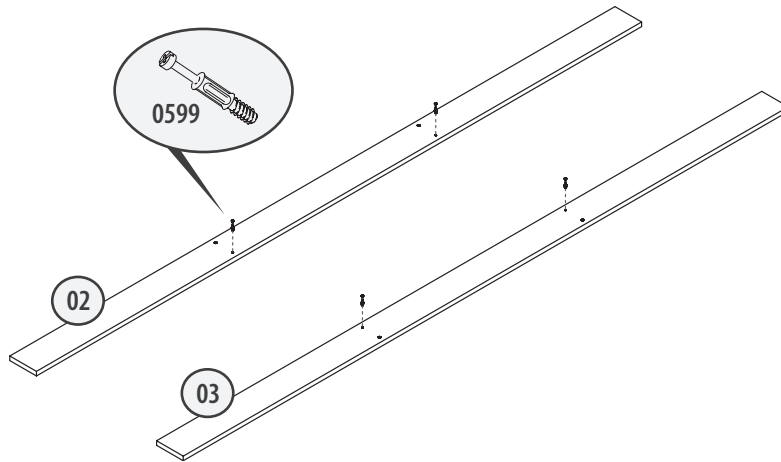


STEP 1

- Take **02** and **03** and lay them with the unfinished side up.
- Screw 2x**0599** into the smaller predrilled holes.

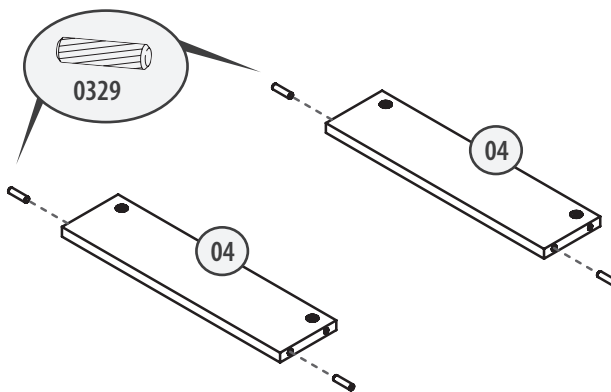

STEP 2


- Take 2x**04** and hammer 2x**0329** into each of them.

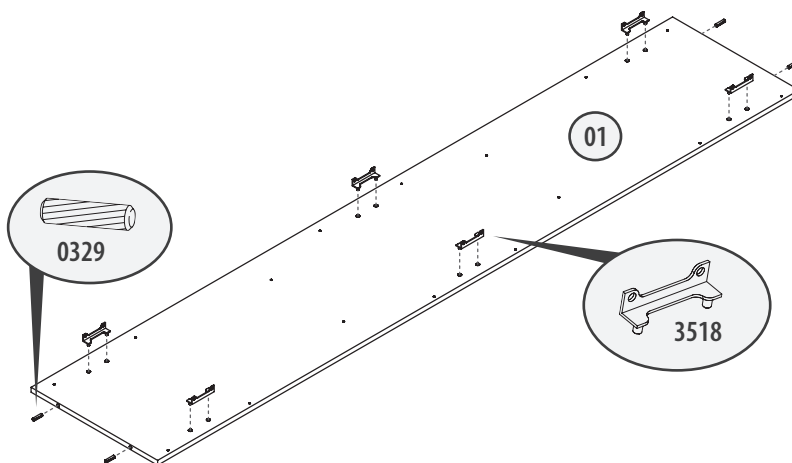

STEP 3


- Take **01** and hammer 4x**0329** into ends.
- Take 6x**3518** and hammer them into holes under **01**.

Baseboard

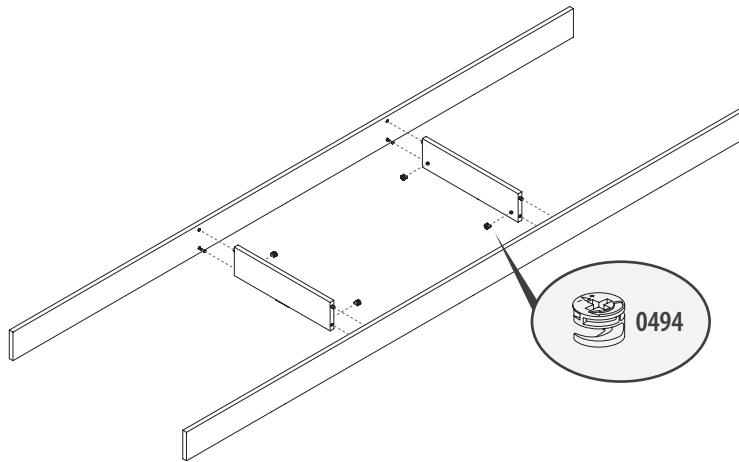


STEP 4

- Take 2x**04** and place them between **02** and **03** and push them all together.
- Place 2x**0494** in each **04** and screw it in.
- Note: When placing **0494** be sure that the arrow is pointing to the hole in the edge of the wood.

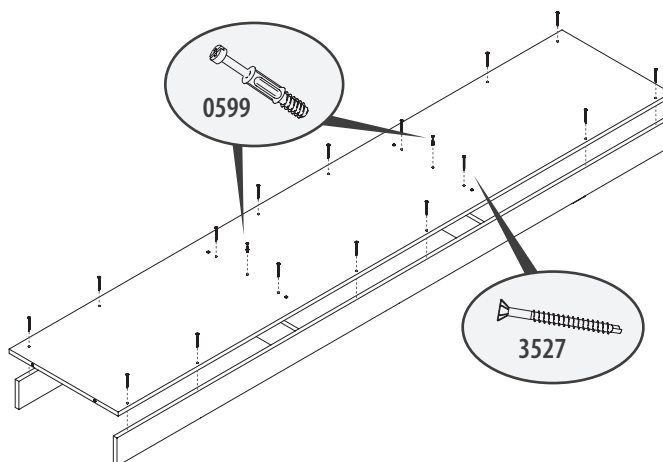

STEP 5


- Place **01** (with 6x**3518** facing down) on top and screw 16x**3527** as shown.
- Screw 2x**0599** into middle of **01**.
- Note: Be careful to align **01** with the baseboard.

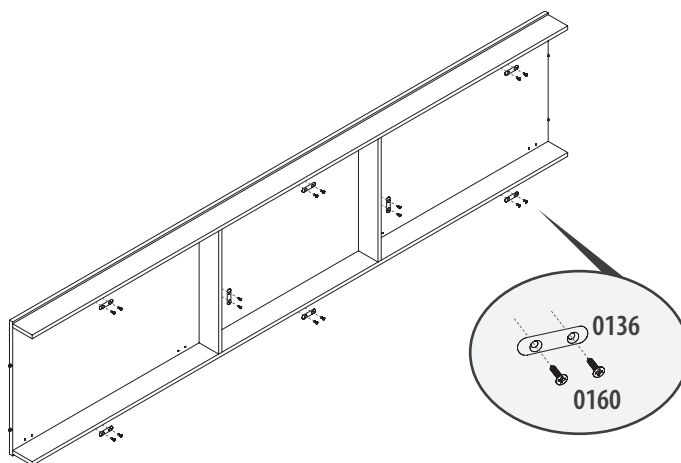

STEP 6


- Flip baseboard upside down.
- Place 8x**0136** on bottom of baseboard and screw 2x**0160** into each.
- Note: Bottom of baseboard has no predrilled holes. Suggested placements of **0136** are as shown.

Prepare Vertical Pieces

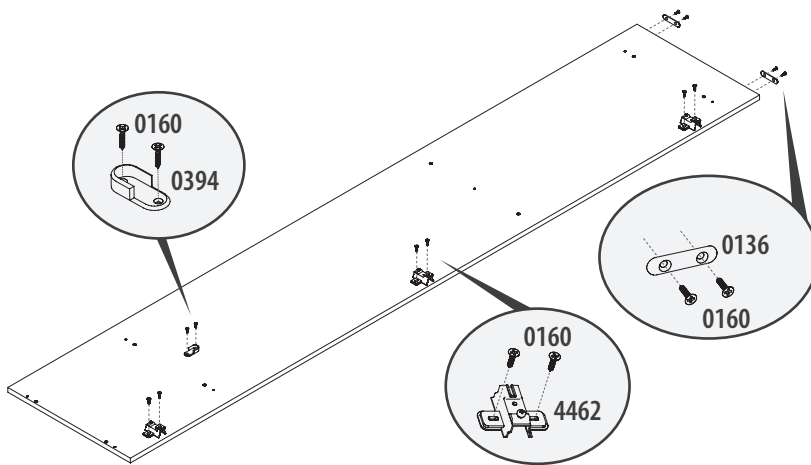

STEP 7


- Take **05** and place **0394** and screw 2x**0160** as shown.
- Take 3x**4462** and screw 2x**0160** into each of them.
- Place 2x**0136** on bottom edge and screw 2x**0160** through each.
- Note: When screwing in **0394**, screw the upper **0160** into the predrilled hole as shown.

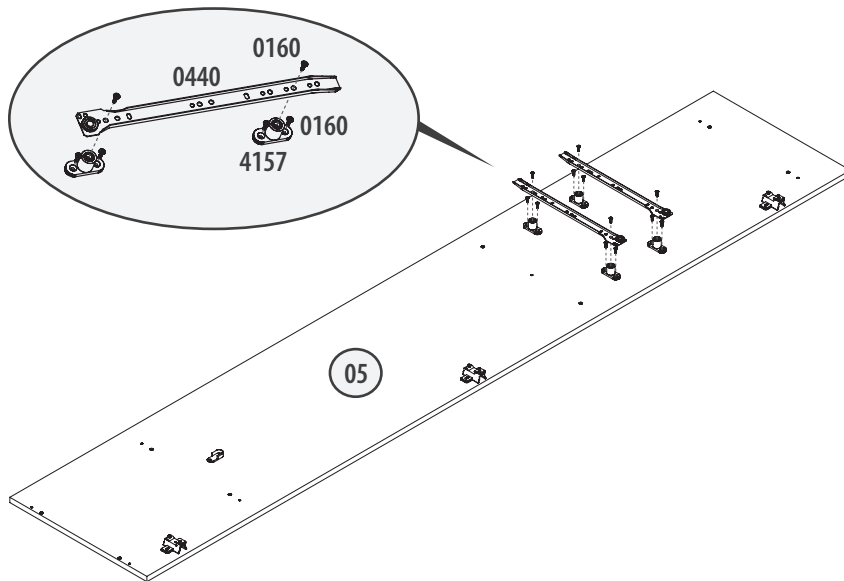

STEP 8


- Place 4x**4157** and screw 2x**0160** through each.
- Place **0440** on each pair of **4157** as shown and screw 2x**0160** through each as shown.
- Note: When placing **0440** on **4157** be sure to use the flat **0440**.
- Note: When placing **0440** on **4157** be sure that the wheels are facing down and are also facing the smooth edge of the wood.

Prepare Vertical Pieces

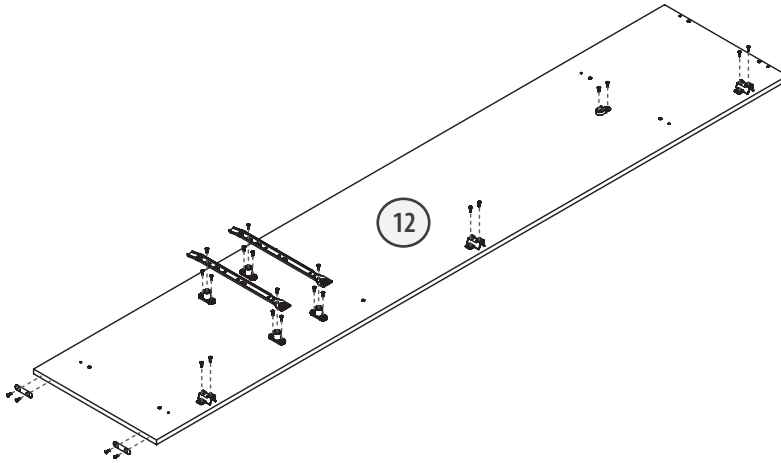


STEP 9

- Repeat Step 7 and Step 8 on **12**.

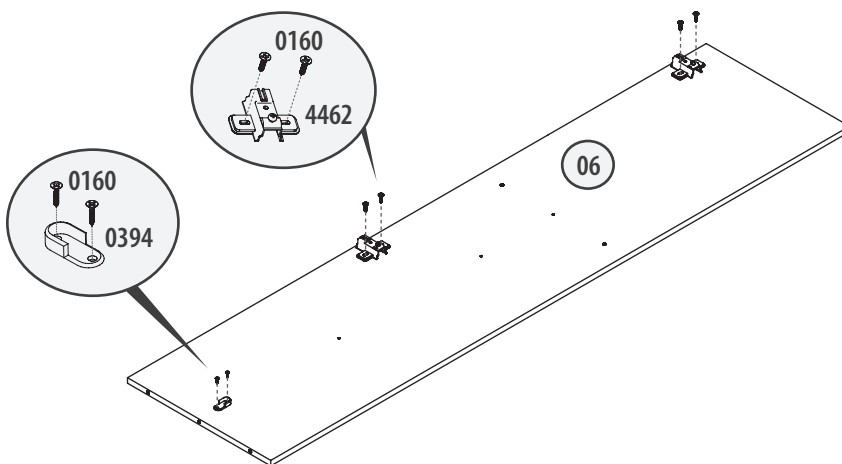

STEP 10


- Take **06** and place **0394** and screw 2x**0160** as shown.
- Place 2x**4462** and screw 2x**0160** through each.

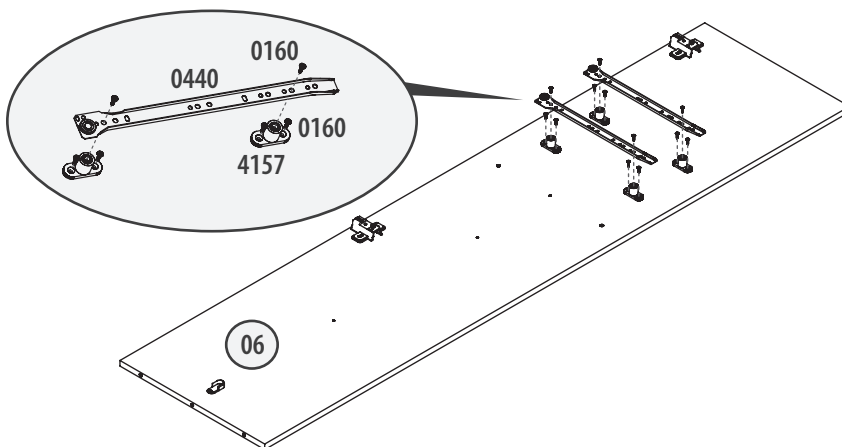

STEP 11


- Place 4x**4157** and screw 2x**0160** through each.
- Place **0440** on each pair of **4157** as shown and screw 2x**0160** through each as shown.
- Note: See notes on step 8.

Prepare Vertical Pieces

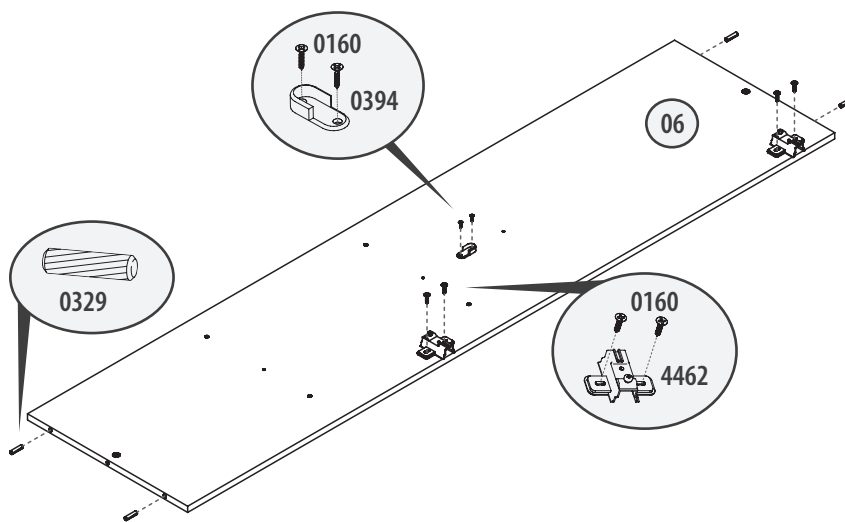

STEP 12


- Flip over **06** and place **0394** and screw 2x**0160** as shown.
- Place 2x**4462** and screw 2x**0160** through each.
- Hammer in 2x**0329** on top edge of **06** and 2x**0329** on bottom edge.

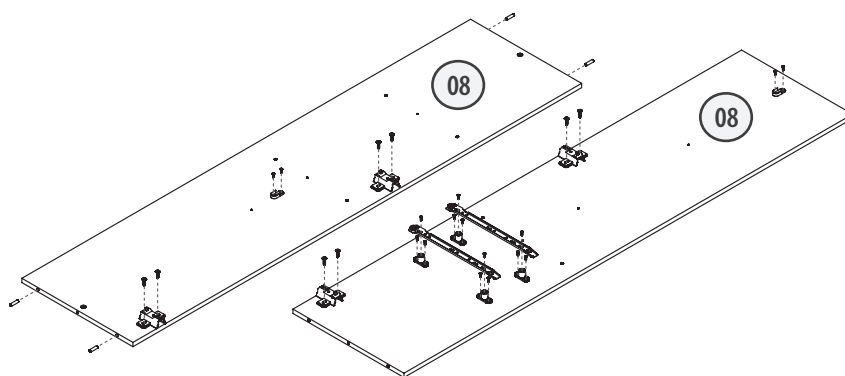

STEP 13


- Repeat Steps 10 and 11 on **08**.
- Flip **08** over and repeat step 12 on it.

Prepare Vertical Pieces

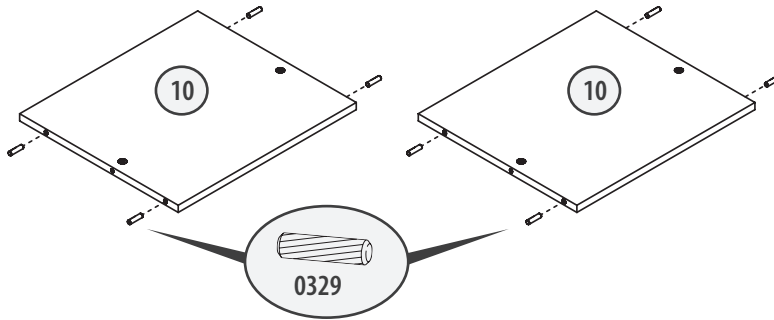


STEP 14

- Take 2x**10** and hammer 4x**0329** into each as shown.

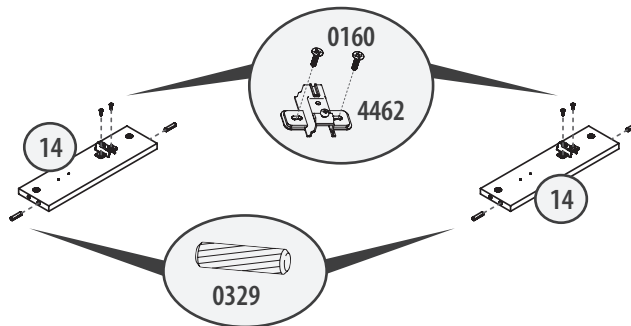

STEP 15


- Take 2x**14** and place on each **4462** and screw 2x**0160** through each.
- Hammer 2x**0329** into each as shown.

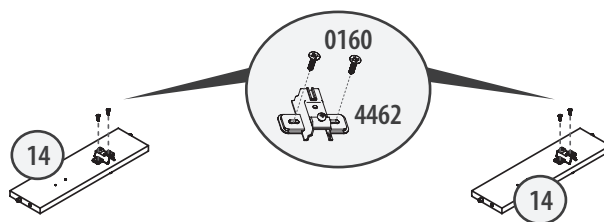

STEP 16


- Flip over 2x**14** and place on each **4462** and screw 2x**0160** through each.
- Note: Align the **4462** in this step exactly opposite the **4462** in Step 15.

Prepare Horizontal Pieces

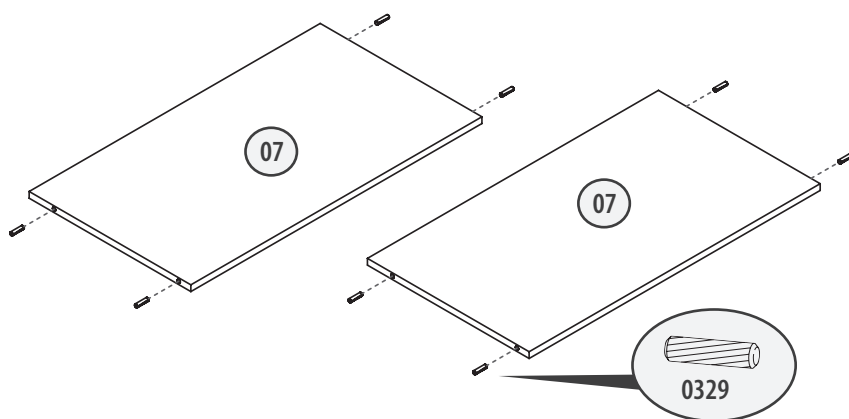


STEP 17

- Take 2x**07** and hammer 4x**0329** into each as shown.

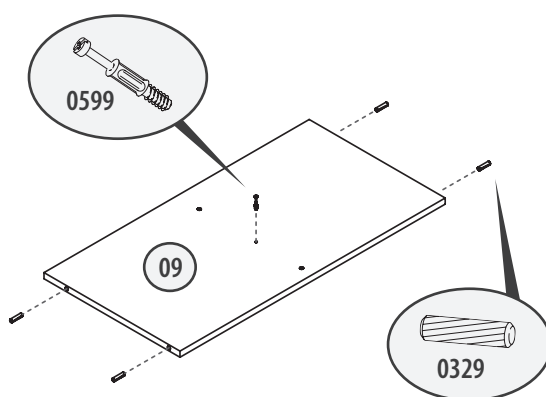

STEP 18


- Take **09** and hammer 4x**0329** as shown.
- Screw **0599** into middle of **09**.

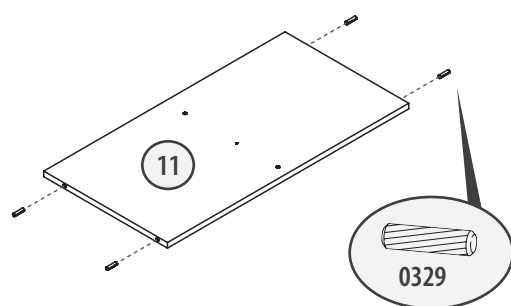

STEP 19


- Take **11** and hammer 4x**0329** as shown.

Prepare Horizontal Pieces

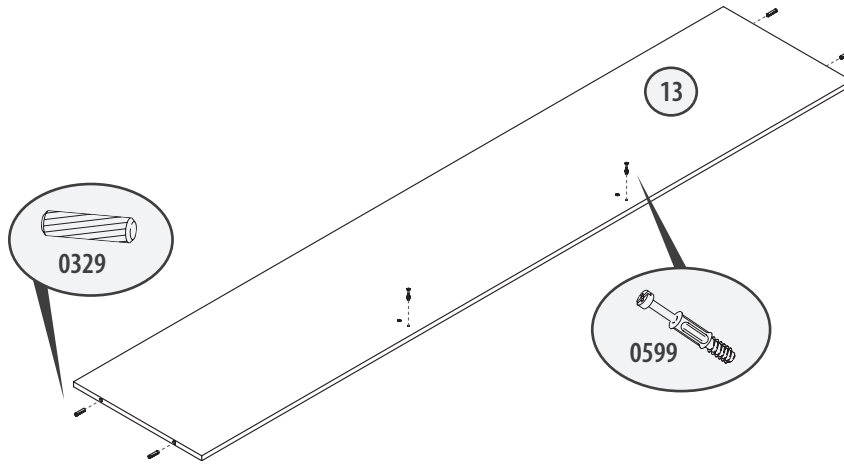


STEP 20

- Hammer in 2x**0329** on side edge of **13** and 2x**0329** on opposite side edge.
- Screw in 2x**0599** as shown.

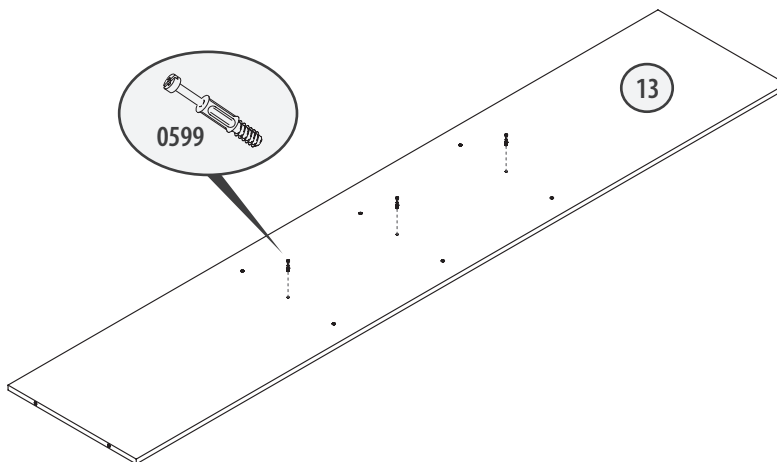

STEP 21


- Flip over **13** and screw in 3x**0599** as shown.

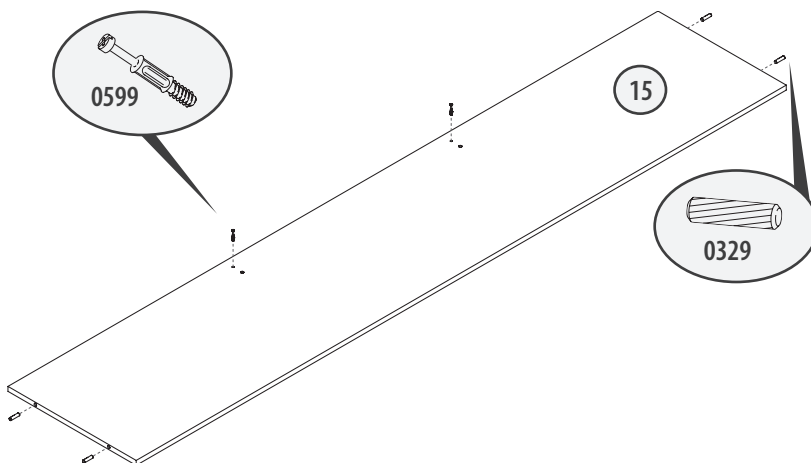

STEP 22


- Hammer in 2x**0329** on side edge of **15** and 2x**0329** on opposite side edge.
- Screw in 2x**0599** as shown.

Build

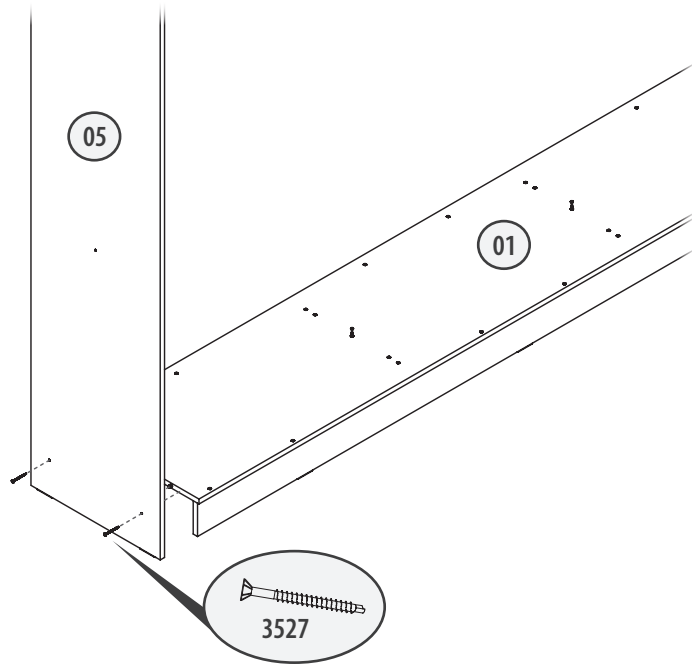

STEP 23


- Place **05** at edge of baseboard.
- Screw 2x**3527** into **05**, going through and into side edge of **01**.
- Note: When putting together two pieces, be sure to fit the **0599**(s) and/or **0329**(s) and/or **3529**(s) sticking out of one piece into the predrilled holes in the other.

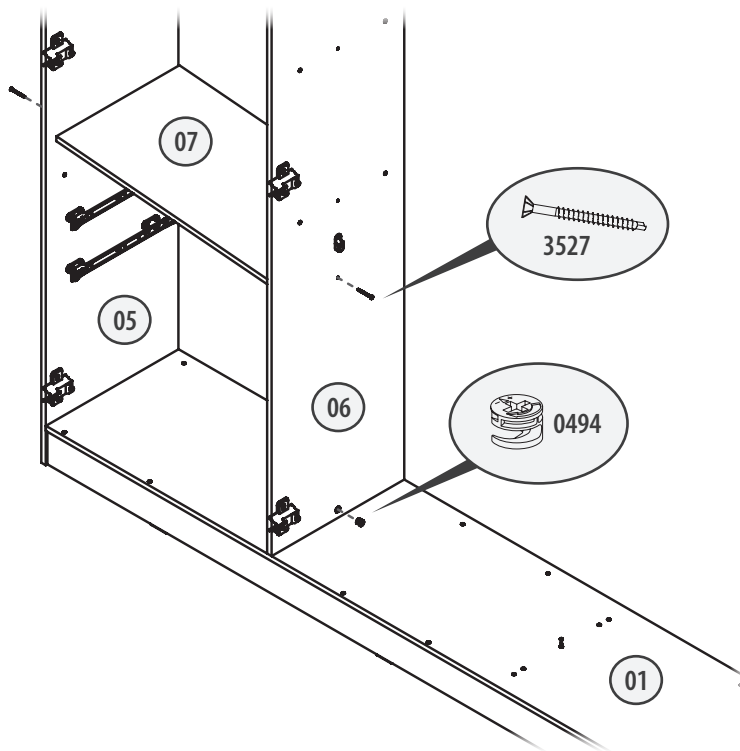

STEP 24


- Place **06** on baseboard as shown.
- Place **0494** with the arrow pointing down and screw it in.
- Screw **3527** into **05** and **06**, going through and into the two side edges of **07**.

Build

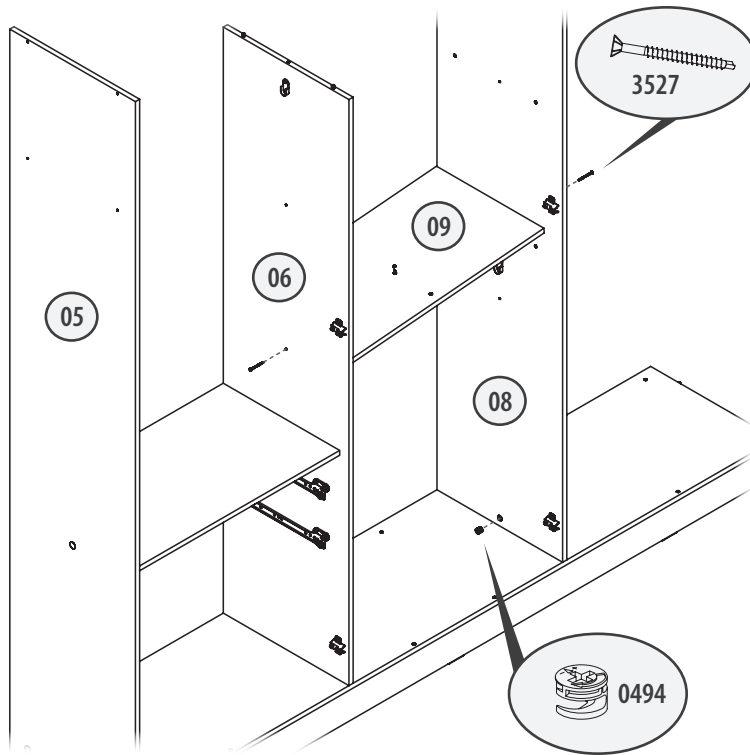

STEP 25


- Place **08** on baseboard with **0599** (sticking up out of **01**) fitting into the hole in its bottom edge.
- Place **0494** with the arrow pointing down and screw it in.
- Screw **3527** into **06** and **08**, going through and into the two side edges of **09**.

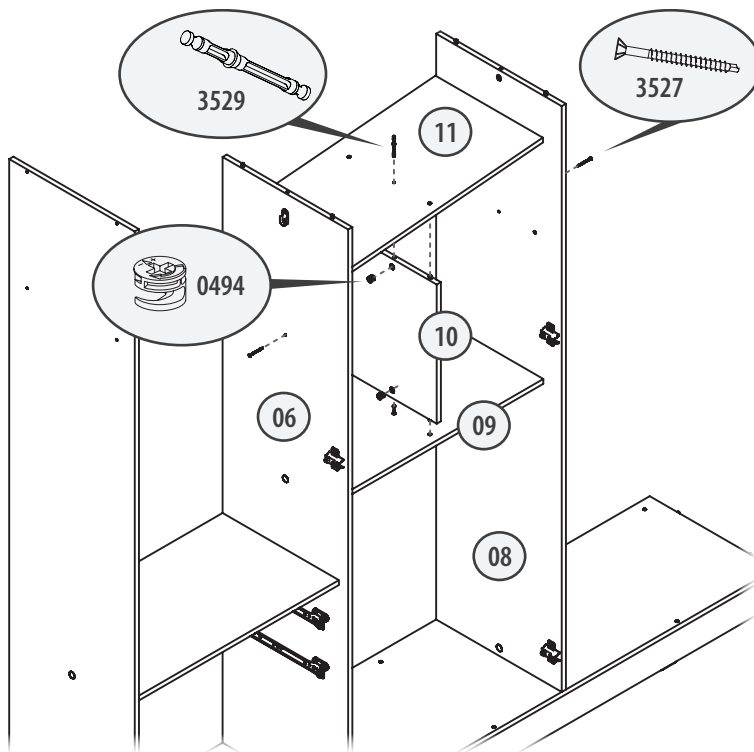

STEP 26


- Place **10** onto **09** as shown.
- Place **11** onto **10** as shown.
- Place long end of **3529** through hole in middle of **11** into top edge of **10**.
- Place **0494** with the arrow pointing to hole by the top and bottom of **10** and screw each in.
- Screw **3527** into **06** and **08**, going through and into the two side edges of **11**.

Build

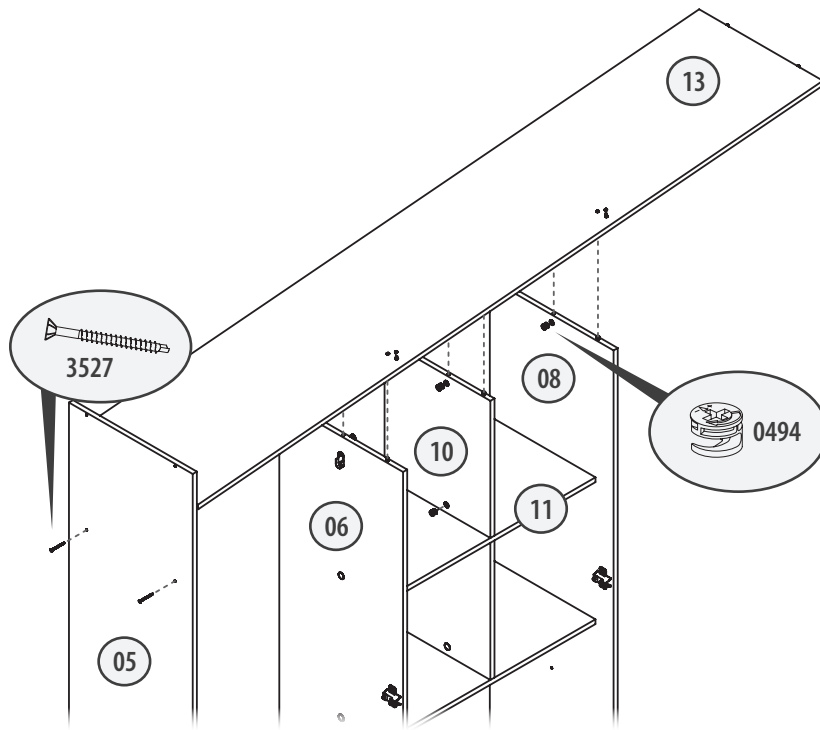

STEP 27


- Place other **10** on **11** as shown.
- Place **0494** with the arrow pointing down on the bottom of **10** and screw it in.
- Place **13** with the three **0599** facing down.
- Screw 2x**3527** through **05** into side edge of **13**.
- Place 3x**0494** at top of **06**, **08**, and **10** with the arrow pointing up, and screw them in.

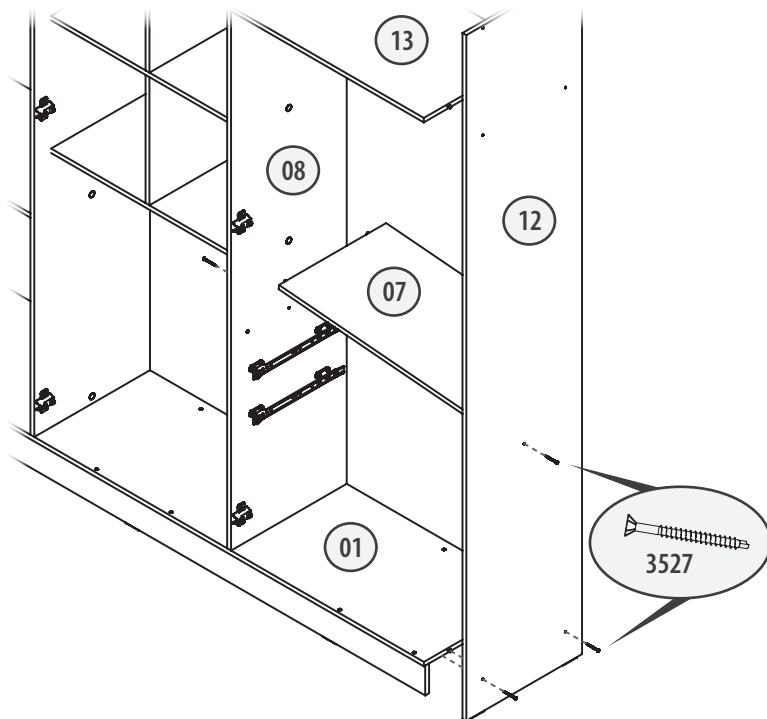

STEP 28

- Place **12** at edge of baseboard.
- Screw 2x**3527** into **12**, going through and into side edge of **01**.
- Screw **3527** into **08** and **12**, going through and into two side edges of **07**.


Build

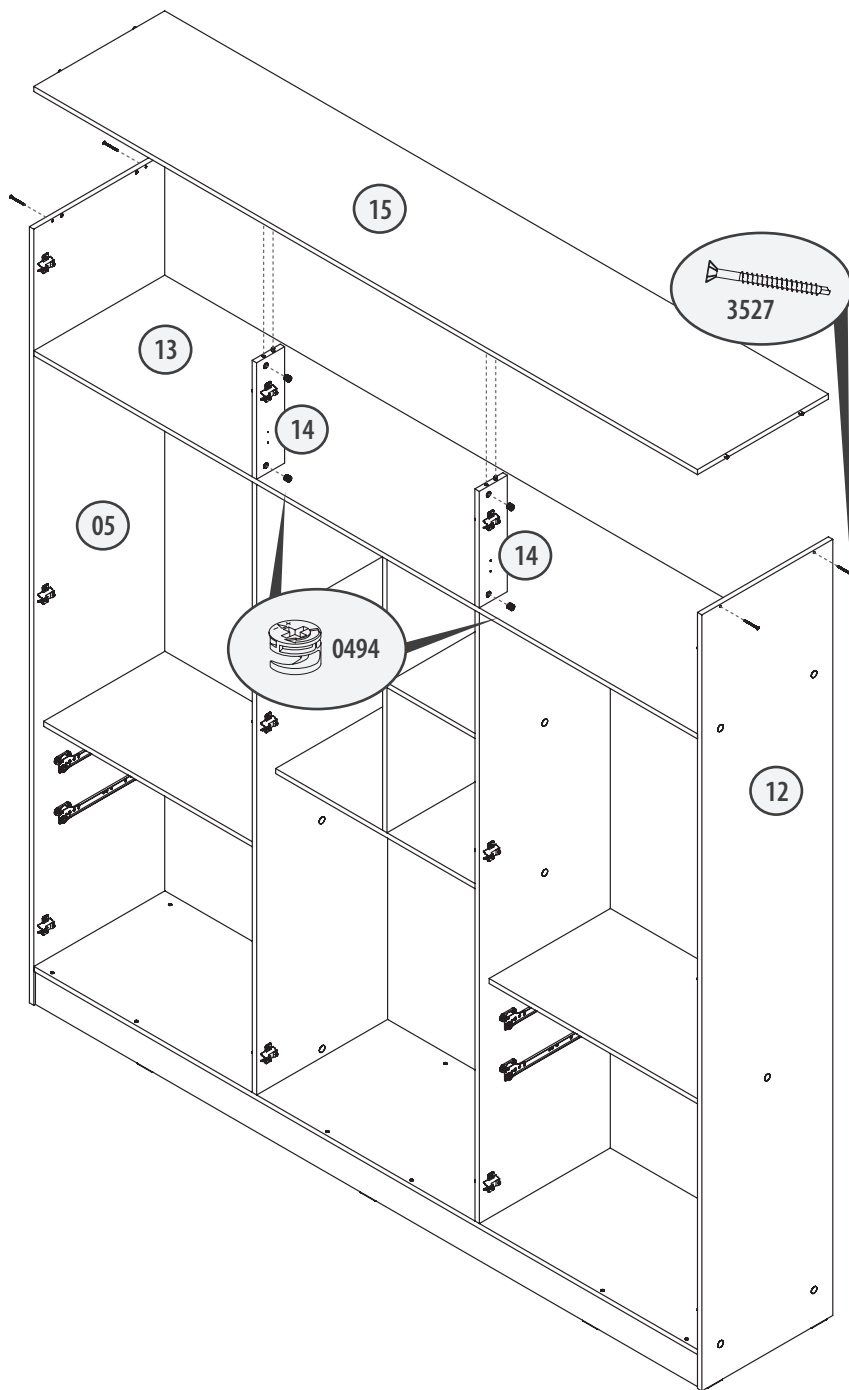

STEP 29

- Place 2x**14** on **13** as shown.
- Place **15** on the two **14**.
- Place **0494** with the arrow pointing toward the holes on the top and bottom of both **14** and screw each in.
- Screw 2x**3527** into **05** and 2x**3527** into **12**, going through and into the two side edges of **15**.


Back

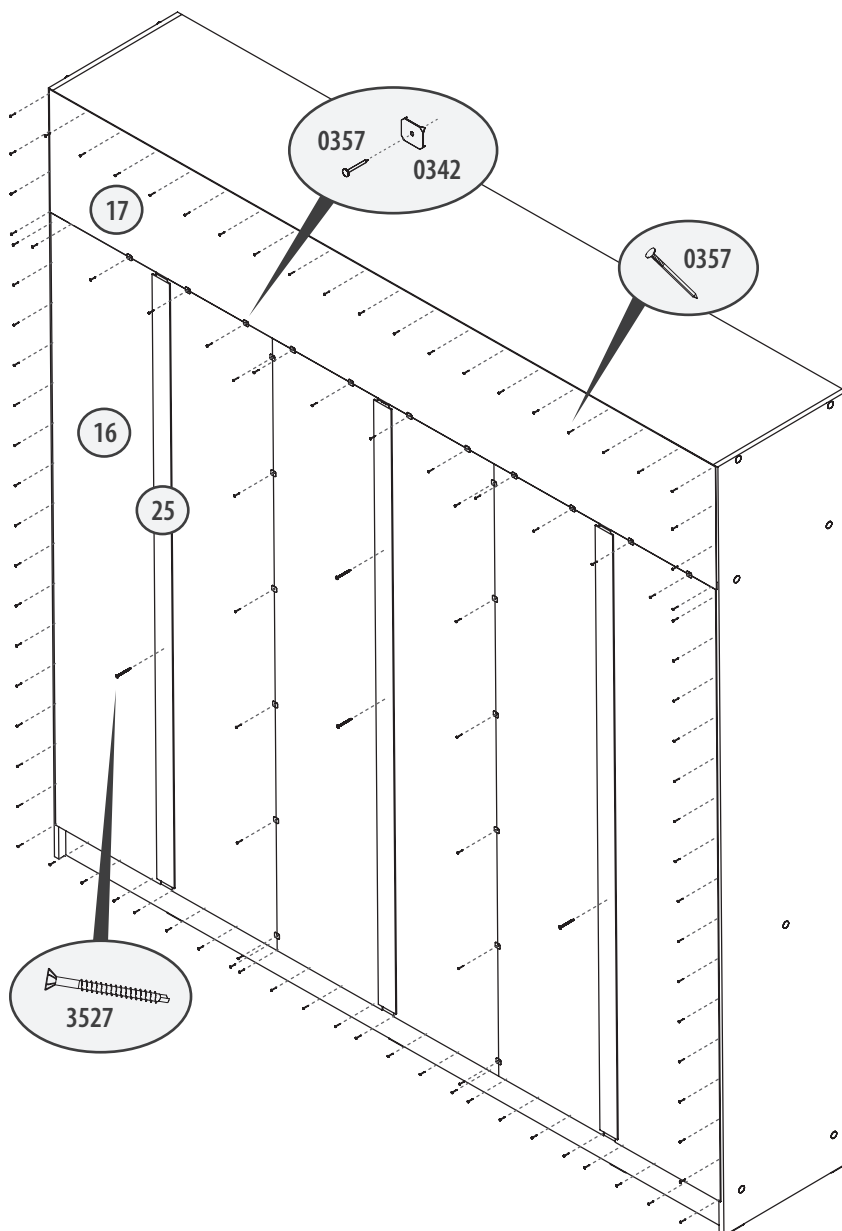

STEP 30


- Note: Make sure **0357** is hammered into the wood when assembling the back.
- Place **17** and hammer **0357** on top and side edges.
- Place a **16** on left of wardrobe and hammer **0357** on left and bottom edges.
- Slide a **25** to the right of the **16** and screw in **3527**.
- Add 2x**16** to the right of the **25**.
- Place **0342** over the two **16** and hammer **0357** through it.
- Slide another **25** to the right of the 2x**16** and screw in 2x**3527**.
- Add 2x**16** to the right of the **25**.
- Place **0342** over the two **16** and hammer **0357** through it.
- Slide another **25** to the right of the 2x**16** and screw in **3527**.
- Place **0342** on **17** and all the **16** and hammer **0357** through it.
- Hammer the rest of **0357** on all edges of backboards as shown.

Drawers

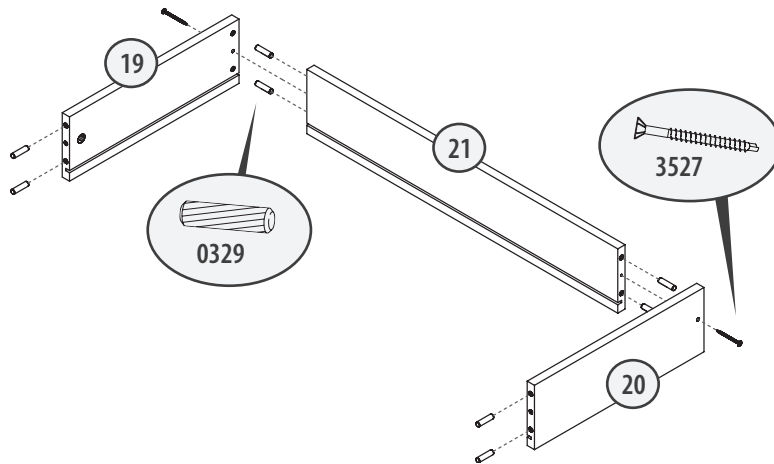


STEP 31

- Hammer 2x**0329** into **19**, **20**, and each side of **21**.
- Push them all together.
- Screw **3527** through **19** into **21** and screw **3527** through **20** into **21**.

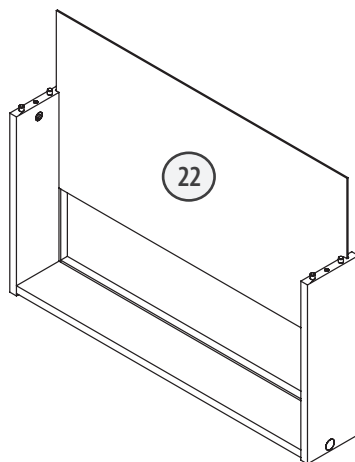

STEP 32


- Slide **22** into slot.

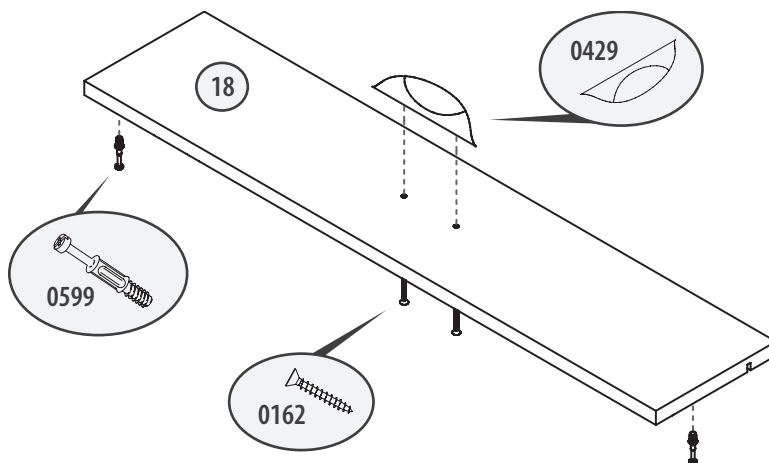

STEP 33


- Screw 2x**0599** into **18** as shown.
- Screw 2x**0162** through **18** into **0429**.

Drawers

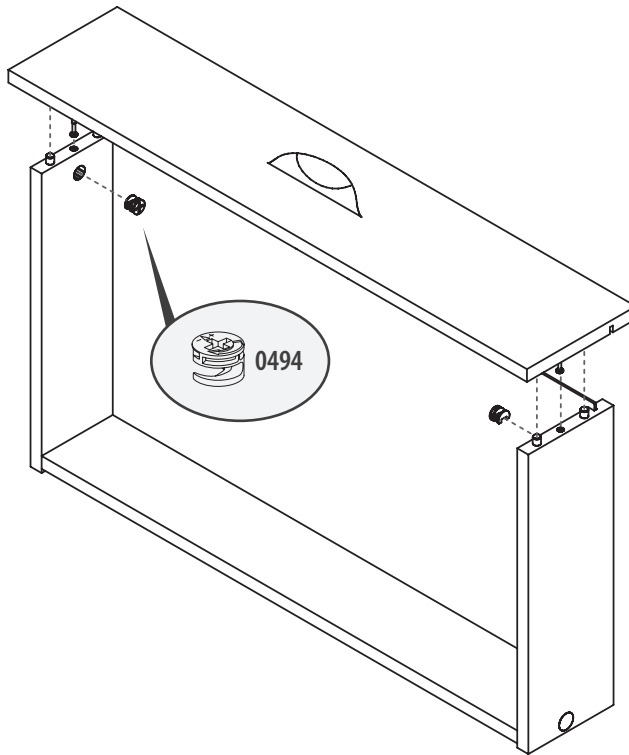

STEP 34


- Push drawer front onto drawer.
- Place **0494** in each hole with the arrow pointing to drawer front, and screw it in.

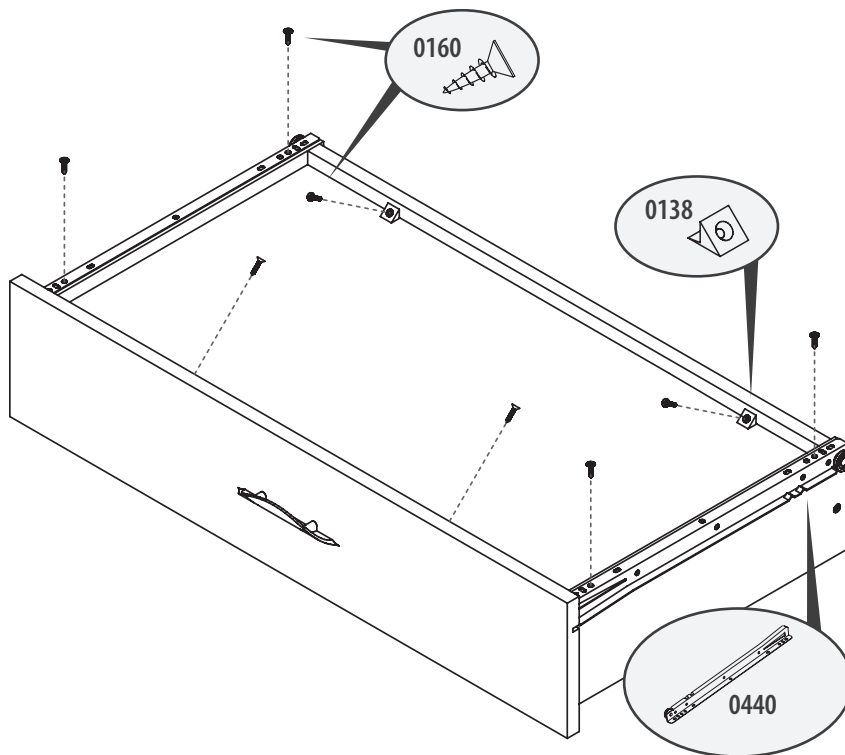

STEP 35

- Squeeze 4x**0138** on bottom of drawer as shown.
- Screw **0160** through each **0138**.
- Place **0440** on each side of bottom of drawer and screw 2x**0160** into each.
- Note: When building the drawers make sure to use the L-shaped **0440**.


Drawers

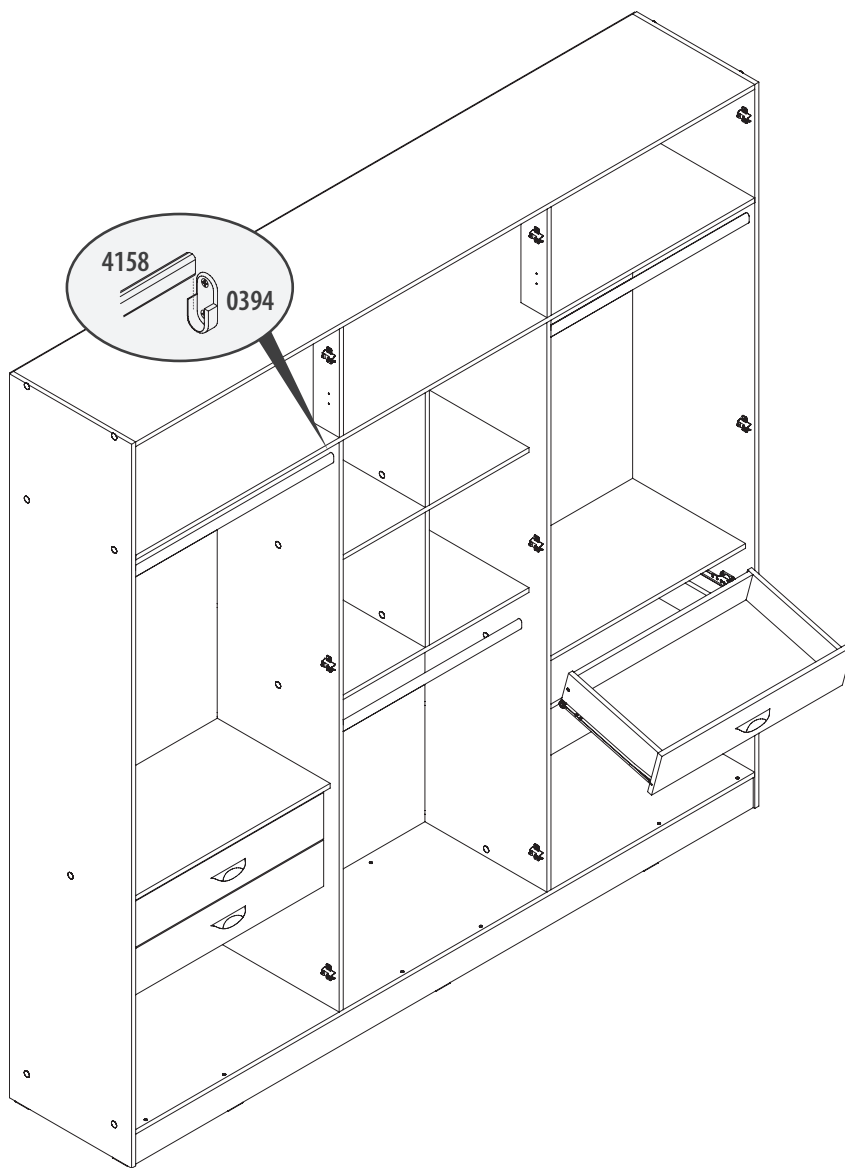

STEP 36


- Repeat drawer process 3 more times and slide them into wardrobe as shown.
- Take 3x**4158** and place them onto **0394**.

Doors

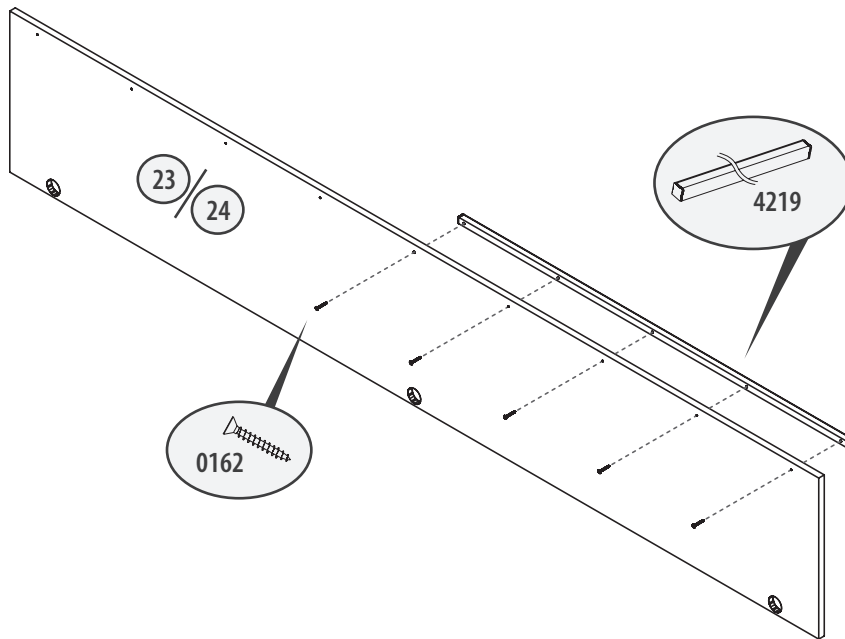

STEP 37


- Take door pieces **23** or **24**.
- Place **4219** on outside of door and screw 5x**0162** through holes.
- Note: Make three right doors by screwing one end of **4219** to the middle hole, and the other end to the far right hole. Make three left doors by screwing one end of **4219** to the middle hole, and the other end to the far left hole.

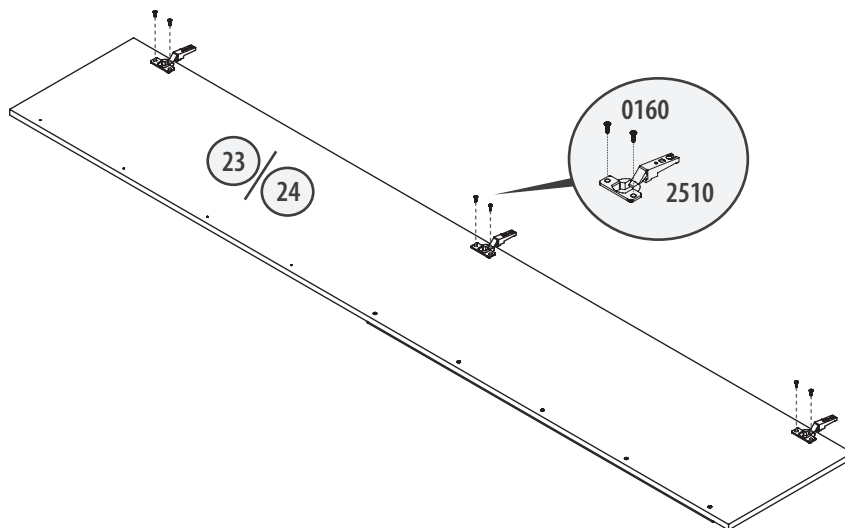

STEP 38

- Flip over door and place 3x**2510** and screw 2x**0160** through each.

Doors

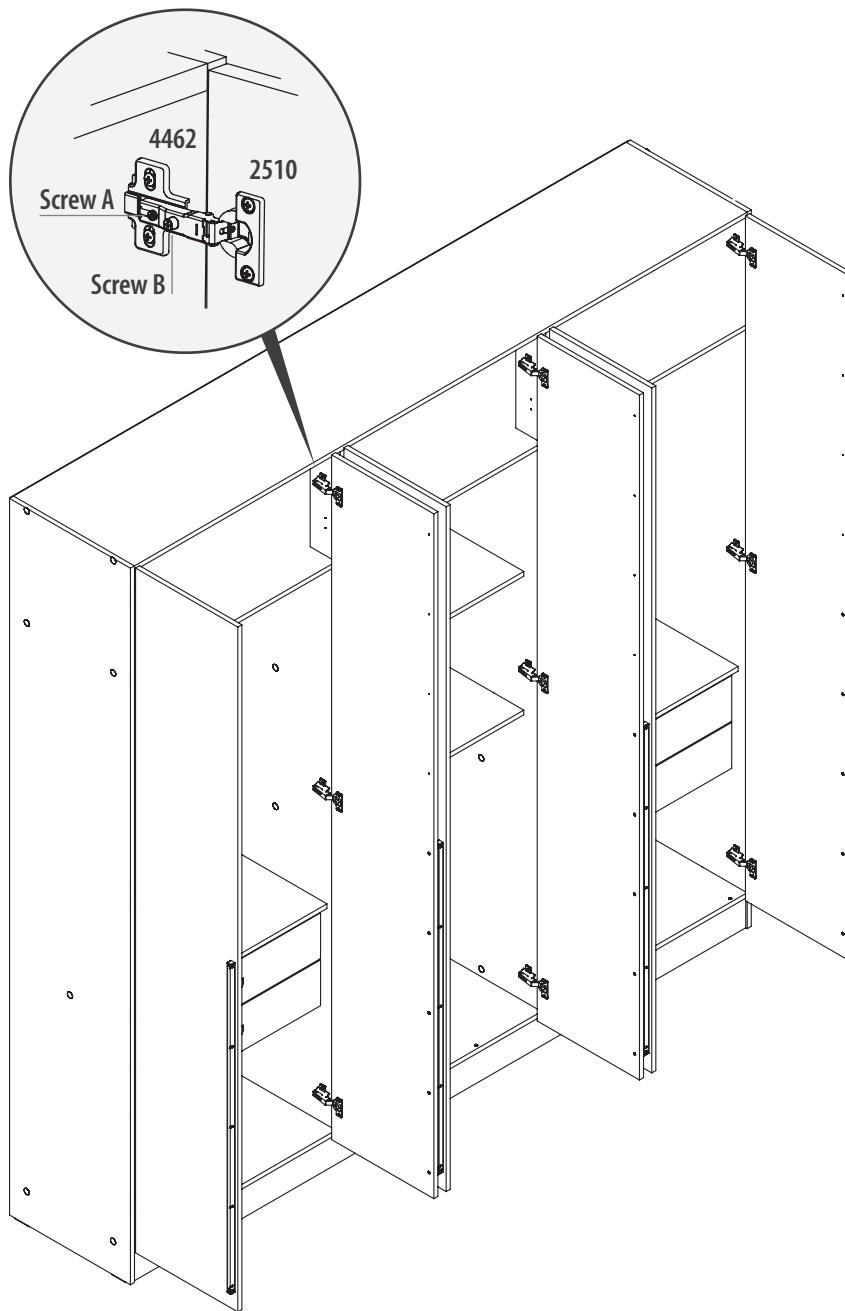

STEP 39

- Align **2510** in doors with **4462** in wardrobe sections and slide them in.
- Turn **Screw A** clockwise and **Screw B** counterclockwise to adjust hinges.



View our assembly video online

www.manhattancomfort.com

help@manhattancomfort.com

1888-230-2225