



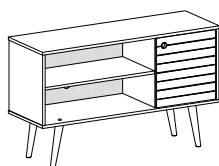

MANHATTAN  
COMFORT


888-230-2225  
[help@manhattancomfort.com](mailto:help@manhattancomfort.com)

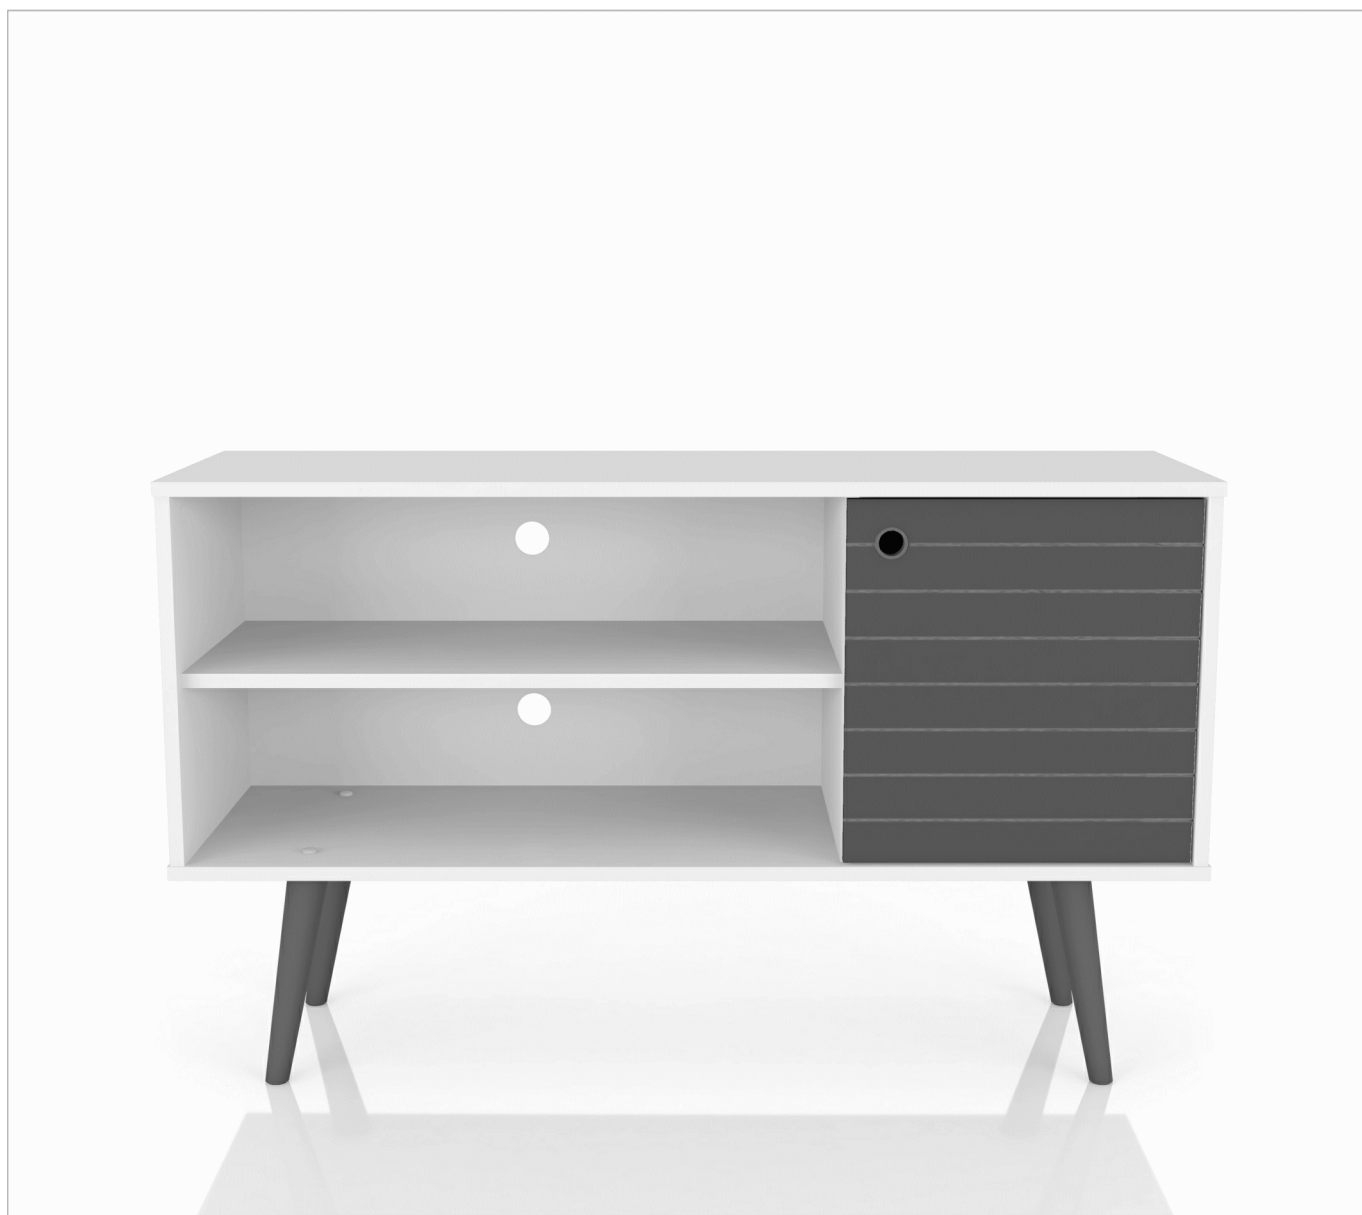


# Liberty TV Stand 42.52

Model # 212BMC6, 212BMC63, 212BMC64, 212BMC67, 212BMC69, 212BMC9,  
212BMC93, 212BMC94, 212BMC96, 212BMC97, 212BMC8


INCLUDED IN THE PACKAGE

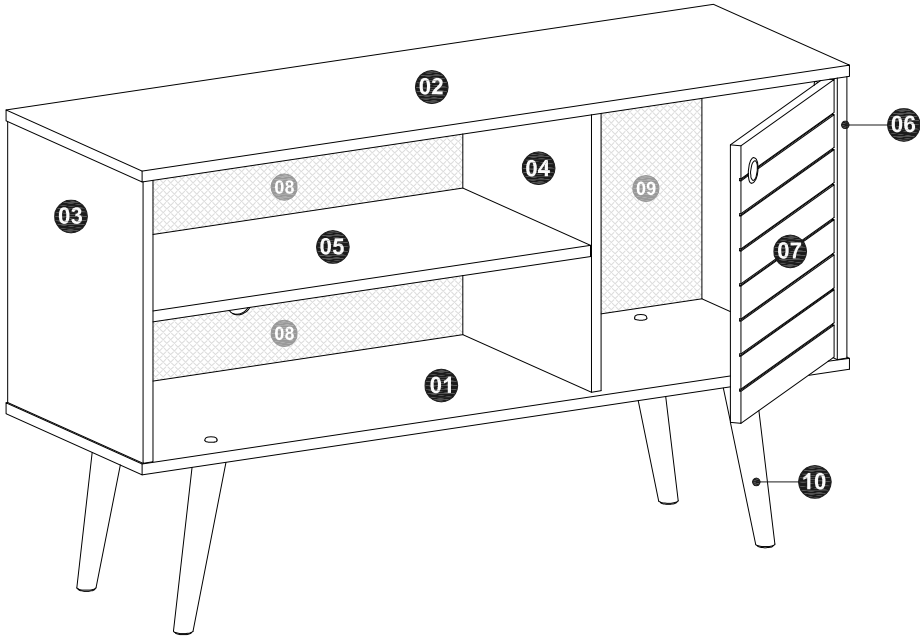

REAR VIEW

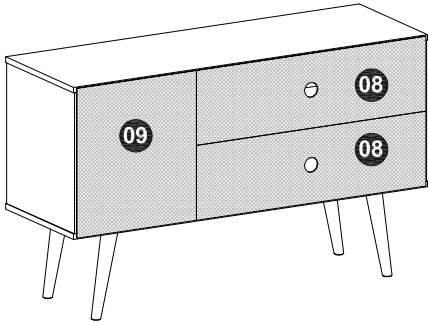



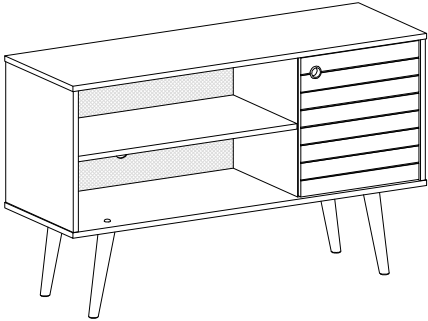

FRONT VIEW










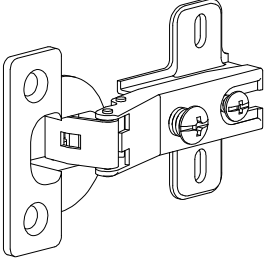





n.° ID	Parts Identification (Description)	Quantity
01	Base	1
02	Top Panel	1
03	Left Side Panel	1
04	Partition	1
05	Shelf	1
06	Right Side Panel	1
07	Door	1
08	Left Back Panel	2
09	Right Back Panel	1
10	Wood Feet	4


TOOLS NEEDED

  	
--	---

INCLUDED IN THE PACKAGE
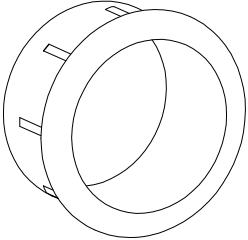
<b>A 4x</b> 	<b>B 4x</b> 	<b>C 16x</b> 
<b>D 6x</b> 	<b>E 8x</b> 	<b>F 8x</b> 
<b>G 6x</b> 	<b>H 11x</b> 	<b>I 40x</b> 
<b>J 2x</b> 	<b>K 8x</b> 	<b>L 4x</b> 
<b>M 1x</b> 		


## STEP 1

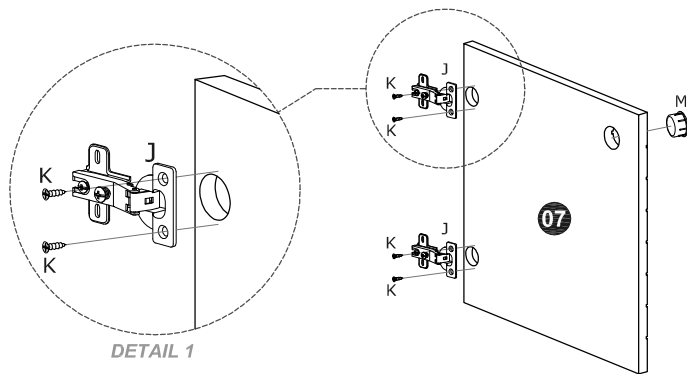

### Preparing the door:


- Fix the hinges (J) in the Door (07) with bolts (K).
- Insert the plastic handle ring (M) in the Door (07).

## STEP 2

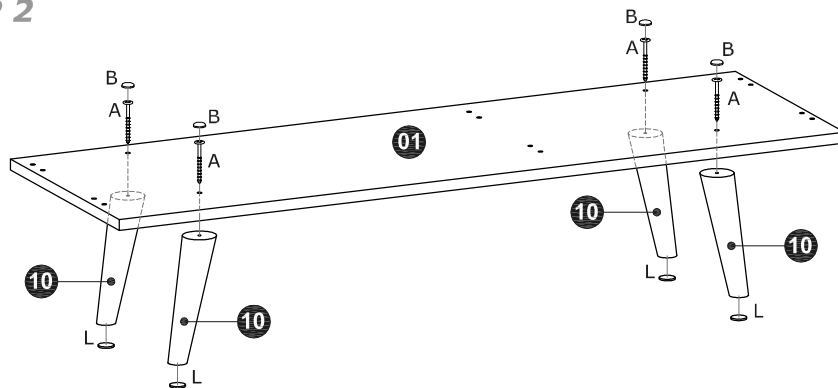


- Fix the feet (10) under the Base (01) with bolts (A).
- Apply the protective felt covers (L) on the bottom of the feet (10).
- Apply the plastic covers (B) on top of the bolts (A).

## STEP 3

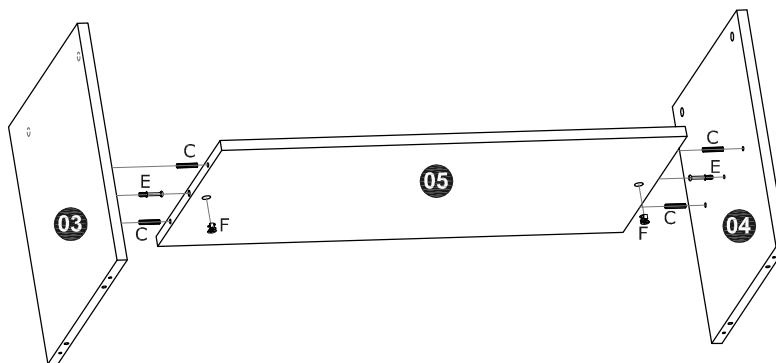


- Connect the Shelf (05) into the Left Side Panel (03) and Partition (04) using dowels (C) and the Minifix hardware (E + F).

## STEP 4

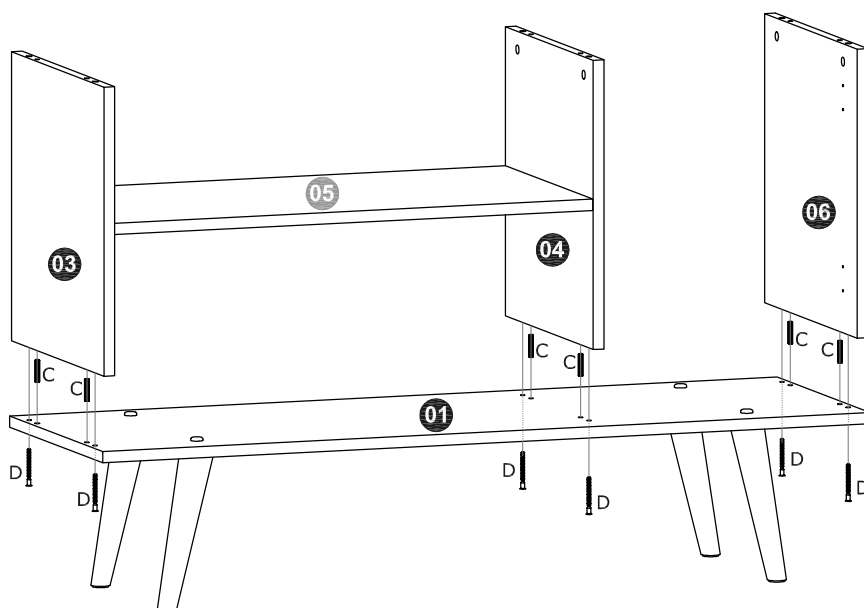


- Connect Side Panels (03) and (06) and Partition (04) into the Base (01) with dowels (C) and bolts (D).

## STEP 5

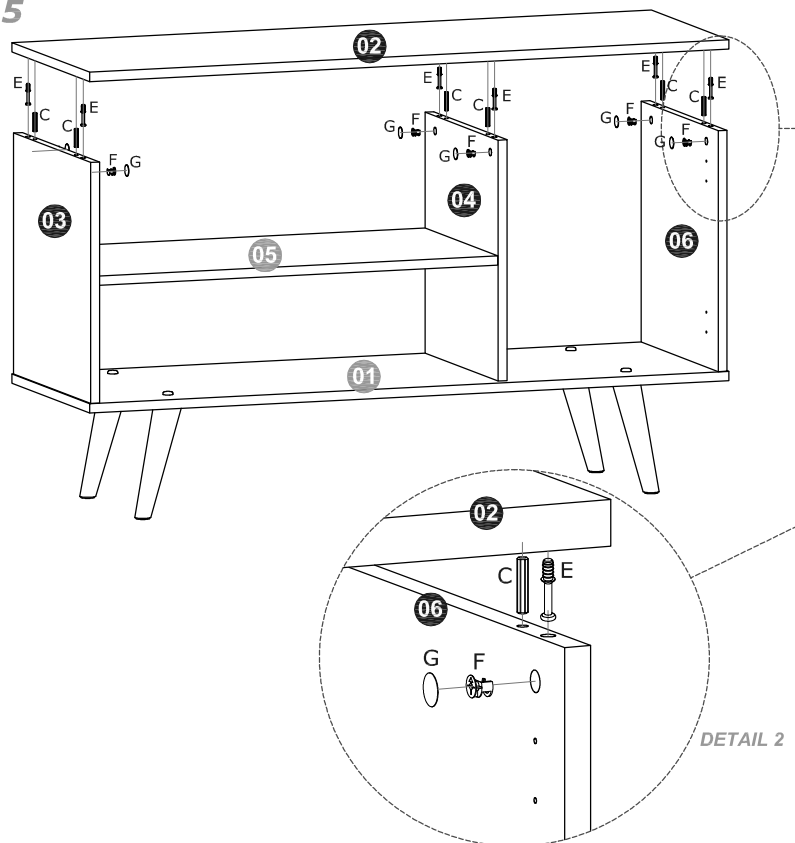


- Connect the Top Panel (02) onto Side Panels and Partitions (03), (04) and (06) using dowels (C) and the Minifix hardware (E + F).
- Apply adhesive covers (G) on the minifix hardware (F).

## STEP 6

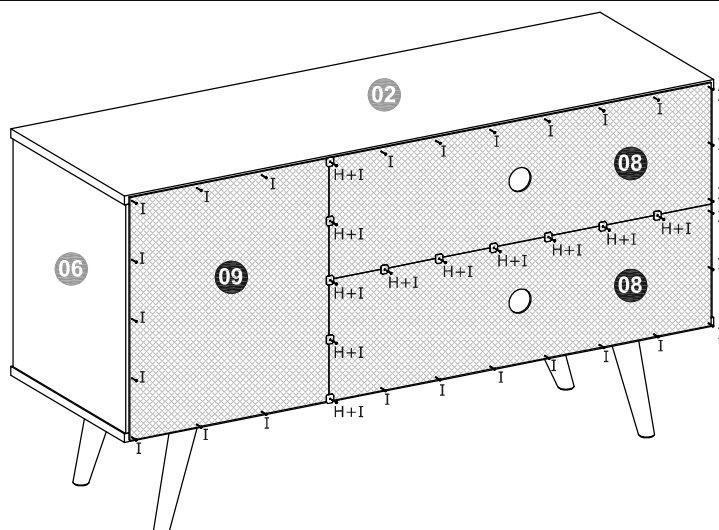

- Connect Back Panels (08) and (09) with nails (I). At the joining surfaces, use metallic plates (H) and nails (I).

## STEP 7

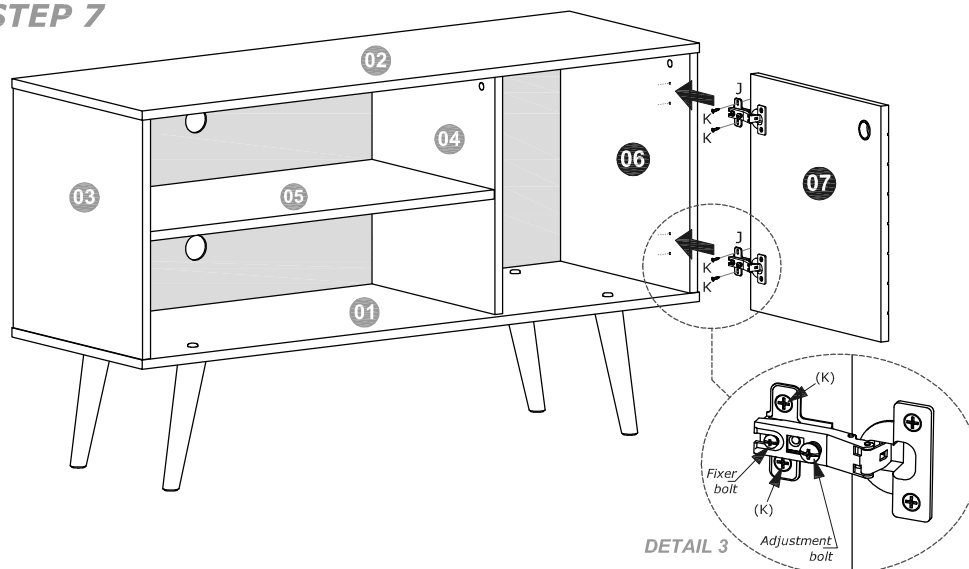

### Installing the Door (07):

- Fix the hinge connectors (J) of the Door (07) on the Right Side Panel (06) with bolts 3.5 x 14mm (K), taking the markings on the panel (06) as a reference for correct positioning.  
The hinge connector includes two bolts, shown in DETAIL 3. Use the fixer bolt and the adjustment bolt to tighten, adjust and align the door.

