




MANHATTAN
COMFORT


888-230-2225

help@manhattancomfort.com

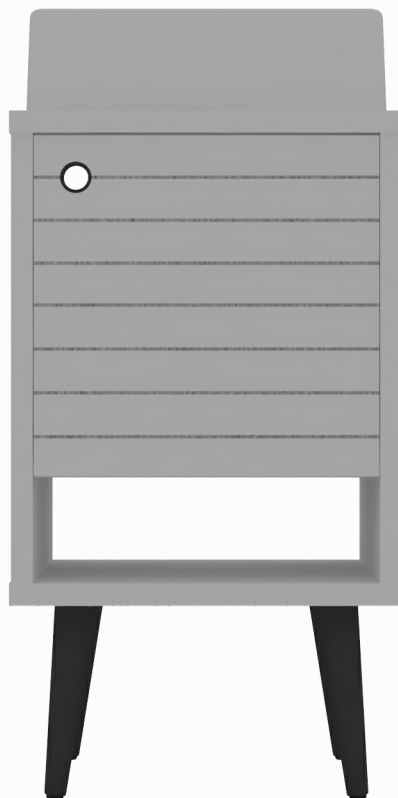

Liberty 17.71 Bathroom Vanity Sink

Model # 238BMC6, 238BMC63, 238BMC64, 238BMC69,
238BMC9, 238BMC93, 238BMC94, 238BMC96

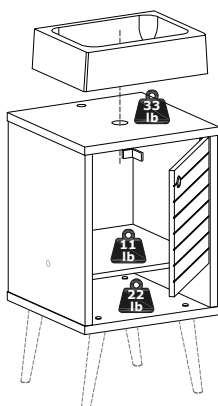


The indicated values consider static weights and evenly distributed over the parts.



Ed. 001, 2020/06 - Manhattan Comfort

INCLUDED IN THE PACKAGE

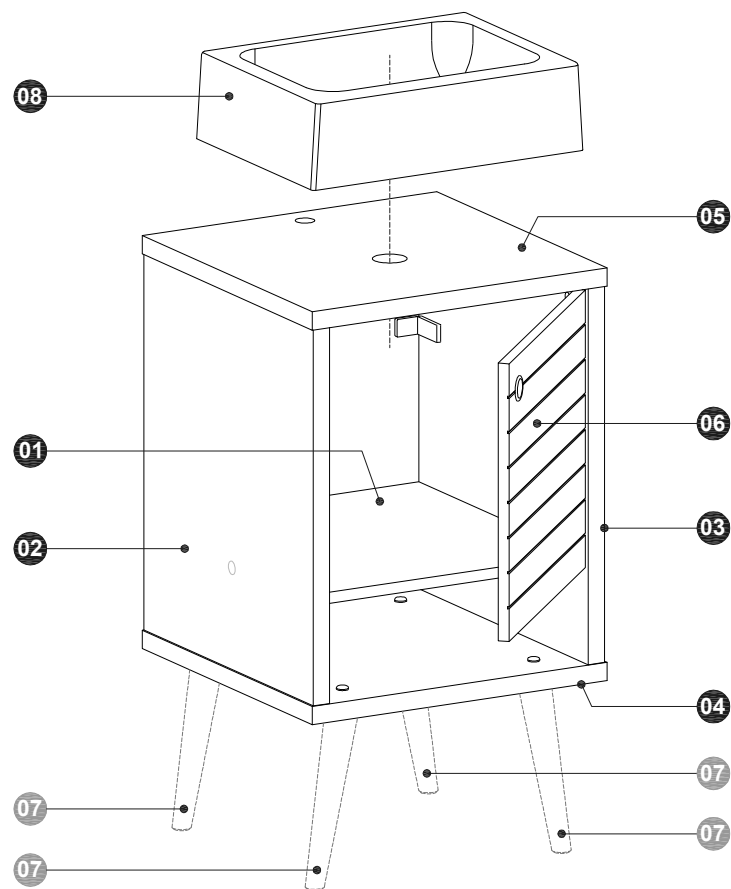

n.° ID	Parts Identification (Description)	Quantity
01	Shelf	1
02	Left Side Panel	1
03	Right Side Panel	1
04	Base	1
05	Top Panel	1
06	Door	1
07	Wood Feet	4
08	Countertop washbasin	1

TOOLS NEEDED

Flat head and phillips screwdriver.



Simple hammer.



Level indicator.



Electric drill and electric screwdriver with drill bit Ø1/2 inch and phillips tips.




⚠ IMPORTANT! Two people are recommended to assemble and install this product.
The cabinet can be installed with the feet or without the feet, suspended and fixed to the wall (check the conditions of the wall to anchor the cabinet).

INCLUDED IN THE HARDWARE


A 12x




B 6x

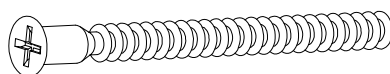


C 4x

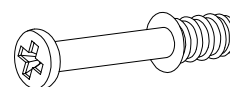


D 4x

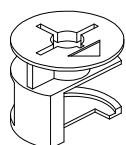


E 10x

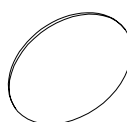

F 2x

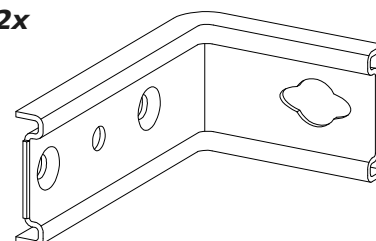


G 2x

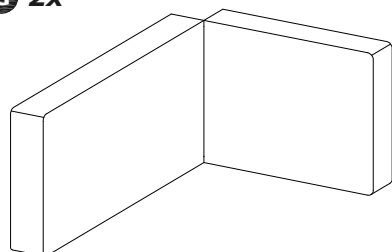

H 16x



I 4x

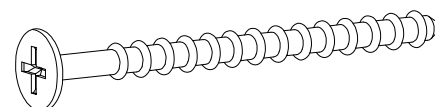


J 4x




K 4x




L 2x

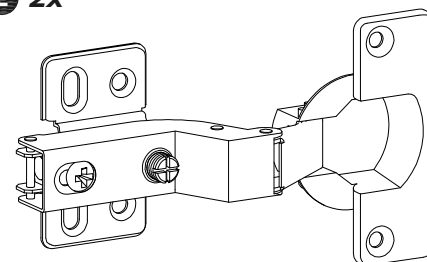

M 2x

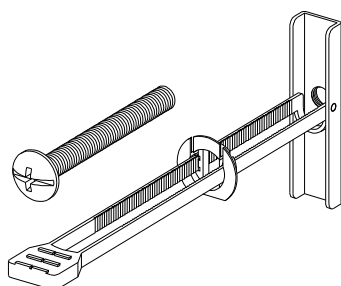


N 1x

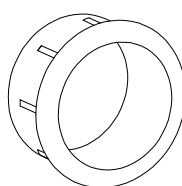

STEP 1


Preparing the Side Panels (02) and (03):

- Fix the metal brackets (F) with bolts (H) in the Left Side Panel (02) and in the Right Side Panel (03), as shown in the DETAIL 1.

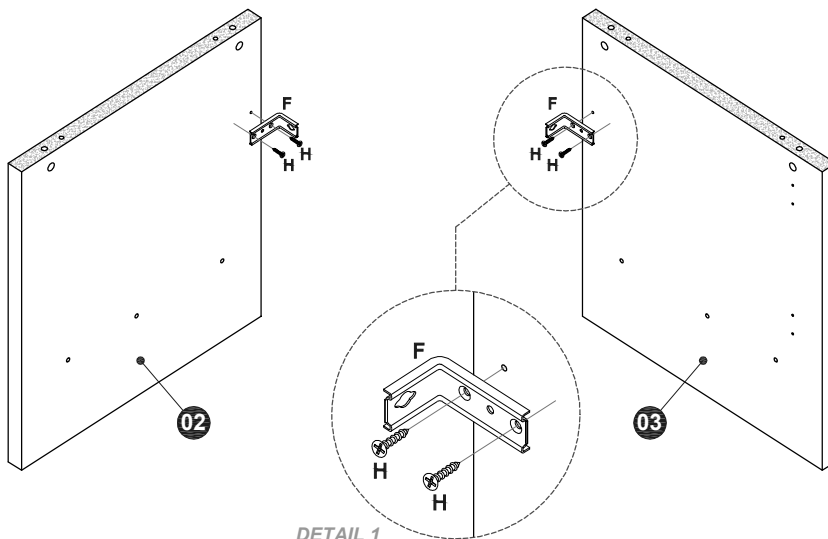

STEP 2


- Connect the Left Side Panel (02) and the Right Side Panel (03) on the Shelf (01) with dowels (A) and bolts (B).
- At the end of the fixing, apply the adhesive covers (E) on the bolts (B).

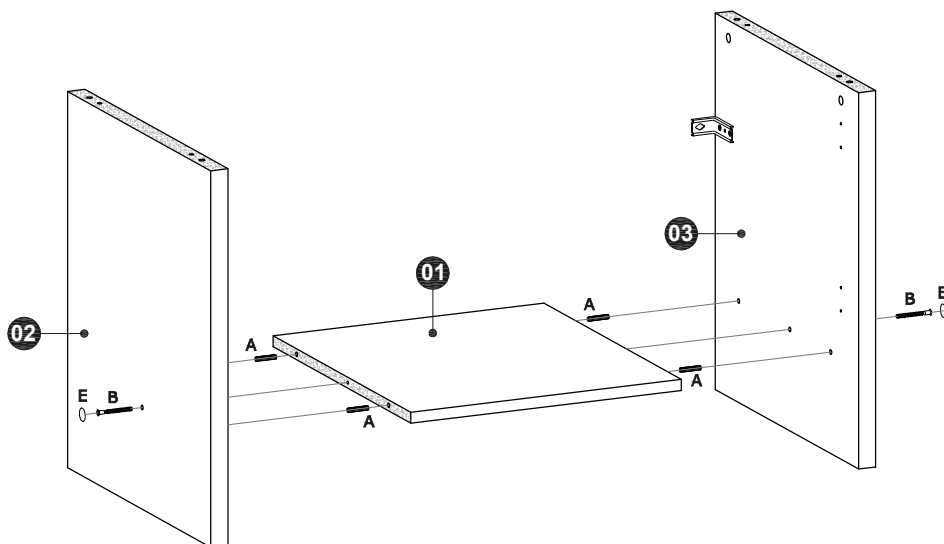

To assemble the cabinet with the feet, see STEP 3.
To assemble the cabinet without the feet, go to STEP 4.


STEP 3

- Fix the wood feet (07) under the Base (04) with the bolts (I).
- Apply the plastic covers (J) on the bolts (I).
- Apply the adhesive protective felts (K) under the feet (07).

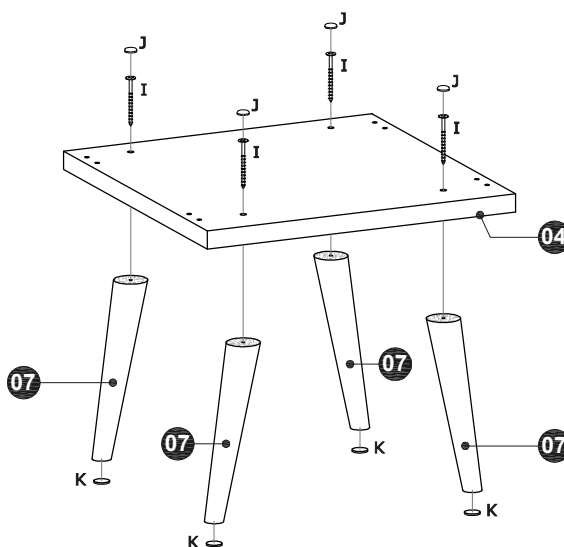

STEP 4

- Connect the Top Panel (05) onto the Side Panels (02) and (03) using dowels (A) and the cam lock hardware (C + D). At the end of the fixation, apply the adhesive covers (E) over the holes of the hardware (D).
- Connect the Side Panels (02) and (03) on the Base (04) with dowels (A) and bolts (B).
- If you have chosen to install the cabinet without the feet, apply the adhesive covers (E) over the four unused holes to fix the feet in the Base (04).

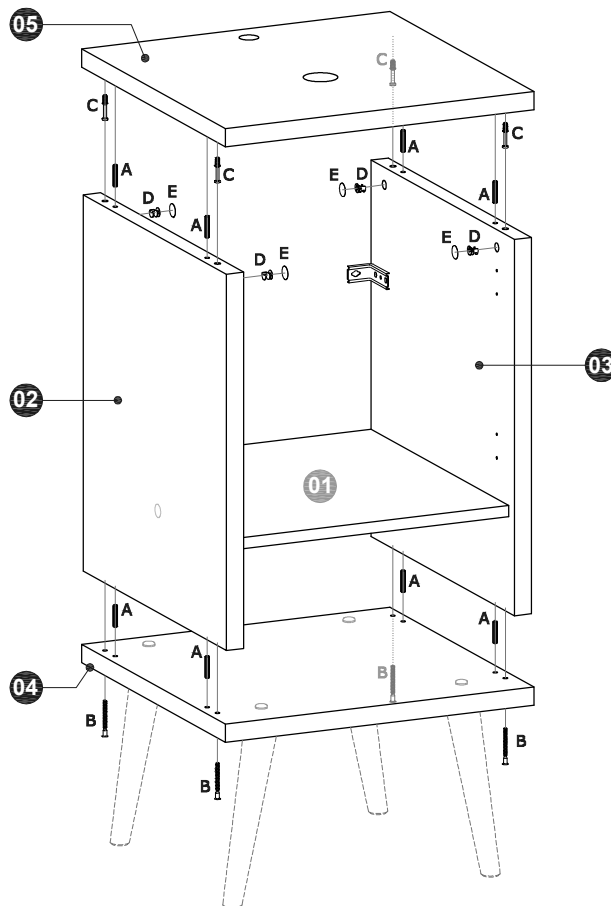



STEP 5

ATTENTION!

Before installing the cabinet, check the conditions of the wall to anchor the furniture and the existence and position of hydraulic, electrical and gas pipes, avoiding damage to these structures when drilling the holes for the bushings and bolts. The bushings (M) supplied with the product are for hollow walls or dry wall type. Check the type of the wall on which the installation will be made and, if necessary, look for more suitable bushings or devices. To mark the position and fix the cabinet on the wall, check the level of the entire assembly and the position of the feet in relation to the floor.

- Place the already assembled cabinet on the desired site for installation and mark the position of the holes on the wall to fixation through the two metal brackets (F), as shown in the drawing and using the brackets themselves as reference.
- With electric drill and drill bit $\varnothing 1/2"$, make the two holes in the wall.
- Apply the bushings (M) into the two holes in the wall.
- Reposition the cabinet in the place and apply the bolts $1/4 \times 2.1/4"$ as shown in the drawing, for fixing the brackets (F) at the bushings (M) already applied on the wall.
- At the end of the fixation, apply the plastic covers (G) over the metal brackets (F).
- Install the washbasin (08) on the cabinet.
Install the siphon* and tap*.

FRONT VIEW

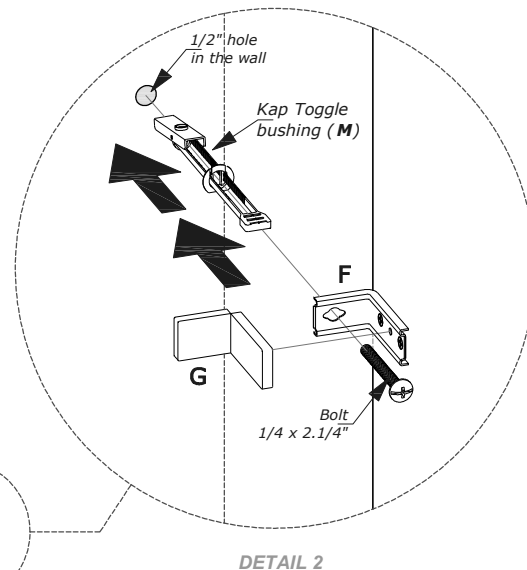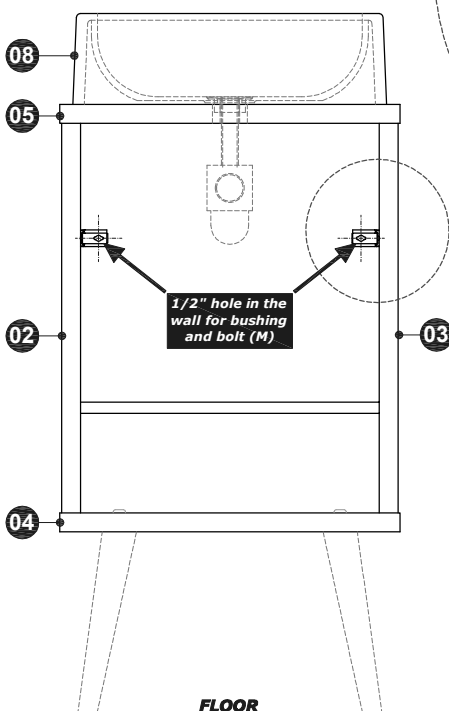


DETAIL 2

*Siphon and tap are items not supplied with the product.

STEP 6

Preparing the Door (06):

- Fix the hinges (L) with bolts (H) in the Door (06), as shown in the DETAIL 3.
- Insert the plastic ring (N) in the Door (06).

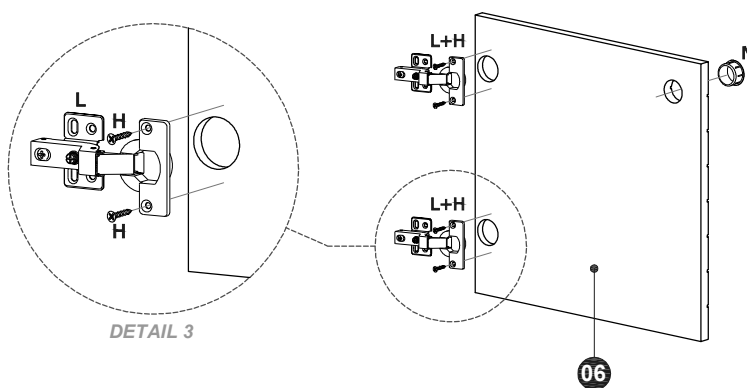

STEP 7

Installing the Door (06):

- Fix the hinges connectors (L) of the Door (06) on the Right Side Panel (03) with bolts (H), taking the markings on the Side Panel (03) as a reference for correct positioning.
- The hinge and connector includes two more bolts, shown in DETAIL 4. Use these **fixer and adjustment bolts** to tighten, adjust and align the door.

