










Roots Rack Kitchen Cart




CF3008-NA

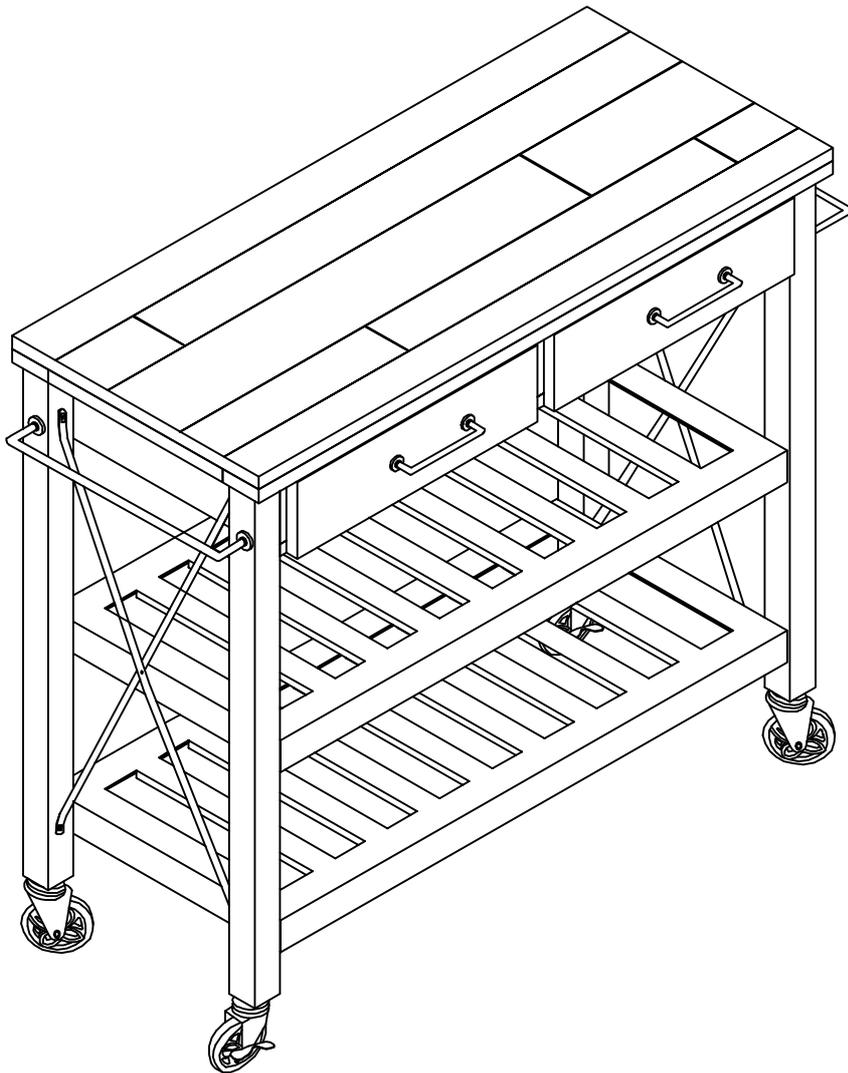



## PART LIST

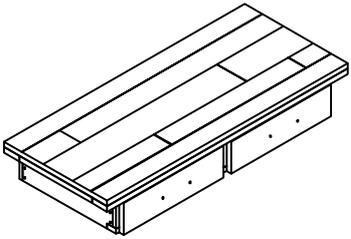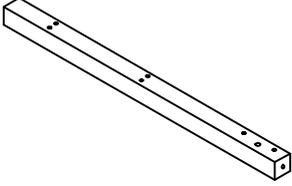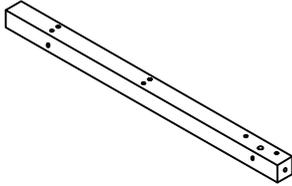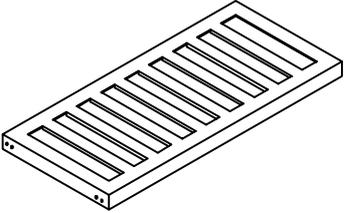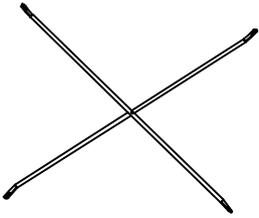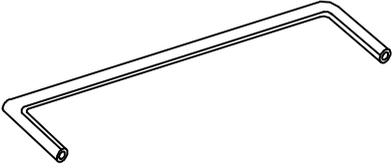					
Top		Left diagonal Leg		Right diagonal Leg	
A	1pc	B	2pcs	C	2pcs
					
Shelf		Rod(M8mm)		Towel Bar	
D1/D2	2pcs	E	2pcs	F	2pcs
					
Locking Caster		Caster			
G	2pcs	H	2pcs		


## HARDWARE LIST

					
Long Bolt(M6*38mm)		Short Bolt(M6*28mm)		Flat Washer(M6mm)	
I	4pcs	J	28pcs	K	16pcs
					
Spring Washer(M6mm)		Drawer handle		Handle Washer(M6mm)	
L	16pcs	M	2pcs	N	8pcs
					
Wood Dowel(M8mm)		Wrench(M17mm)		Allen Key(M4mm)	
O	12pcs	P	1pc	Q	1pc



**Step 1.** Attach Towel Bar(F) & Handle Washer(N) to Legs (B&C) using Long Bolts (I) & Allen Key (Q) .  
Repeat this step for the remaining two legs .

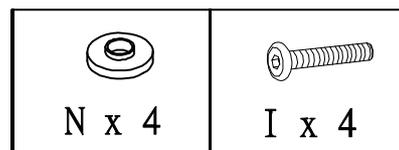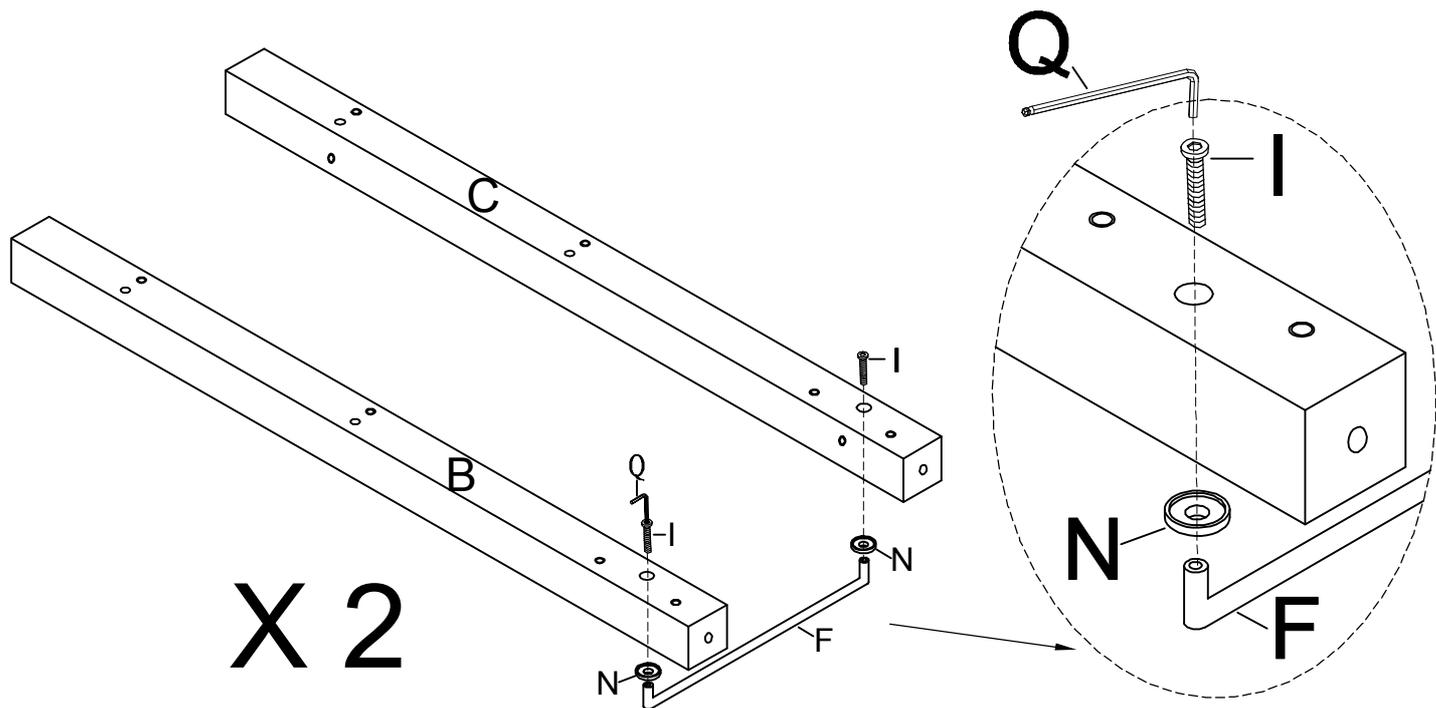

**Step 2.** Place Top (A) face down on flat surface ,press up and down the slide joint , to pull out the drawer .


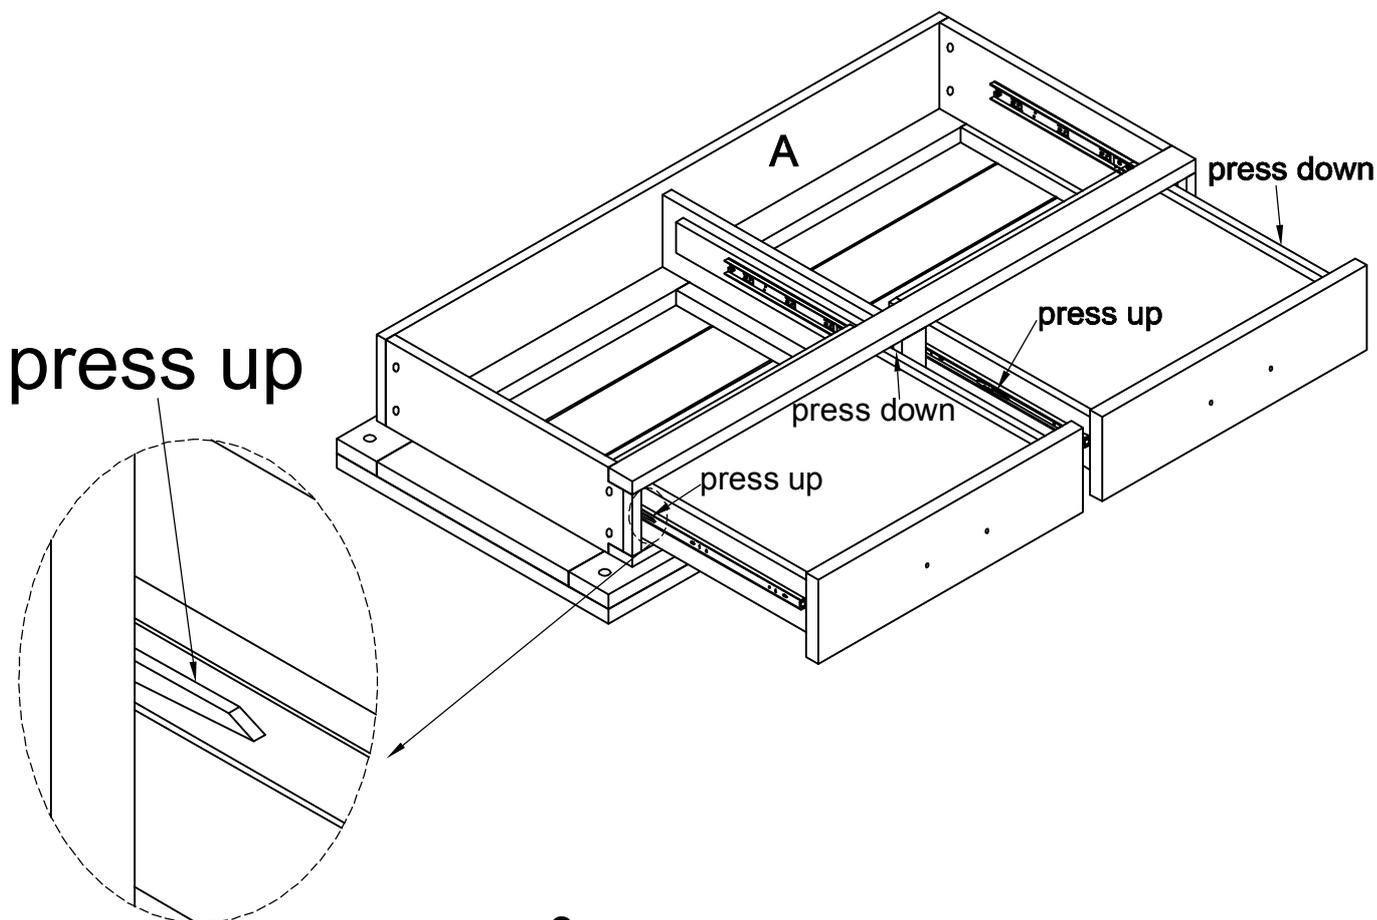


**Step 3.** Set legs (B&C) into place on Top (A) using Wood Dowels (O) .

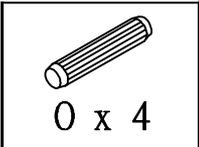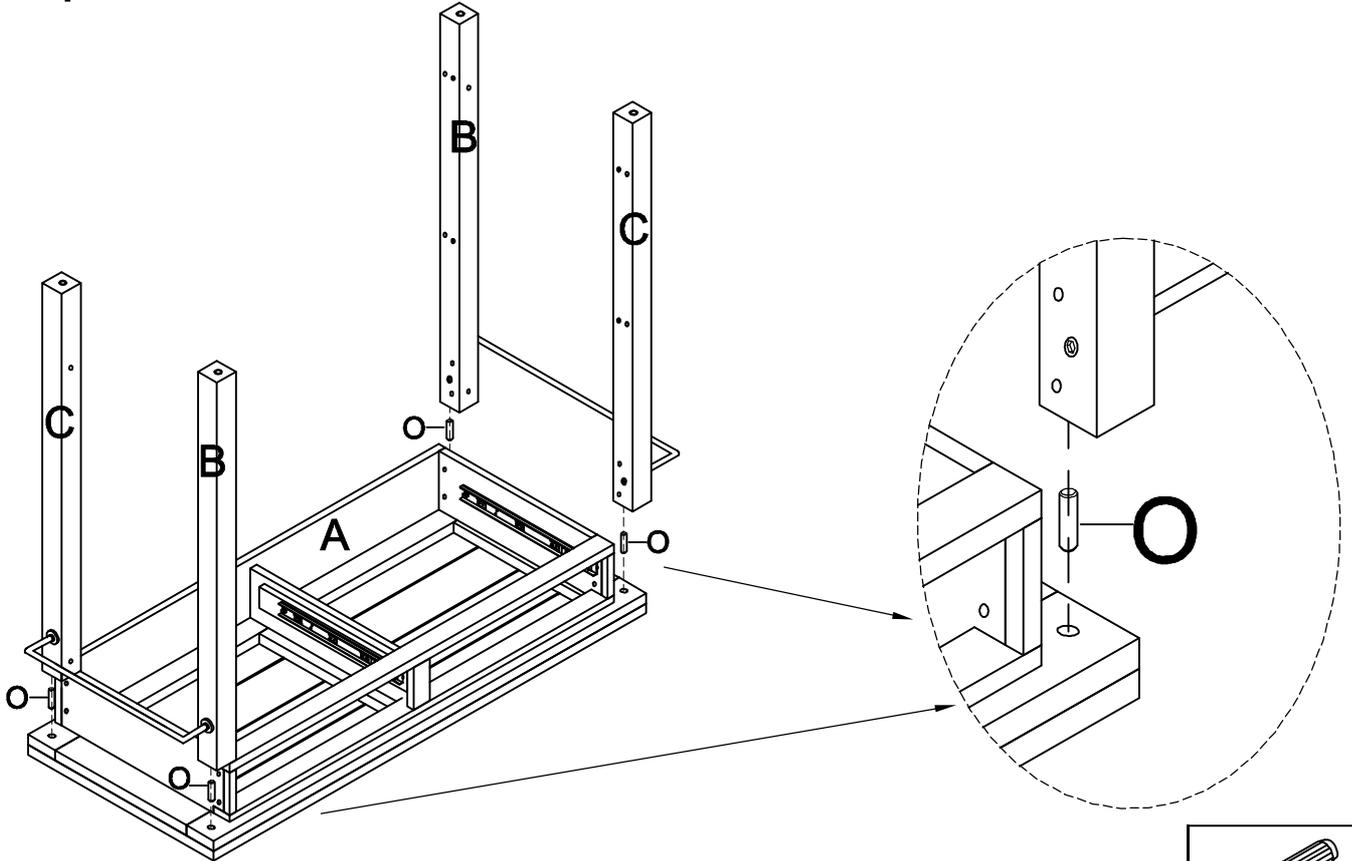

**Step 4.** Attach Legs (B&C) to Top (A) using Flat Washers (K) ,Spring Washers (L) ,Short Bolt (J) and Allen Key (Q).

**NOTE: Do not fully tighten all bolts in this step .**

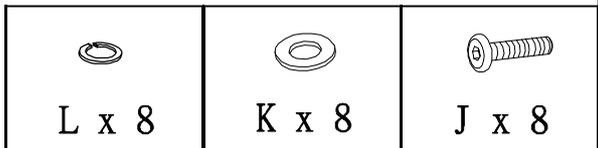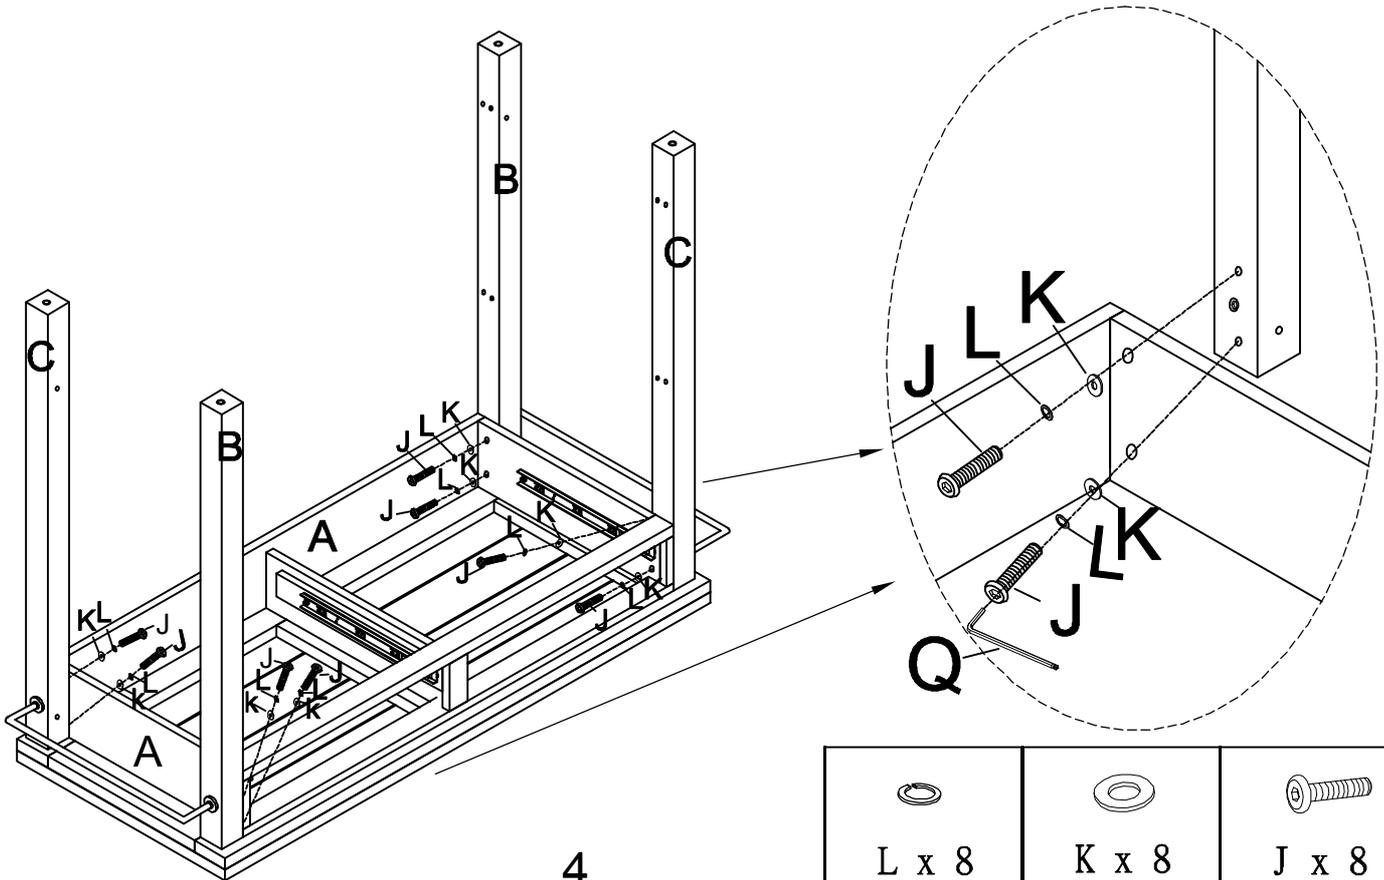


**Step 5.** Align Shelf (D1) with Legs (B&C) as shown below. Insert four wood dowels through the outer holes in the shelf (D1) into the Legs (B&C) to help hold the shelf in place. Install Flat Washers (K), Spring Washers (L) and Short Bolt (J) through the inner holes in the shelf into the Legs (B&C). Tighten with Allen Key (Q).


**NOTE1: Do not fully tighten bolts at this time.**

Repeat this for Shelf (D2) .


**NOTE2: .Once both shelves are in place, fully tighten all bolts. Once tight, remove wood dowels.**

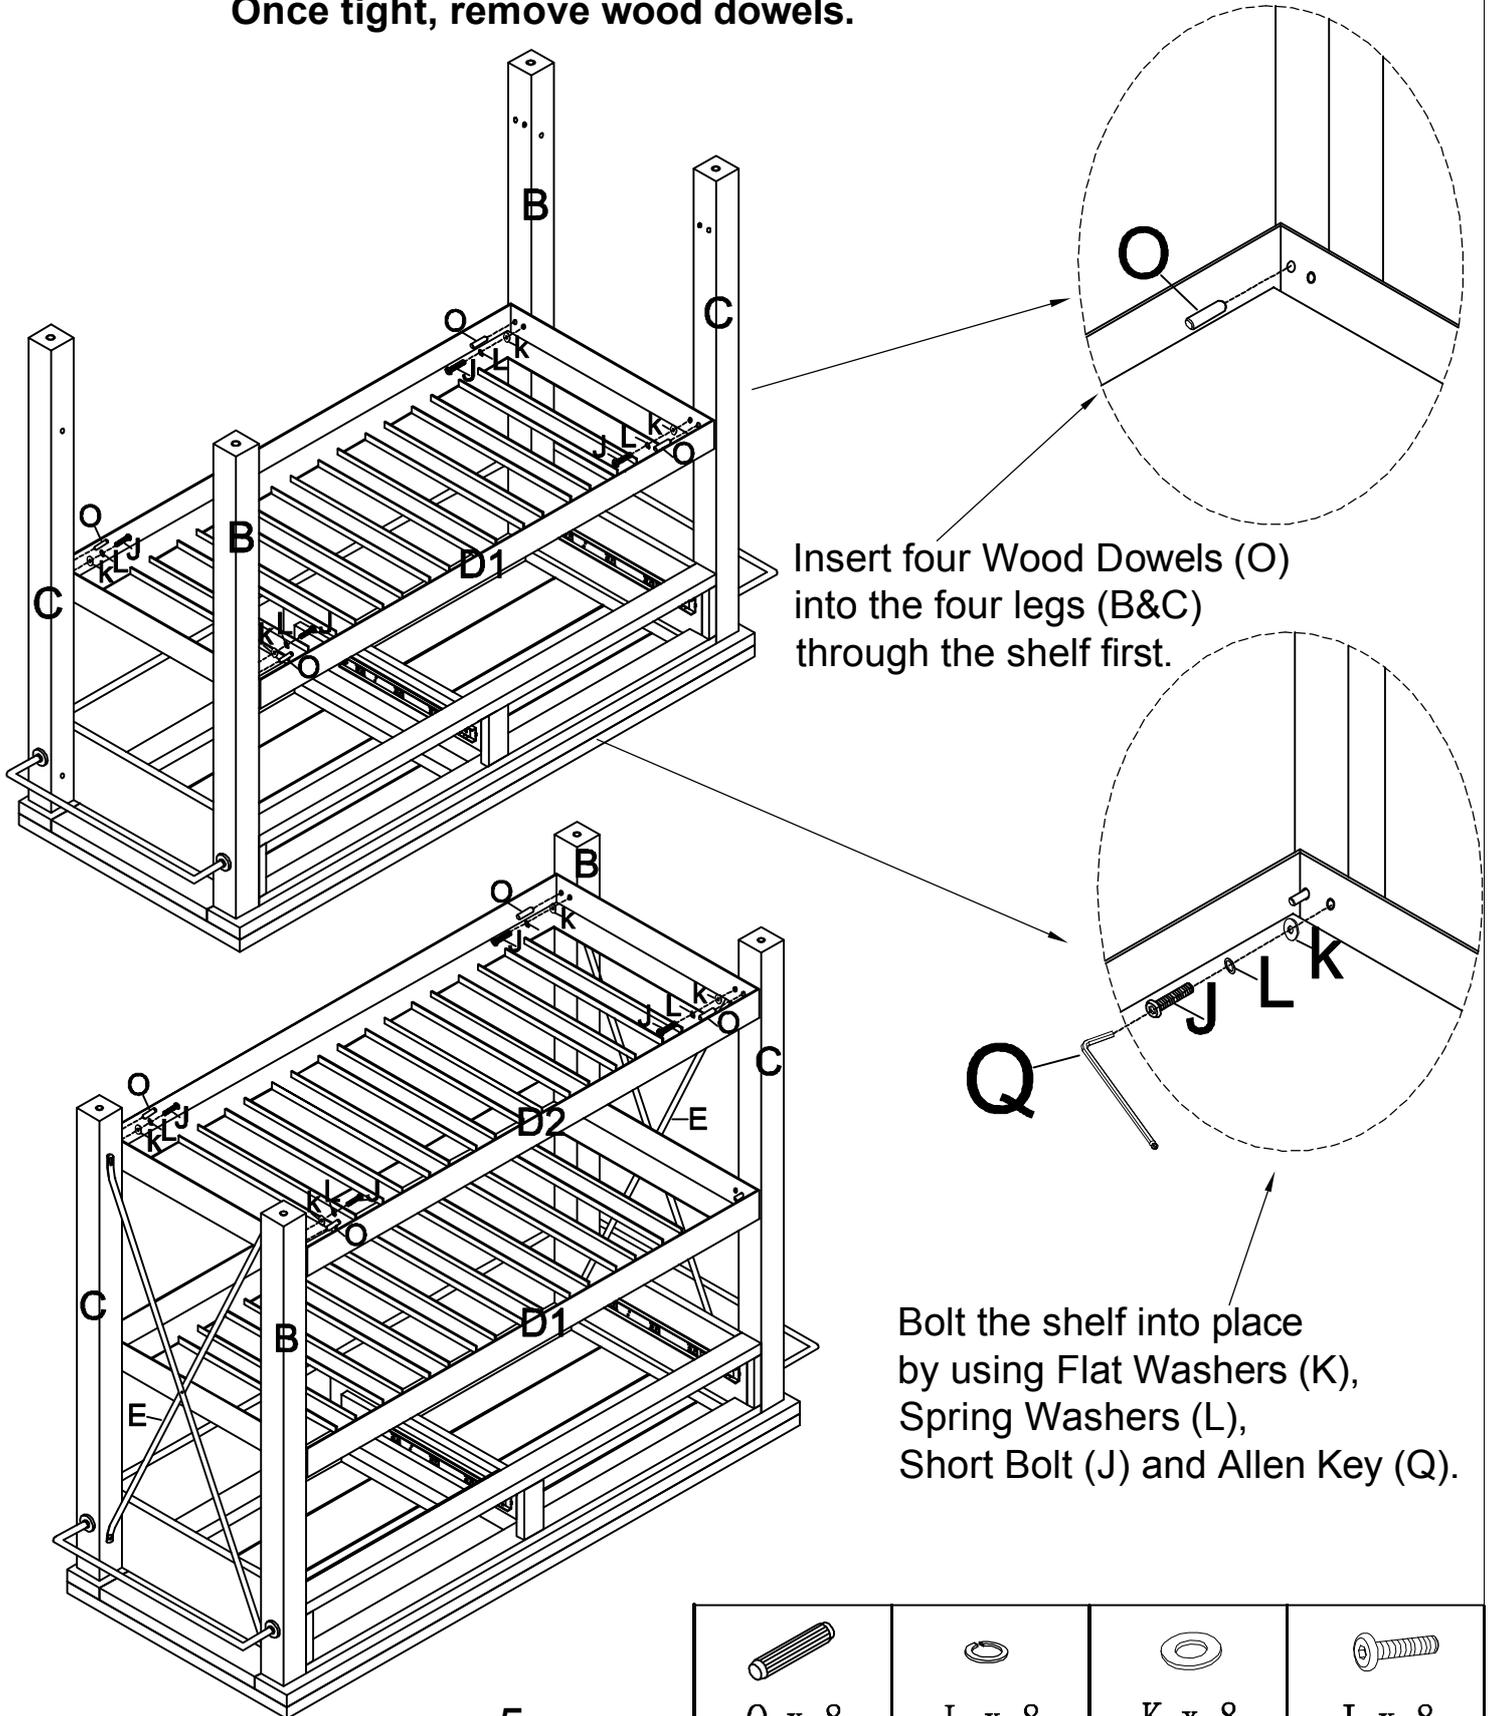

**Step 6.** Attach Rod (E) to Legs (B&C), using short Bolts (J) and Allen Key (Q) .

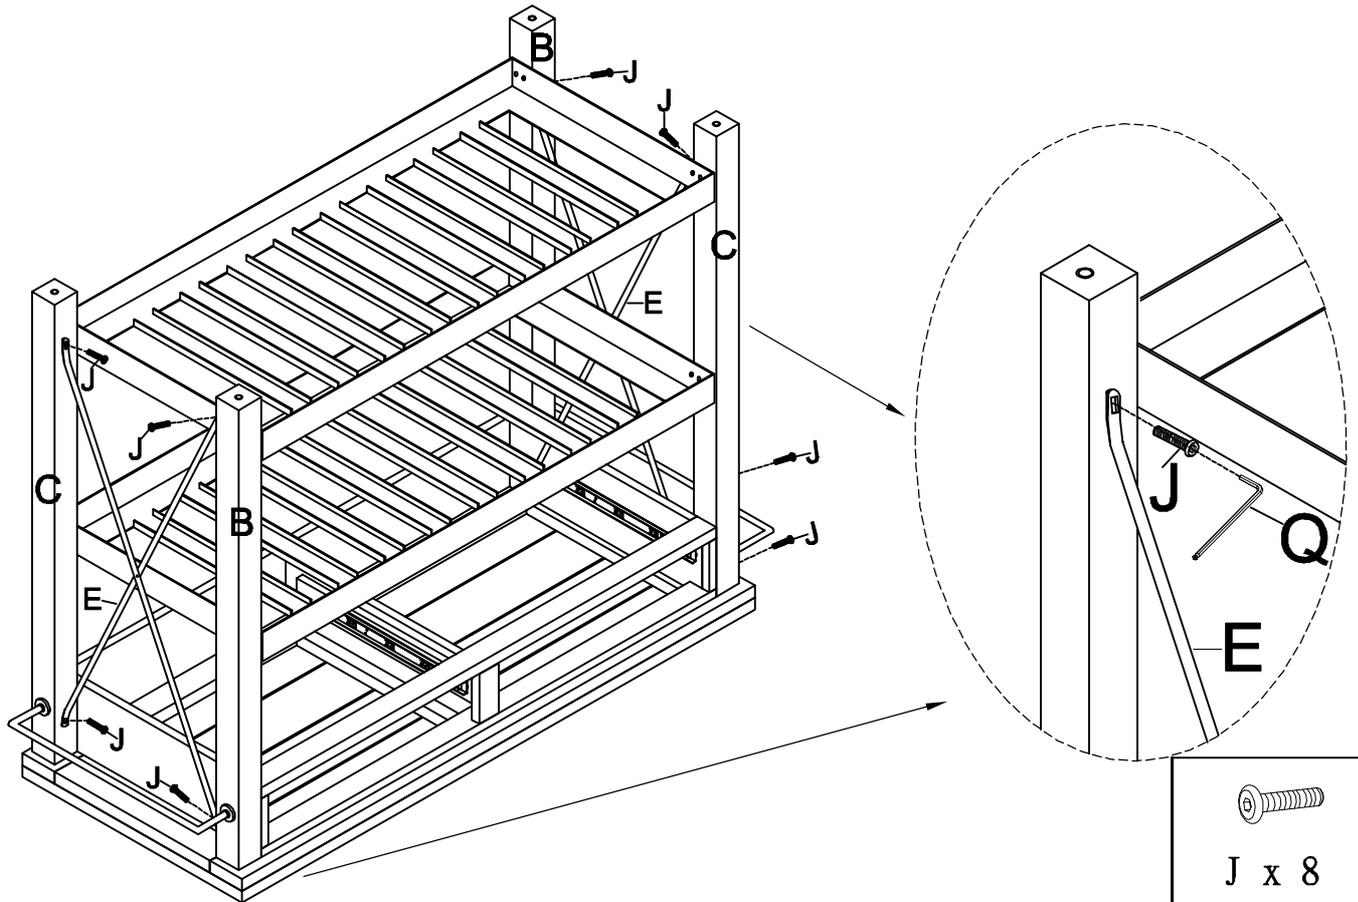


**Step 7.** Attach Locking Casters (G)&Casters (H) using wrench (P) .  
Carefully turn cabinet right side up ,with casters on the floor.

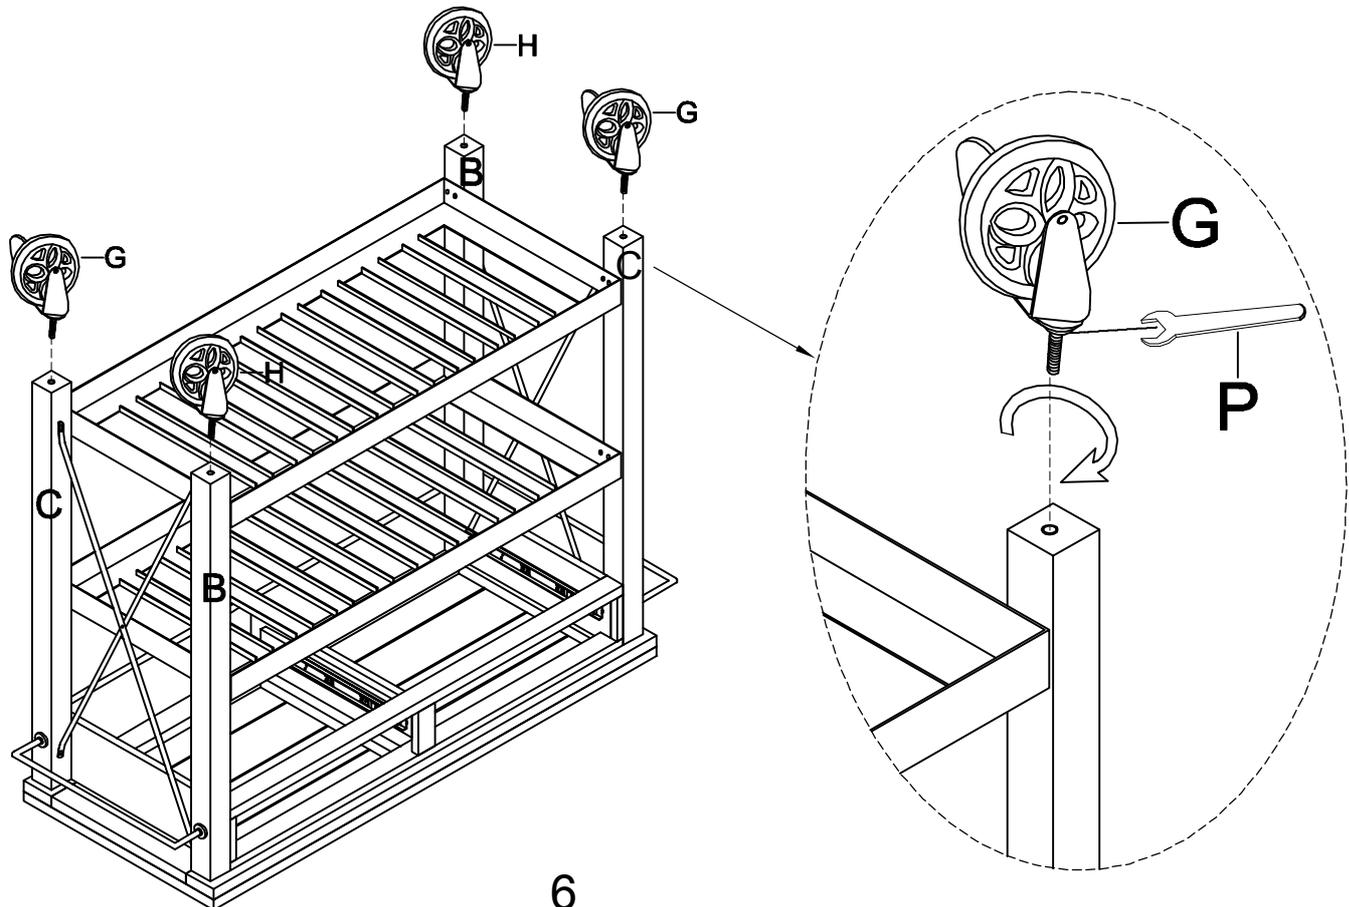

**Step 8.** Attach Drawer Handle Washers (N) and Drawer Handles (M) to drawers using Short Bolts(J) and Allen Key (Q) .

Left drawer has a brand in it .

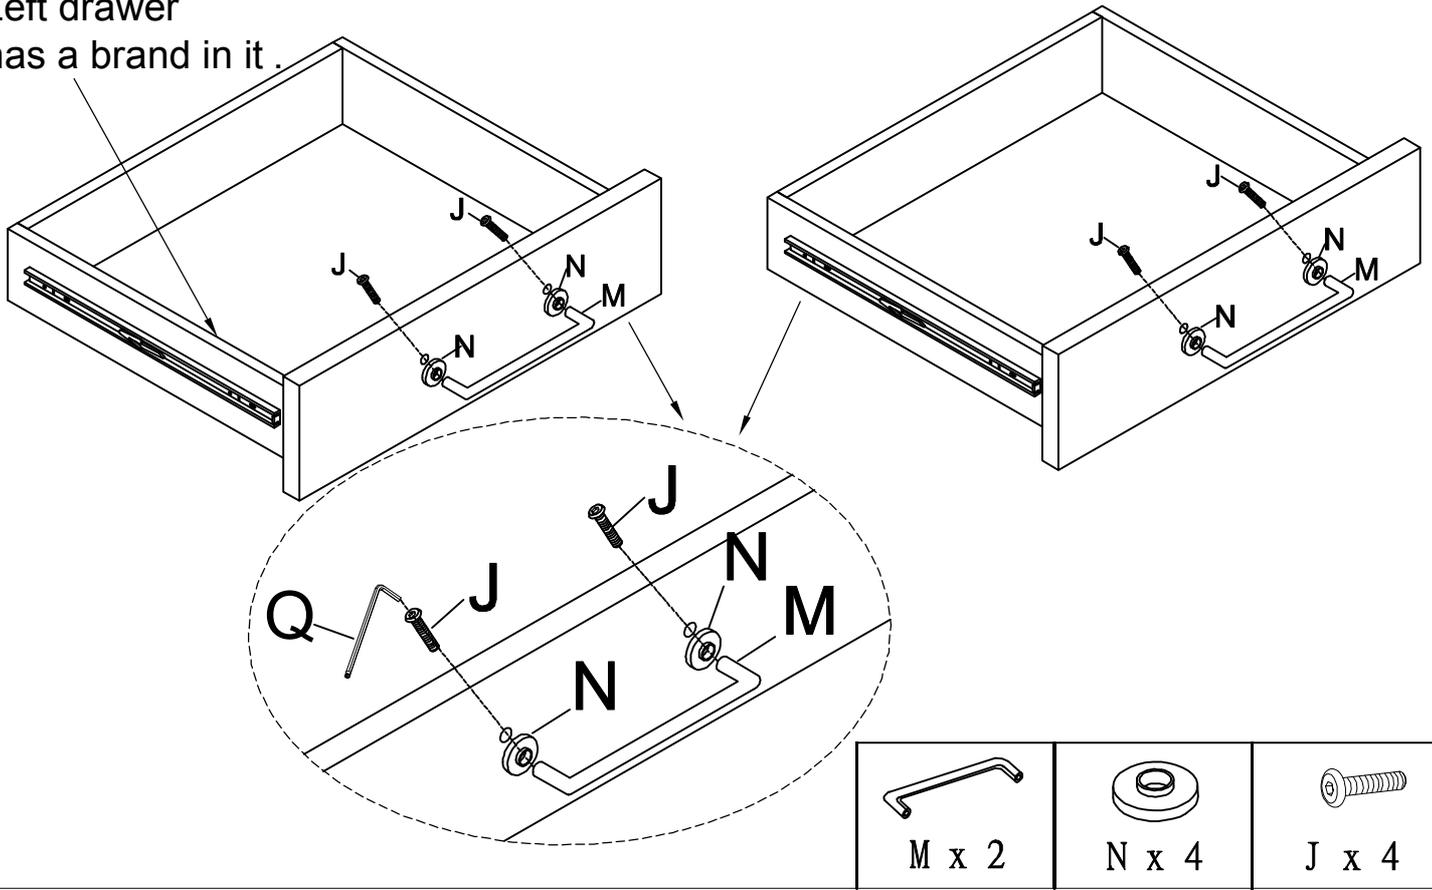

**Step 9.** Insert drawers into cabinet .

