


# **CROSLEY**

---



FURNITURE

## **Bar Stool**

CF500324/CF500330

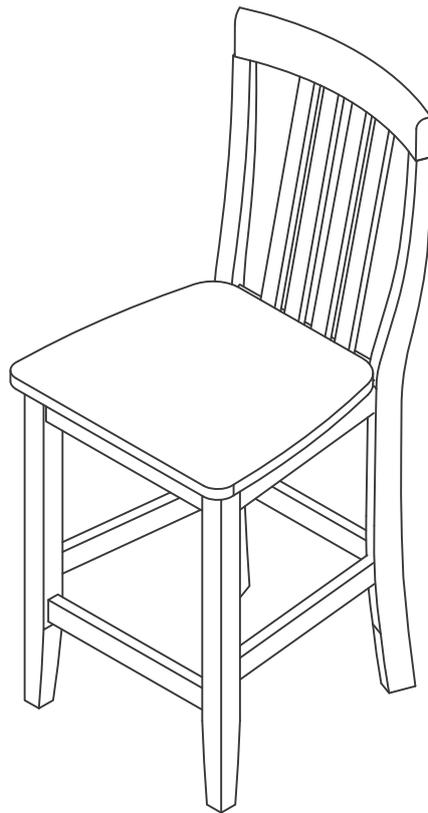

# PART LIST

				
<p>Back Frame 2 PCS</p>	<p>Seat Frame 2 PCS</p>	<p>Front Leg (L &amp; R) 4 PCS</p>	<p>Side Stretcher (L &amp; R) 4 PCS</p>	<p>Front Stretcher 2 PCS</p>

# HARDWARE LIST

 <p>M6 X 80mm</p>	 <p>M6 X 50mm</p>	 <p>M6 X 40mm</p>		
<p>Long Bolt 8 PCS (Extra 2)</p>	<p>Bolt 8 PCS (Extra 2)</p>	<p>Short Bolt 6 PCS (Extra 2)</p>	<p>Spring Washer 22 PCS (Extra 2)</p>	<p>Flat Washer 22 PCS (Extra 2)</p>
	 <p>4 x 38mm</p>			
<p>Allen Wrench 1 PC</p>	<p>Screw 12 PCS</p>			

## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Step 1. Attach seat frame (part B) to back frame (part A) using long bolts (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Do not tighten bolts at this time.

NOTE: Please ensure you are using short bolts (part #3) in center to prevent damage to back frame (part A).

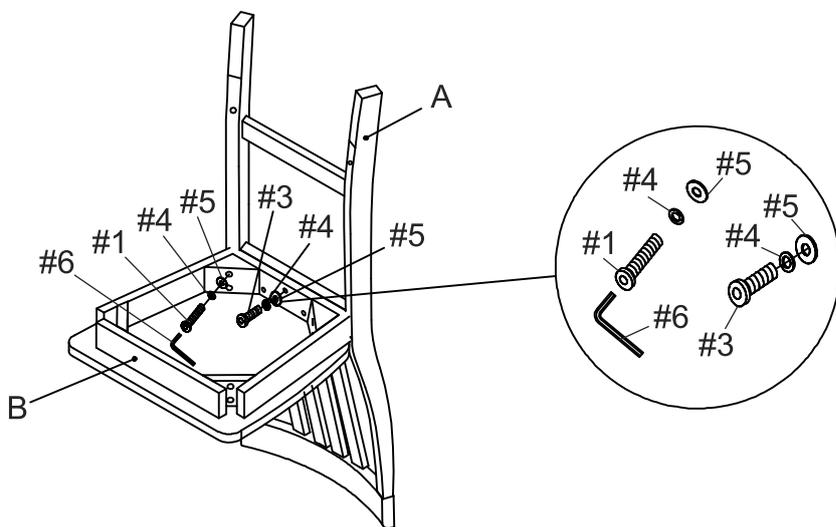


- #1  x 4
- #3  x 3
- #4  x 7
- #5  x 7
- #6  x 1

Step 2. Attach front legs (part C) to seat frame (part B) using bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Do not tighten bolts at this time.

NOTE: The front legs (part C) are marked "R" for right and "L" for left.

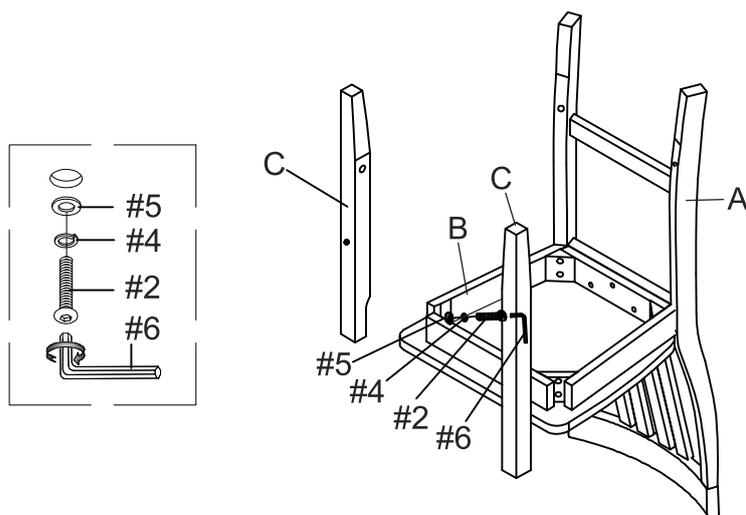


- #2  x 4
- #4  x 4
- #5  x 4
- #6  x 1



Step 3. Insert side stretchers (part D) into assembled unit (parts A & C). Insert front stretcher (part E) into front legs (part C).

NOTE: The side stretchers (part D) are marked "R" for right and "L" for left.

NOTE: If side stretchers (part D) are not flushed with back frame (part A) and front legs (part C), switch the front legs (part C).

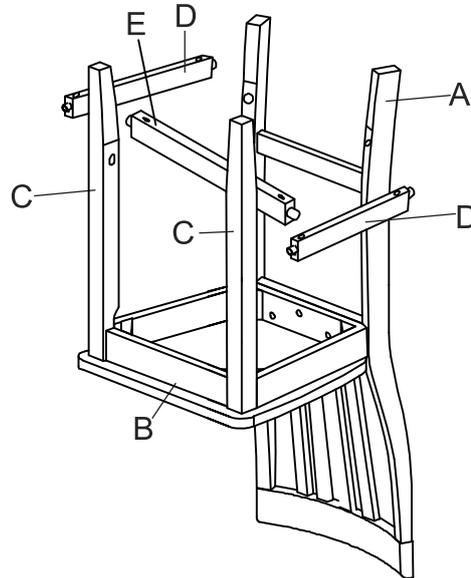


Step 4. Finger-tighten bolts (part #2), do not overtighten. Secure stretchers (parts D & E) using screws (part #7) and phillips head screwdriver.

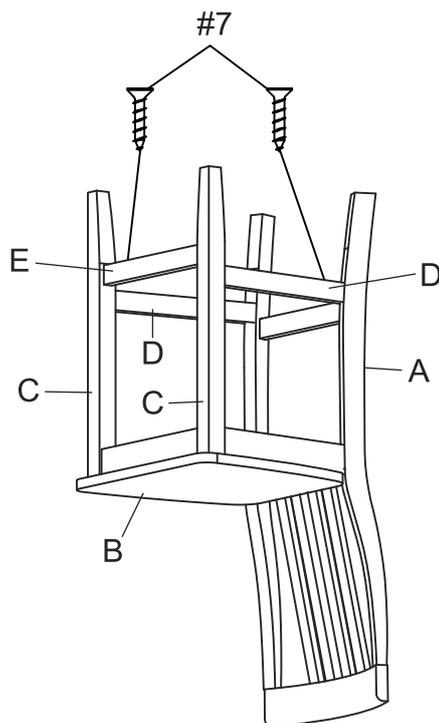

#7  x 6

Step 5. Carefully turn unit upright. Ensure unit is leveled and square then tighten all bolts using allen wrench (part #6). Repeat steps 1-5 for remaining stool.

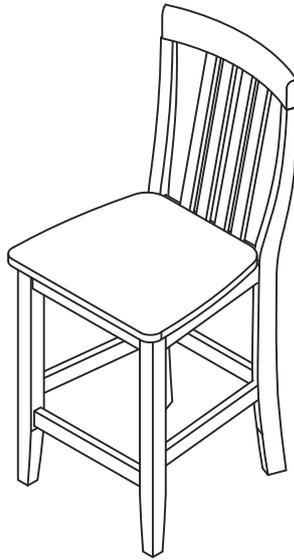

PO#  
MODEL#  
CF500324/CF500330  
MADE IN MALAYSIA